

**MPT400 Voltage/HP Chart**

<b>Voltage</b>	<b>HP Range</b>		
<b>208</b>	<b>5-40</b>	<b>50-75</b>	<b>100-125</b>
	<a href="#"><u>DT400S1</u></a>	<a href="#"><u>DT400S2</u></a>	<a href="#"><u>DT400S3</u></a>
<b>220-240</b>	<b>5-50</b>	<b>60-75</b>	<b>100-125</b>
	<a href="#"><u>DT400S1</u></a>	<a href="#"><u>DT400S2</u></a>	<a href="#"><u>DT400S3</u></a>
<b>380-415</b>	<b>5-75</b>	<b>100-125</b>	<b>150-200</b>
	<a href="#"><u>DT400S1</u></a>	<a href="#"><u>DT400S2</u></a>	<a href="#"><u>DT400S3</u></a>
<b>440-480</b>	<b>5-100</b>	<b>125-150</b>	<b>200-250 * CF</b>
	<a href="#"><u>DT400S1</u></a>	<a href="#"><u>DT400S2</u></a>	<a href="#"><u>DT400S3</u></a>
<b>575-600</b>	<b>5-125</b>	<b>150-200</b>	<b>250-300 * CF</b>
	<a href="#"><u>DT400S1</u></a>	<a href="#"><u>DT400S2</u></a>	<a href="#"><u>DT400S3</u></a>

\* CF = CONTACT FACTORY