

INSTALLATION	P-I-5900		
INSTRUCTIONS FI XTURE TYPE	FIXTURE ASSEMBLY		
PART NO. 510404-3000	PG. 1 0F 2		
DO NOT MODIFY OR ALTER THIS PRODUCT IN ANY WAY, OR			
WHICH IS CONTRARY TO THE INSTRUCTIONS CONTAINED HER IF YOU HAVE ANY QUESTIONS REGARDING THIS PRODUCT OR		PENDANT -	
PLEASE CALL LITECONTROL ENGINEERING AT 781-294-0100		(STEM SHOWN)	
General Notes: Read Instructions completely before starting.			END CAP —
A. Reflector and lamp types available may vary within this fixture family but			
the general installation is the same for all P-I-5900 fixtures. B. Leaving foam wrapping on fixtures until mounting has been completed will		2-378"	
help protect finish from damage.			
		9-	9/16" —
INSTRUCTIONS: 1. Peel back foam wrapping from fixture and lift reflectors		I	I
out by removing (1) sheet metal screw at one end and		CROSS	SECTI ON
loosening (1) screw at other end of reflector. See View "A".			
2. MOUNTING INDIVIDUAL FIXTURES: (Pendants are shipped separately)	SHEET METAL SCREWS	7	PENDANT SHOWN —
A) Locate pendants (stems or aircraft cables) along a straight			
line in ceiling per dimensions shown in SIDE VIEW.		~	
(Refer to pendant instruction sheet).		Z	THREAD COVER ¬
B) Peel back foam wrapping from both ends of fixture. Remove		\sim	
one 5/8" DIA knockout in housing socket plate for wire feed if aircraft		COTTER	
cables are being used to hang fixture (feed may be run inside stems			
when they are used).		END HEADER	
C) Slide grooves on sides of Flat Strap onto end of Housing End Header			
at both ends of fixture. Insert Cotter Pin thru hole in each Strap			
and Header.	7		
D) Slide a Thread Cover onto stems (when used) and thread a locknut onto			
stem or aircraft cable stud. Thread Pendants into Flat Straps; See View "A".			
E) Lift fixture and mount pendants to ceiling. Level fixture up or down			
by threading stems or cable studs into Flat Straps. Tighten locknuts	/		5/8" F
after fixture is level.			
F) Bring wire feed into fixture and make wiring connections.			SOCKET PLA
G) Attach End Cap (shipped separately) by inserting studs on End Cap			
thru holes in End Headers and aligning grooves on Flat Strap			∽FI XTURE
with grooves on End Cap. Secure to fixture end with (2) #8-32 hex nuts.			
GO TO STEP 5 ON PAGE 2.			

LITECONTROL

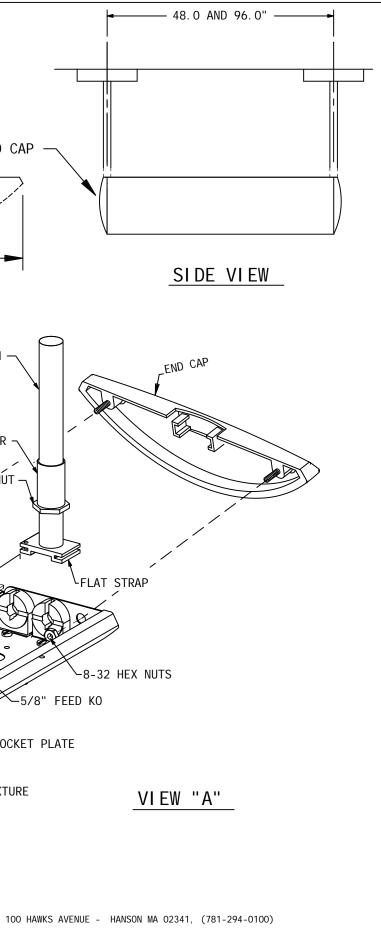

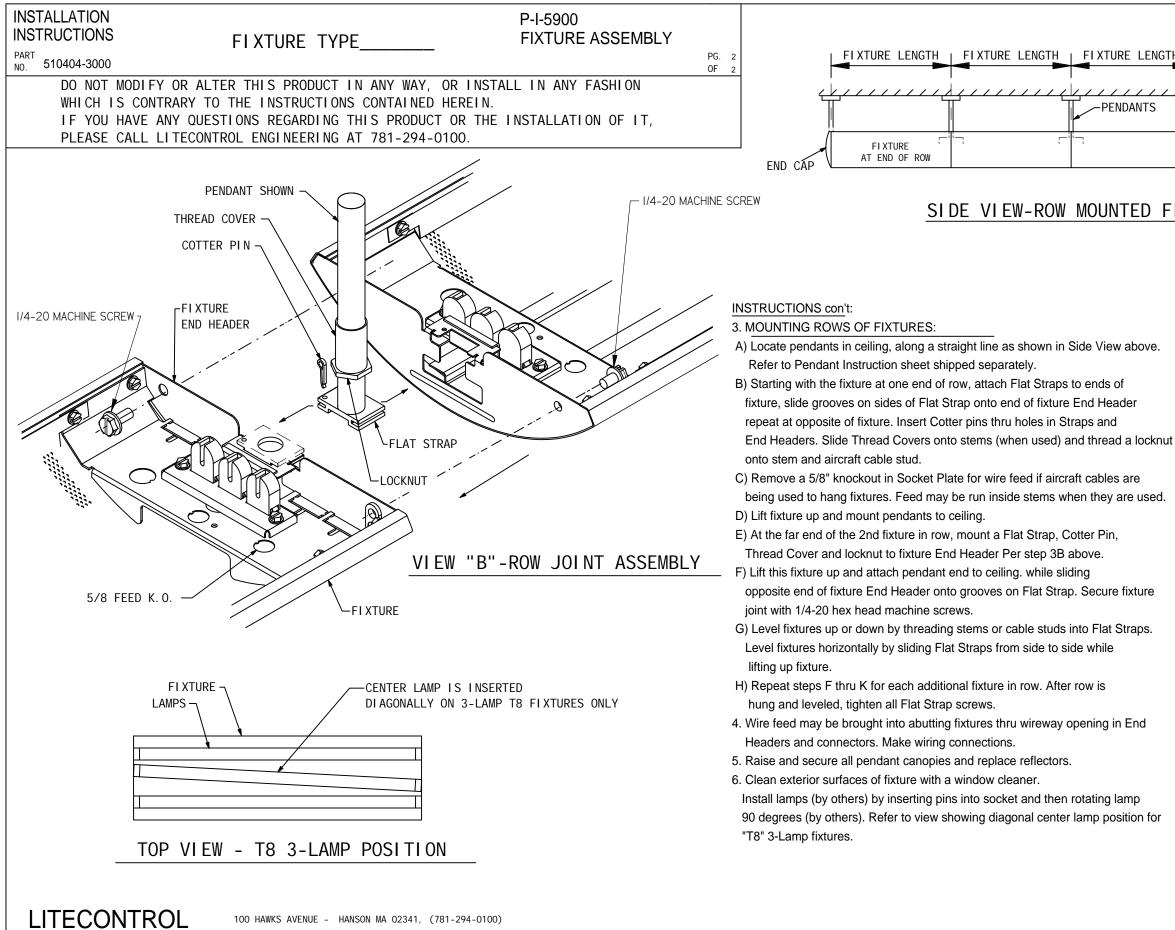

FIXTURE LENGTH	FIXTURE LENGTH	
-PENDANTS		CEI LI NG
¬'	FIXTURE AT END OF ROW)

SIDE VIEW-ROW MOUNTED FIXTURES