

DO NOT MODIFY OR ALTER THIS PRODUCT IN ANY WAY, OR INSTALL IN ANY FASHION WHICH IS CONTRARY TO THE INSTRUCTIONS CONTAINED HEREIN.  
IF YOU HAVE ANY QUESTIONS REGARDING THIS PRODUCT OR THE INSTALLATION OF IT, PLEASE CALL LITECONTROL ENGINEERING AT 781-294-0100.

GENERAL NOTES: Installation is similar for both R-D-4400 and R-D-4500 fixtures.

- A) THIS INSTRUCTION SHEET IS USED WITH THE APPLICABLE FIXTURE INSTRUCTION SHEETS.
- B) END CAPS ARE ATTACHED TO EACH END OF AN INDIVIDUALLY MOUNTED FIXTURE AND AT BOTH ENDS OF A ROW OF FIXTURES.

### INSTRUCTIONS:

Align holes in End Cap with End Header holes in fixture and secure with (2) 1/4-20 x 3/8" long machine screws and hex nuts shipped with end caps.

Make sure bottom edge of end caps are flush with housing side trims before tightening nuts.

