

DO NOT MODIFY OR ALTER THIS PRODUCT IN ANY WAY, OR INSTALL IN ANY FASHION WHICH IS CONTRARY TO THE INSTRUCTIONS CONTAINED HEREIN.
IF YOU HAVE ANY QUESTIONS REGARDING THIS PRODUCT OR THE INSTALLATION OF IT, PLEASE CALL LITECONTROL ENGINEERING AT 781-294-0100.

GENERAL NOTES:

1. DISTRIBUTION SEPARATOR REFLECTORS (DSR) ARE SHIPPED SEPARATELY.
2. EVEN THOUGH PID5900 FIXTURE IS SHOWN, INSTALLATION OF DSR'S IN THE PID9800 FIXTURE IS THE SAME.

INSTRUCTIONS:

1. DSR'S ARE INSTALLED AFTER CENTER LAMP(S) (BY OTHERS) HAVE BEEN INSERTED INTO SOCKETS.
2. POSITION DSR OVER TOP OF CENTER LAMP UNTIL IT SEATS ON TOP OF SOCKET PLATES.
3. INSTALL OUTSIDE LAMPS INTO THEIR SOCKETS.

