

CUSO

SELF-DIAGNOSTICS / SELF-TESTING OPTION

SAVE THESE INSTRUCTIONS

1. When AC power is supplied to fixture, the unit will automatically initiate a self-test and self-diagnostic test as follows:

- (1) Verifies battery disconnection, charger board failure at every 4 seconds.
- (2) One-minute self-testing every month
- (3) 90 minute self-testing on the 12th month of the year after installation

2. Dual Color LED lamp indicator shows the following status:

- (1) Green color: ON: Ready
 Blinking: Testing
- (2) Rec color: (Service Alert)
- (3) Service Alert LED Code (Red color LED lamp indicator)

o	One Blink ON/ pause (4 seconds)	Battery is not connected
oo	Two Blinks ON/pause (4 seconds)	Battery is shorted or battery voltage drops below acceptable level
ooo	Three Blinks ON/pause (4 seconds)	Charger board circuit fault
oooo	Four Blinks ON/pause (4 seconds)	Transfer Function failure
ooooo	Five Blinks ON/pause (4 seconds)	Emergency lamp fault

Caution:

After solving the fault of emergency equipment, Please press test button for 2 seconds without releasing to reset. LED indicator will show green.

3. For manual test, press test button as follows:

Press test button once (within 2 seconds)	1 minute test
Press test button twice (within 2 seconds)	5 minute test
Press test button 3 times (within 2 seconds)	30 minute test
Press test button 4 times (within 2 seconds)	90 minute test