



GAI-TRONICS®
A HUBBELL COMPANY

SP2 Fiber Hazardous-Area Handset/Speaker Amplifier Station

TABLE OF CONTENTS

<i>Confidentiality Notice</i>	1
<i>General Information</i>	1
Product Overview	1
Features	2
Options	2
<i>Installation</i>	3
Important Safety Instructions	3
Enclosure Mounting	4
Cable Entries	5
Open the Station	6
Field Wiring and Configuration	6
Station Ground.....	6
Termination PCBA Connections	7
Main PCBA—600-Ohm Audio I/O with Control.....	11
Fiber Termination Board.....	12
<i>Settings and Adjustments</i>	13
Open the Station	13
Main PCBA Configuration	14
Write Protect (EEPROM) Jumper.....	14
WDOG Enable (Watchdog) Jumper	14
Boot Enable Jumper.....	14
Reset Switch	14
Speaker and 600-ohm Audio Output Volume.....	15
Receiver Volume	15
Group and Station Number Selector Switches	16
Main PCBA Indicators	16
Power LED	16
Heartbeat LED	16
Ethernet Connection LEDs	16
Five Configurable LEDs.....	16
Front Cover Installation	17
<i>Programming</i>	17
<i>Operation</i>	17
Standard Handset Paging	17

Party Line Communication	18
All-Call Button Use	18
Alternate-Page Destination Switch Use	19
<i>Maintenance</i>	20
Troubleshooting	20
Service	21
<i>Reference Documentation</i>	21
<i>Specifications</i>	21
Power	21
Ethernet	21
RTU	22
Audio	22
Mechanical	23
<i>Approvals</i>	23



GAI-TRONICS®
A HUBBELL COMPANY

SP2 Fiber Hazardous-Area Handset/Speaker Amplifier Station

Confidentiality Notice

This manual is provided solely as an installation, operation, and maintenance guide and contains sensitive business and technical information that is confidential and proprietary to GAI-Tronics. GAI-Tronics retains all intellectual property and other rights in or to the information contained herein, and such information may only be used in connection with the operation of your GAI-Tronics product or system. This manual may not be disclosed in any form, in whole or in part, directly or indirectly, to any third party.

This product contains copyrighted computer programs stored in semiconductor memory. These programs are copyrighted by GAI-Tronics Corporation and may not be reproduced in any form without express written permission from GAI-Tronics.

General Information

Product Overview

The GAI-Tronics SP2 station is a modular industrial multicast VoIP (Voice over Internet Protocol) communication system. The hazardous area fiber SP2 configuration is an indoor, multi-party, handset/speaker amplifier station using ac power with RTU control. They are constructed of cast aluminum and are extremely weatherproof and corrosion-resistant. A number of options are available to add to or modify station capabilities (see the [Features](#) and [Options](#) sections below).

SP2 stations connect to an Ethernet network so the loss of a single station will not adversely affect the entire system. Each station requires a 100-Mbps link to a switch or router using fiber optic cable. Isolate SP2 network traffic from other network devices and properly configure network switches and routers for IGMP (Internet Group Management Protocol) snooping and multicast filtering to ensure the quality of SP2 audio. Maximum cable runs between Fiber SP2 stations and network switches are determined by the type of fiber optic cable used in the installation.

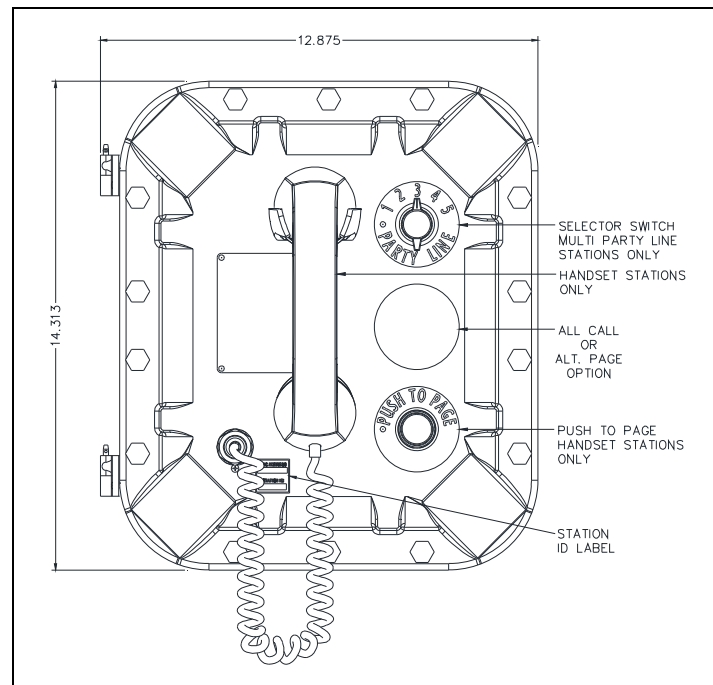


Figure 1. SP2 Station Front View

Features

- flexible and highly configurable SMART technology featuring ALS (ambient level sensing), real time self-diagnostics, and available remote monitoring
- real-time operation providing instantaneous page and party line communication
- no SIP server or conference bridge requirement
- one-way live paging and alarm annunciation over system speakers
- distributed amplifier topology—loss of an individual amplifier will not adversely affect the entire system
- mutual provisioning mode allows easy system deployment
- high efficiency (>80%) Class D paging amplifier provides up to 30 watts of speaker output at 8 ohms
- five configurable multicast channels for full-duplex conference communication with party-line selector switch
- eight configurable multicast channels for receiving page announcements
- one isolated output for beacon activation
- two isolated inputs
- 600-ohm audio I/O with control
- configurable priority scheme allows urgent/emergency pages to override less important pages
- configuration stored in non-volatile memory
- field adjustable volume control for handset earpiece, headset earpiece, and speaker amplifier
- configurable local and nearby speaker mutual muting to prevent acoustic feedback of live pages
- configurable pre-announcement tone
- off-hook and page switch timeout functionality
- configurable virtual zoning ability
- USB interface for field or bench configuration
- universal ac power supply
- durable cast aluminum enclosure

Options

All SP2 station options are factory installed.



- 24 V dc power supply
- speaker amplifier only (no handset)
- five configurable multicast channels for alternate page destinations with page line selector switch
- All-Call push button for secondary page destination
- PVC or Hytrel[®] handset cords in 6-, 15-, or 25-foot lengths
- conformal coating for PCBA



Installation



Important Safety Instructions

- **Read, follow, and retain instructions**—Read and follow all safety and operating instructions before installing or operating the unit. Retain instructions for future reference.
- **Heed warnings**—Adhere to all warnings on the unit and in the operating instructions.
- **Attachments**—Do not use attachments not recommended by the product manufacturer, as they may cause hazards.
- **Servicing**—Do not attempt to service this unit. Opening or removing covers may expose dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

Specific Conditions of Use: Flameproof joints are not to be repaired in the field. If the flame path is damaged, the enclosure is to be removed from service and replaced with a new properly working enclosure. The screws used for the body to cover must have a yield stress equal to or greater than 1100 MPa.



 **ATTENTION**  —Install equipment without modification and according to all applicable local, national, and international electrical codes. North America—Consult the National Electrical Code (NFPA 70), Canadian Standards Association (CSA 22.1), and local codes for specific requirements regarding your installation. Install Class 2 circuit wiring in accordance with the NEC.

 **WARNING**  —Do not install this equipment in hazardous areas other than those indicated in the Approvals section of this manual. Such installation may cause a safety hazard and consequent injury or property damage.

 **WARNING**  —*In 24 V dc systems:* Do **NOT** operate this equipment from a battery charger with the batteries disconnected. Most 24 V dc battery chargers have an unloaded output of 35 to 45 volts that can quickly damage equipment designed for 24 volts nominal. Do not allow the maximum battery voltage to exceed the maximum specified input voltage.

 **WARNING**  —**Do not disconnect equipment while energized.**
Ensure proper grounding to protective earthing.

Only trained, qualified, and competent personnel must install these enclosures. Installation must comply with state and national regulations, as well as safety practices for this type of equipment. Mount the enclosure on a flat surface that provides proper clearance, rigidity, and strength to support the enclosure and all contained devices. The enclosures have factory-installed hinges. Mount the enclosures with hinges on the left.

 **WARNING**  —**Do not** mount the enclosure with hinges on the top or bottom side.

Enclosure Mounting

The mounting surface must be able to support the weight of the aluminum enclosure (see the Specifications section).

Securely fasten the enclosure to the mounting location using 3/8-inch (10mm) diameter steel mounting bolts and washers, or washer head bolts.

- All four mounting feet must be securely fastened to the mounting surface.
- Use stainless steel hardware for outdoor applications.
- The suggested mounting height for all station enclosures is 48 inches (1219 mm) to the bottom of the enclosure.

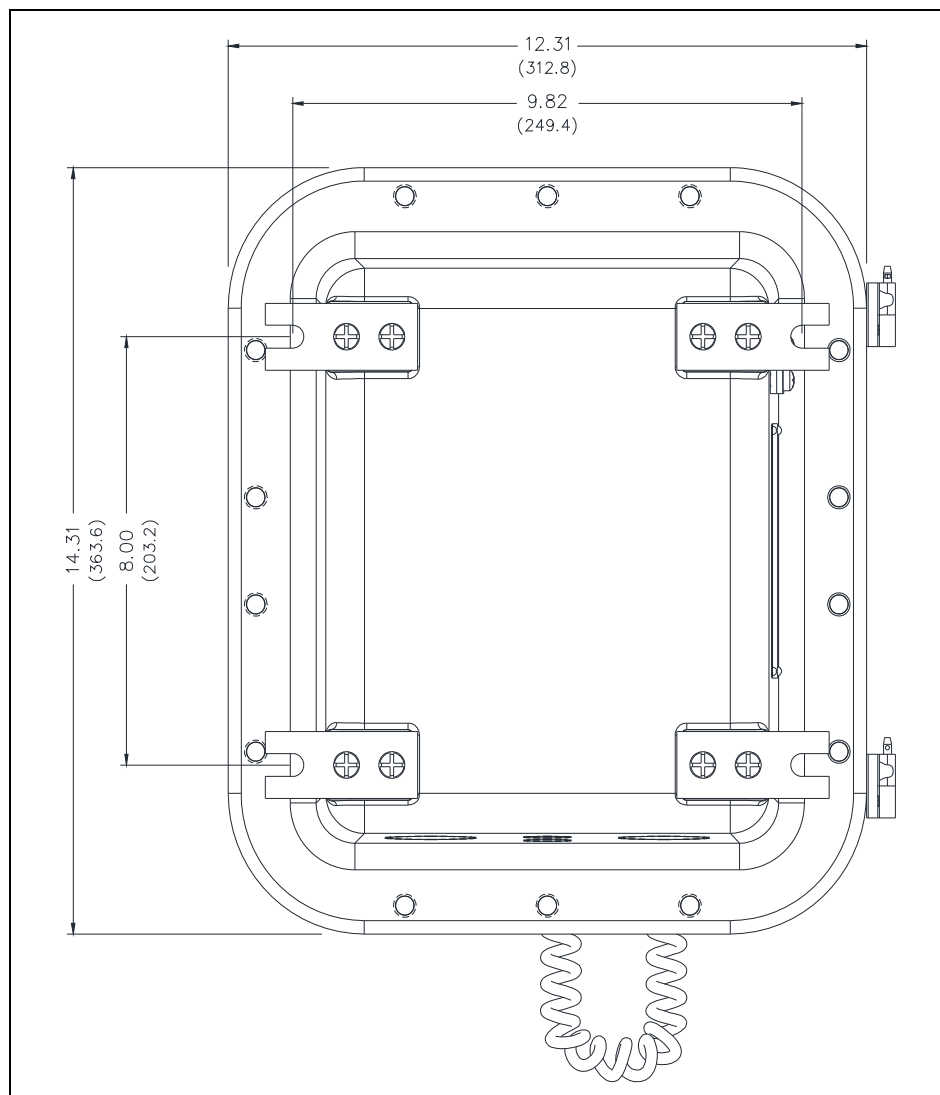


Figure 2. Enclosure Mounting Details

NOTE: Refer to the Killark installation, operation, and maintenance data sheet enclosed with the unit for additional information.

Cable Entries

The enclosure is supplied with standard NPT conduit (see Figure 3) or metric cable gland entries (see Figure 4).

- All NPT/metric cable entry devices and blanking elements shall be certified for Zone 1 flameproof applications with an IP66 rating suitable for conditions of use.
- Seal all unused openings with proper explosion-proof fittings with Type 4X rating per local standards.
- Use field wiring suitable for the ambient temperature.

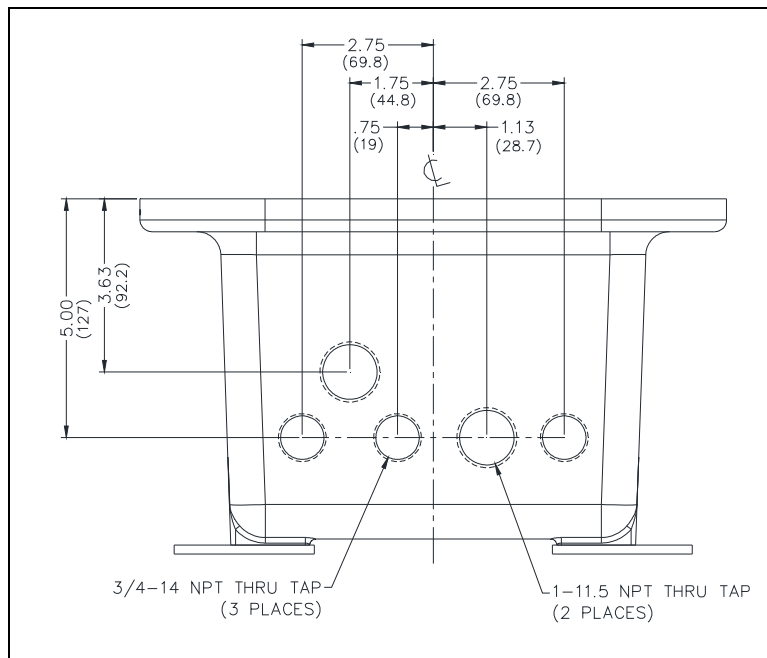


Figure 3. Standard NPT Conduit Entries

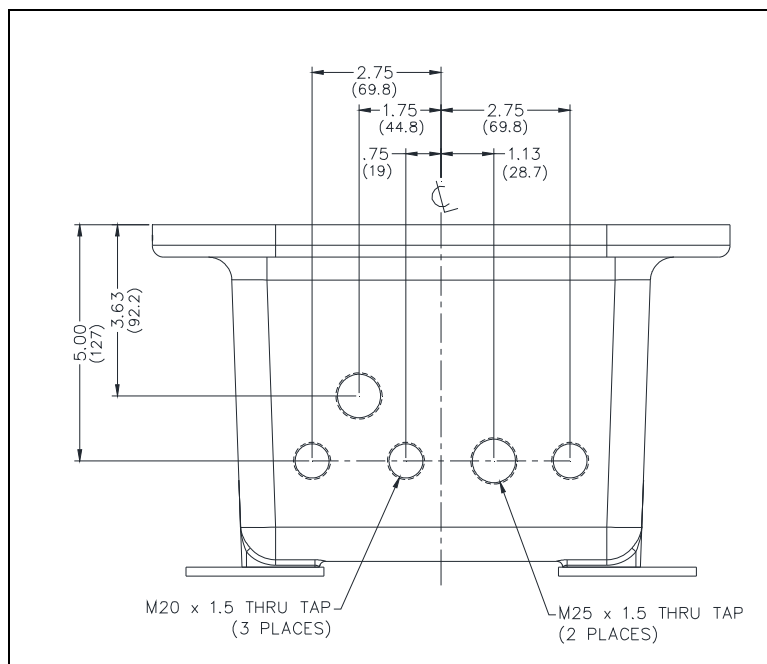


Figure 4. Standard Metric Cable Gland Entries

Open the Station

Complete the following steps to open the station:

1. Remove all cover bolts from the enclosure.
2. Swing the front door open to access the internal PCBAs.
3. Keep the wiring and ribbon cables connected.

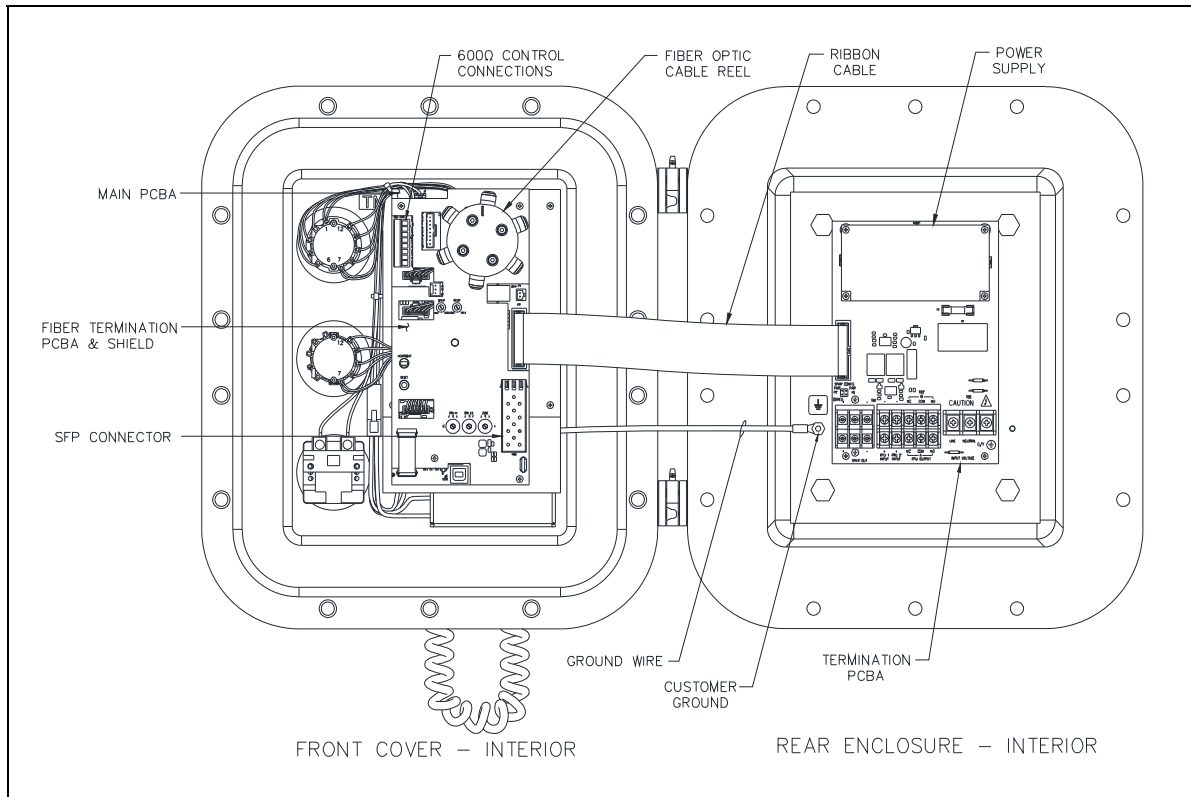


Figure 5. Fiber Hazardous Area SP2 Station—Interior View

Field Wiring and Configuration

The hazardous area fiber SP2 station provides terminal blocks on the termination PCBA, located in the rear of the enclosure, for field wiring the power, speaker, and RTU connections. The main PCBA, mounted to the back of the front panel, provides the 600-ohm audio connection. The fiber termination board, mounted on top of the main PCBA, provides fiber optic cable termination for the Ethernet SFP transceiver.

NOTE: Consult the National Electrical Code (NFPA 70), Canadian Standards Association (CSA 22.1), and local codes for the specific requirements regarding your installation. Install all equipment without modification and according to the local and national codes. Class 2 circuit wiring must be performed in accordance with the NEC.

Station Ground

The station enclosure must have an earth ground connection:

1. Install a #6 ring lug on the ground conductor.
2. Secure it to the ground terminal, located at the back of the rear enclosure on the left side (see [Figure 5](#)).

Termination PCBA Connections

Install all connections as indicated in the following sections:

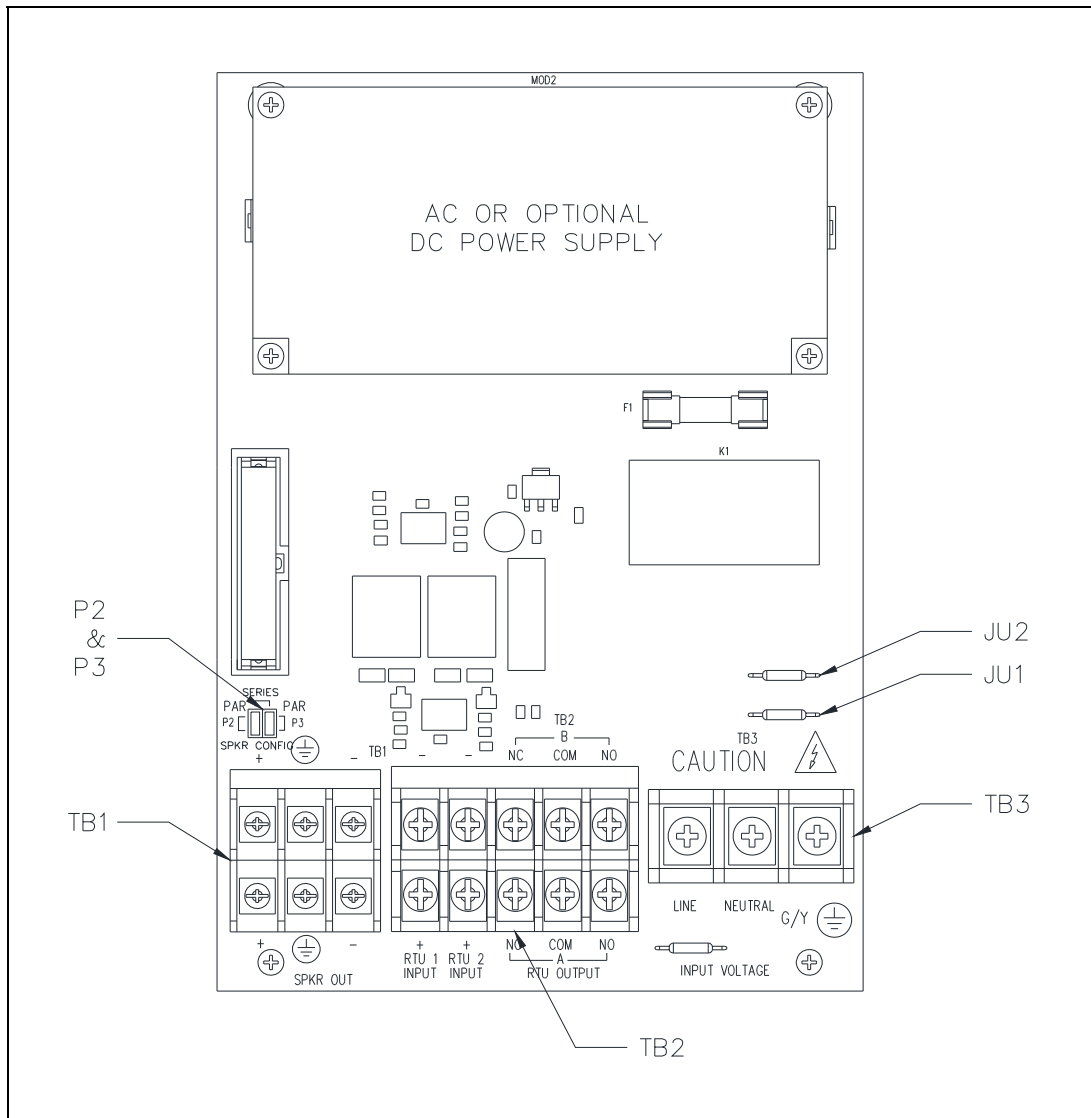


Figure 6. SP2 Standard Termination PCBA

Direct Speaker Connection and Jumper Settings

Terminate the station’s 8 or 16-ohm remote speaker(s) to terminal block TB1.

1. Pull the speaker cable(s) into the enclosure.
2. Install spade lugs on the wires.
3. Connect the speaker wires to terminal block TB1 (see Table 1).
4. Torque the terminal block screws to 8–10 in·lb (0.90–1.13 N·m).
5. Configure the speaker jumpers; P2 and P3, for the appropriate impedance for use with 8-ohm or 16-ohm speakers (see Figure 6 and Figure 7).

A redundant set of terminals enables connection of a second speaker branch connected in series or parallel with the primary speaker.

Table 1. Direct Speaker Connections—TB1

Pin	Label	Description
TB1-1	+	Parallel/SPEAKER A Series—Output
TB1-2	⊥	Earth Reference
TB1-3	-	Parallel/SPEAKER A Series—Output
TB1-4	+	Parallel/SPEAKER B Series—Output
TB1-5	⊥	Earth Reference
TB1-6	-	Parallel/SPEAKER B Series—Output

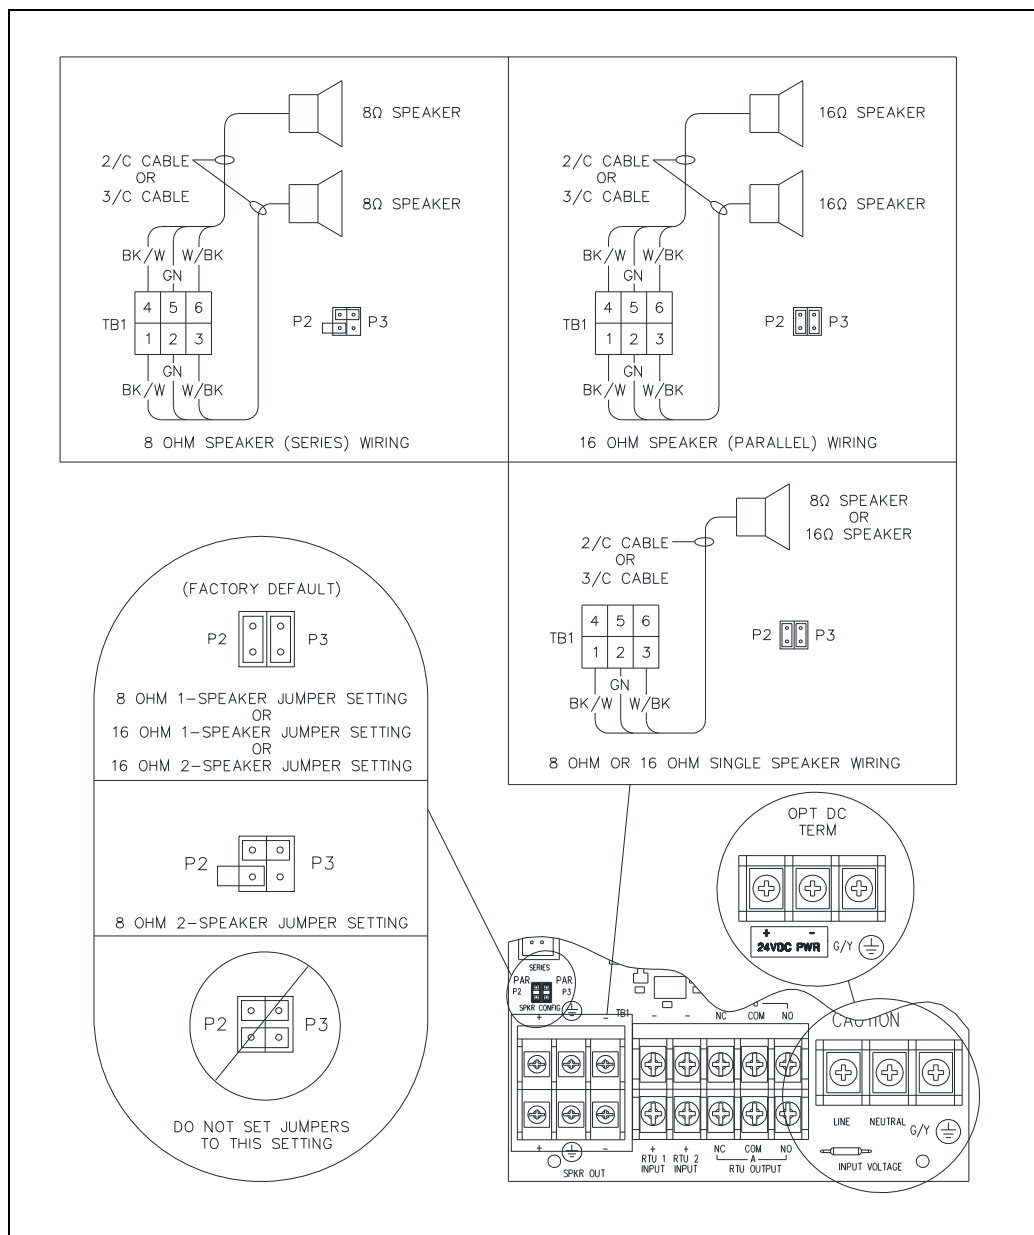


Figure 7. 8/16-ohm Speaker Impedance Configuration and AC/DC Termination at TB3

RTU Inputs

The standard termination PCBA contains two auxiliary RTU inputs. Terminate the inputs at terminal block TB2 (see Figure 6).

1. Pull the RTU input cable(s) into the enclosure.
2. Install spade lugs on the wires.
3. Connect the RTU input wires to terminal block TB2 (see Table 2).
4. Torque the terminal block screws to 8–10 in·lb (0.90–1.13 N·m).
5. Install end-of-line resistors as shown to enable RTU input-cable monitoring (see Figure 8).

Table 2. RTU Input Termination—TB2

Pin	Label	Function
TB2-1	+ RTU 1 INPUT	RTU Input 1 +
TB2-2	-	RTU Input 1 -
TB2-3	+ RTU 2 INPUT	RTU Input 2 +
TB2-4	-	RTU Input 2 -

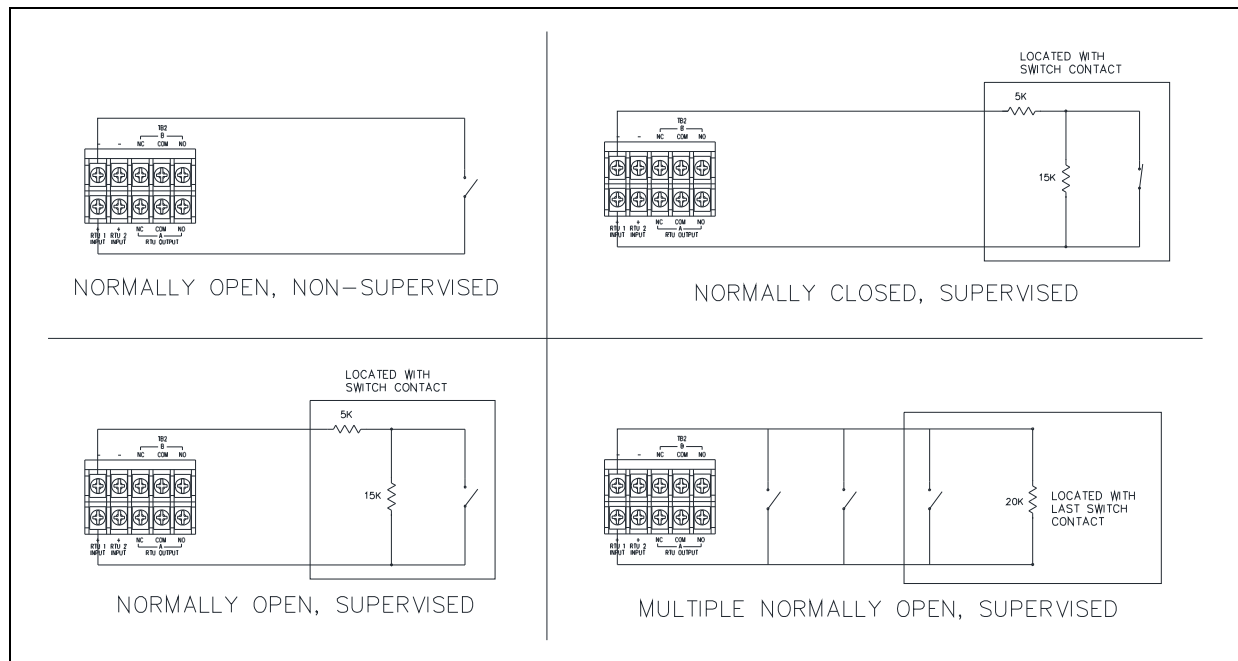


Figure 8. RTU Input Wiring Configurations for Cable Monitoring

RTU Output

Two form C contacts are provided to power a beacon (see Figure 9). Terminate the output at terminal block TB2 (see Figure 6). Remove jumpers JU1 and JU2 to configure the output as a dry contact.

⚠ WARNING ⚠ —Line voltage is present at the NO contact until JU1 and JU2 are removed.

1. Pull the RTU output cable into the enclosure.
2. Install spade lugs on the wires.
3. Connect the RTU output wires to terminal block TB2 (see Table 3).
4. Torque the terminal block screws to 8–10 in·lb (0.90–1.13 N·m).

For beacon cable monitoring:

5. Install a 20-kilohm 10-watt resistor across the terminals of the beacon (see Figure 9).
6. Install jumpers at terminal block TB2 (see Figure 9) to enable cable monitoring.

NOTE: Using an RTU input to monitor the beacon wiring makes it unavailable for other functions.

Table 3. RTU Output Contacts—TB2

Pin	Label	Description
TB2-5	NC A	Normally Closed Output A
TB2-6	NC B	Normally Closed Output B
TB2-7	COM A	Common Output A
TB2-8	COM B	Common Output B
TB2-9	NO A	Normally Open Output A
TB2-10	NO B	Normally Open Output B

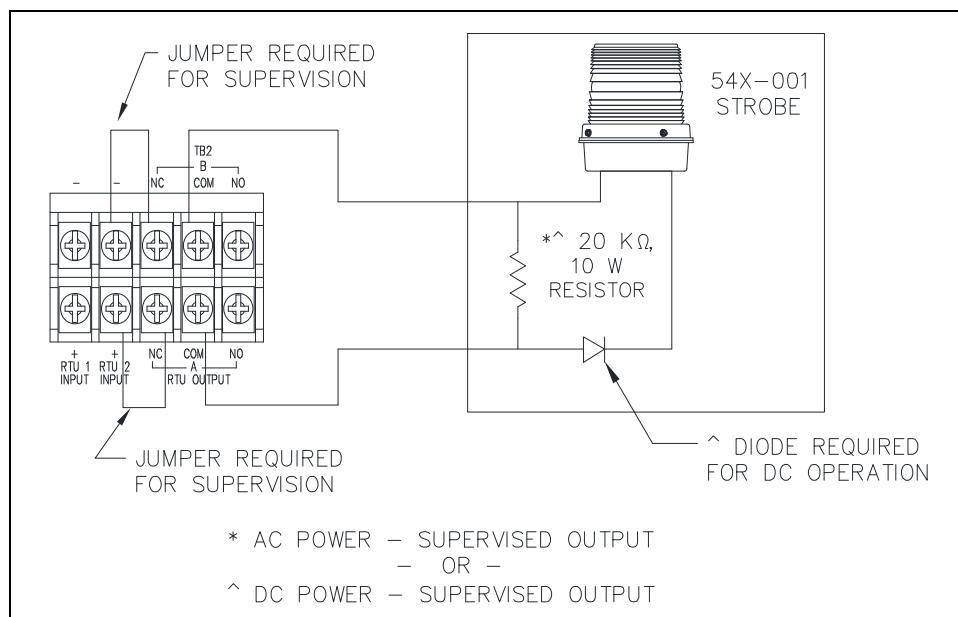


Figure 9. Supervised Output Wiring—TB2

Power

The ac or optional dc power supply is on the termination PCBA. Connect the local power source to terminal block TB3 (see [Figure 6](#) and [Figure 7](#)):

1. Pull the cable from the power source into the enclosure.
2. Install spade lugs on the wires.
3. Connect the conductors from the ac (see [Table 4](#)) or dc (see [Table 5](#)) power source to the appropriate terminals at terminal block TB3.
4. Torque the terminal block screws to 8–10 in·lb (0.90–1.13 N·m).

Table 4. AC Power—TB3

Pin	Label	Description
TB3-1	LINE	Positive
TB3-2	NEUTRAL	Negative
TB3-3	⊥	Earth ground

Table 5. DC Power—TB3

Pin	Label	Description
TB3-1	+	Positive
TB3-2	-	Negative
TB3-3		No Connection

Main PCBA—600-Ohm Audio I/O with Control

SP2 stations have a 600-ohm audio input to broadcast line level audio over the page line. The station broadcasts the 600-ohm input audio stream upon closure of a normally open dry contact input control. SP2 stations also provide a 600-ohm audio output for sending page line audio to a remote audio amplifier. A solid-state dry contact relay controls when the remote amplifier plays the audio.

1. Pull the cable for the 600-ohm audio I/O into the enclosure.
2. Install ferrules onto the wire ends.
3. Connect the 600-ohm audio wires to the pluggable terminal block for the 600-ohm audio I/O connection (see [Table 6](#) and [Figure 10](#)).
4. Connect the pluggable terminal block to terminal block receptacle TB1.

Table 6. 600-Ohm Audio I/O Interface Connections—TB1

Pin	Label	Description
TB1-1	IN CT1+	Input Control Positive
TB1-2	IN CT1-	Input Control Negative
TB1-3	IN AUD+	Input Audio Positive
TB1-4	IN AUD-	Input Audio Negative
TB1-5	OUT AUD+	Output Audio Positive
TB1-6	OUT AUD-	Output Audio Negative
TB1-7	OUT CT1+	Output Control Positive
TB1-8	OUT CT1-	Output Control Negative

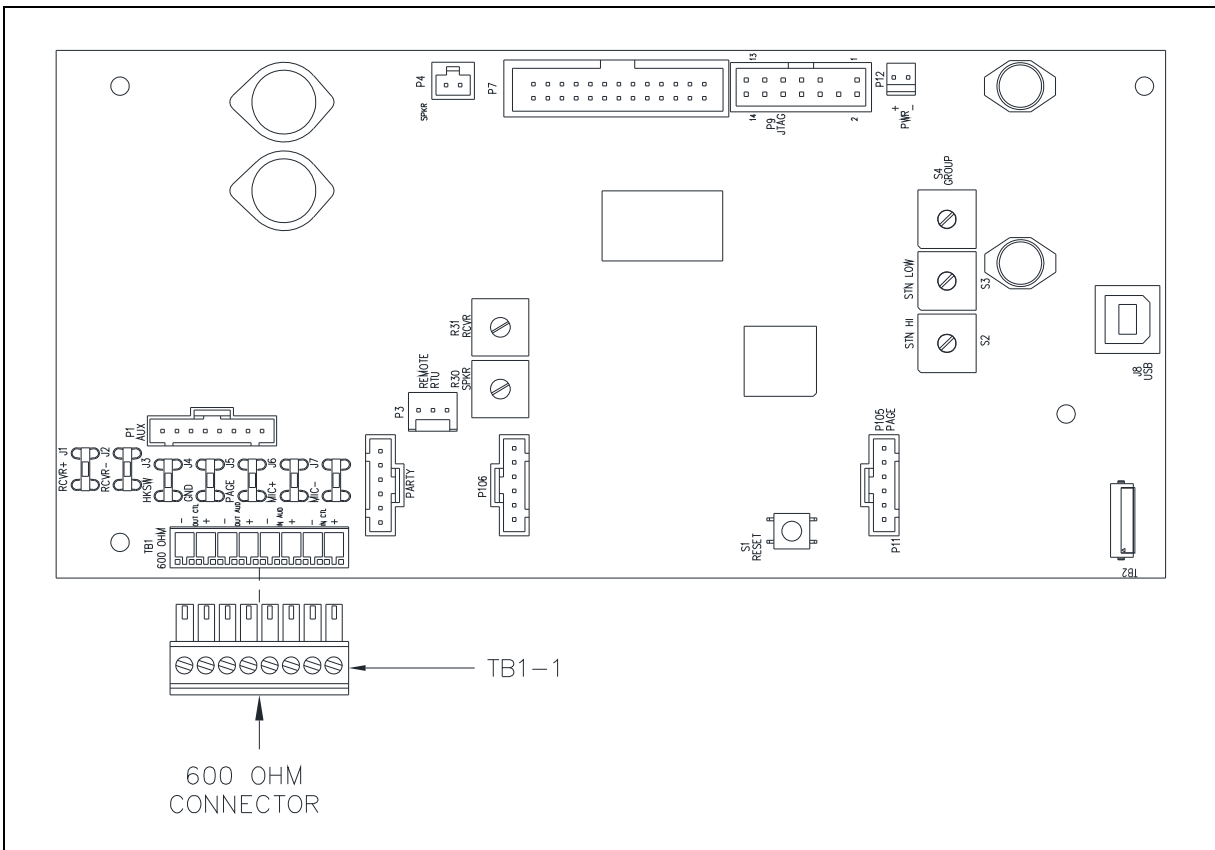


Figure 10. SP2 Main PCBA (Fiber)

Fiber Termination Board

The fiber termination PCBA (see Figure 11) is mounted on top of the main PCBA. Exact fiber termination is installation dependent because the fiber optic cable and SFP (Small Form-factor Pluggable) transceivers used in SP2 system installations are customer supplied.

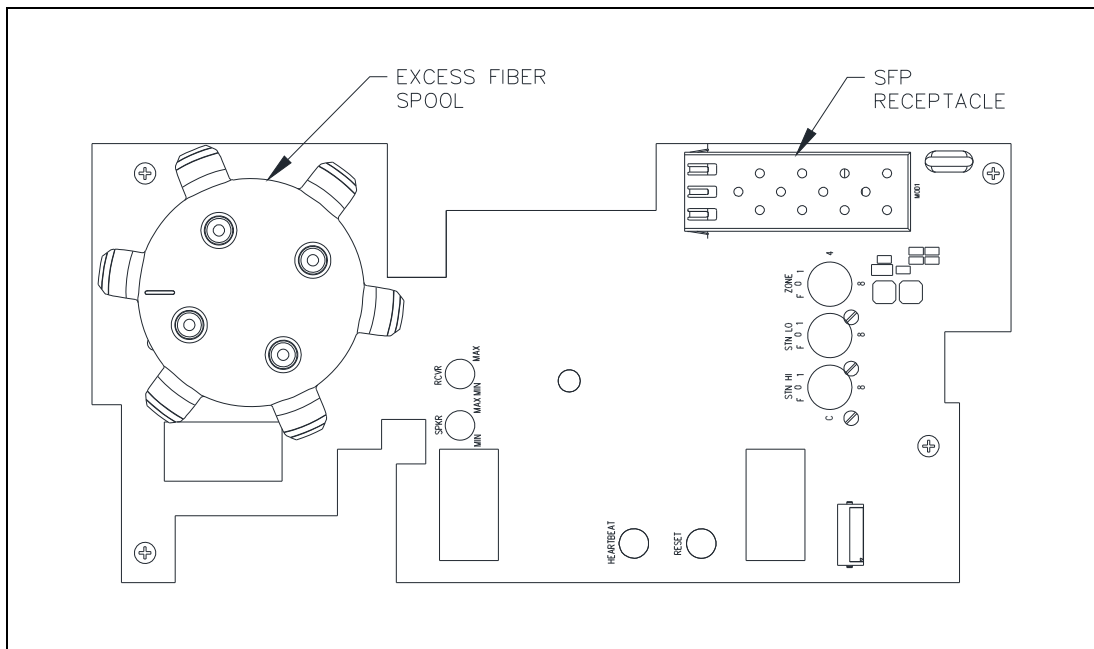


Figure 11. Fiber Termination PCBA

Generic fiber termination instructions:

1. Insert the SFP transceiver into the SFP receptacle (see [Figure 11](#) and [Figure 12](#)).
2. Route the terminated fiber with the appropriate connectors into the station and over to the Fiber termination PCBA.
3. Wrap the fiber cable around the Excess Fiber Spool.
4. Plug the fiber connector into the SFP (see [Figure 12](#)).

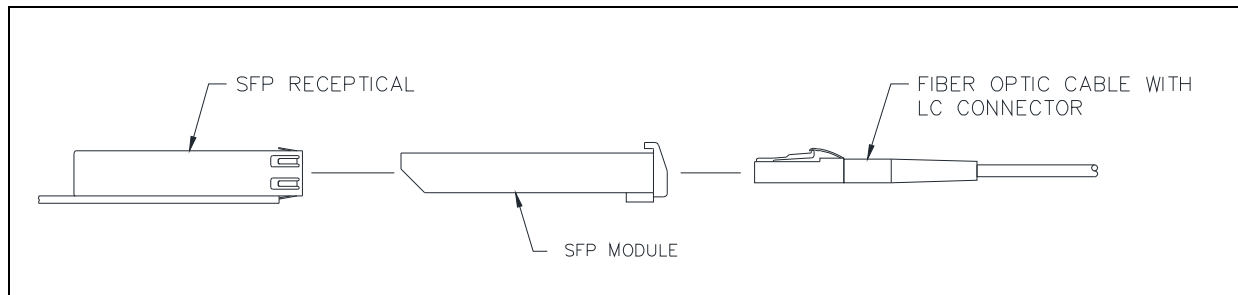


Figure 12. SFP Transceiver Insertion and Fiber Plug-in

Settings and Adjustments

Open the Station

Complete the following steps to open the station:

1. Remove all cover bolts from the enclosure.
2. Swing the front door open to access the internal PCBAs.
3. Keep the wiring and ribbon cables connected.

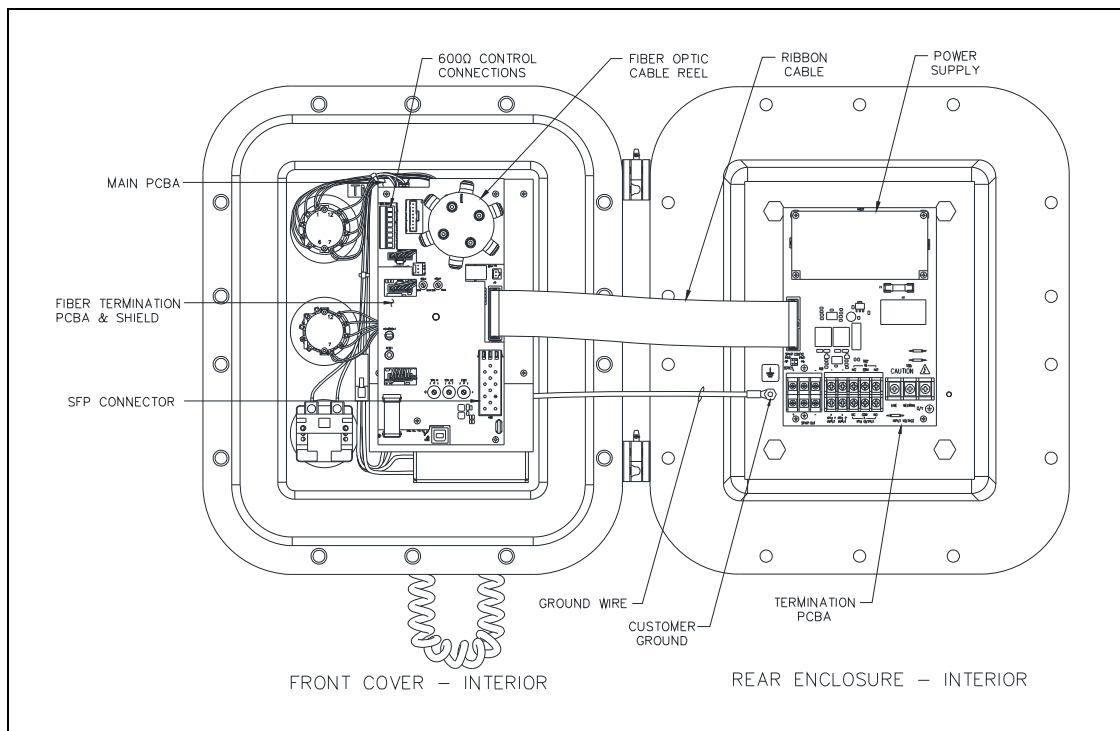


Figure 13. Hazardous Area Fiber SP2 Station—Interior View

Main PCBA Configuration

Refer to [Figure 14](#) for switch, jumper, and LED locations on the main PCBA.

Write Protect (EEPROM) Jumper

NOTE: Do not change this jumper in the field.

WDOG Enable (Watchdog) Jumper

Watchdog jumper, P11, enables a watchdog feature for software purposes. Do not adjust this jumper in the field. The default setting is shorted.

Boot Enable Jumper

Jumper P8—BOOT, is for development purposes only. Do not adjust this jumper in the field. The default setting for this jumper is open.

Reset Switch

Reset switch S1 reboots the station to its initial state. All configuration settings remain programmed.

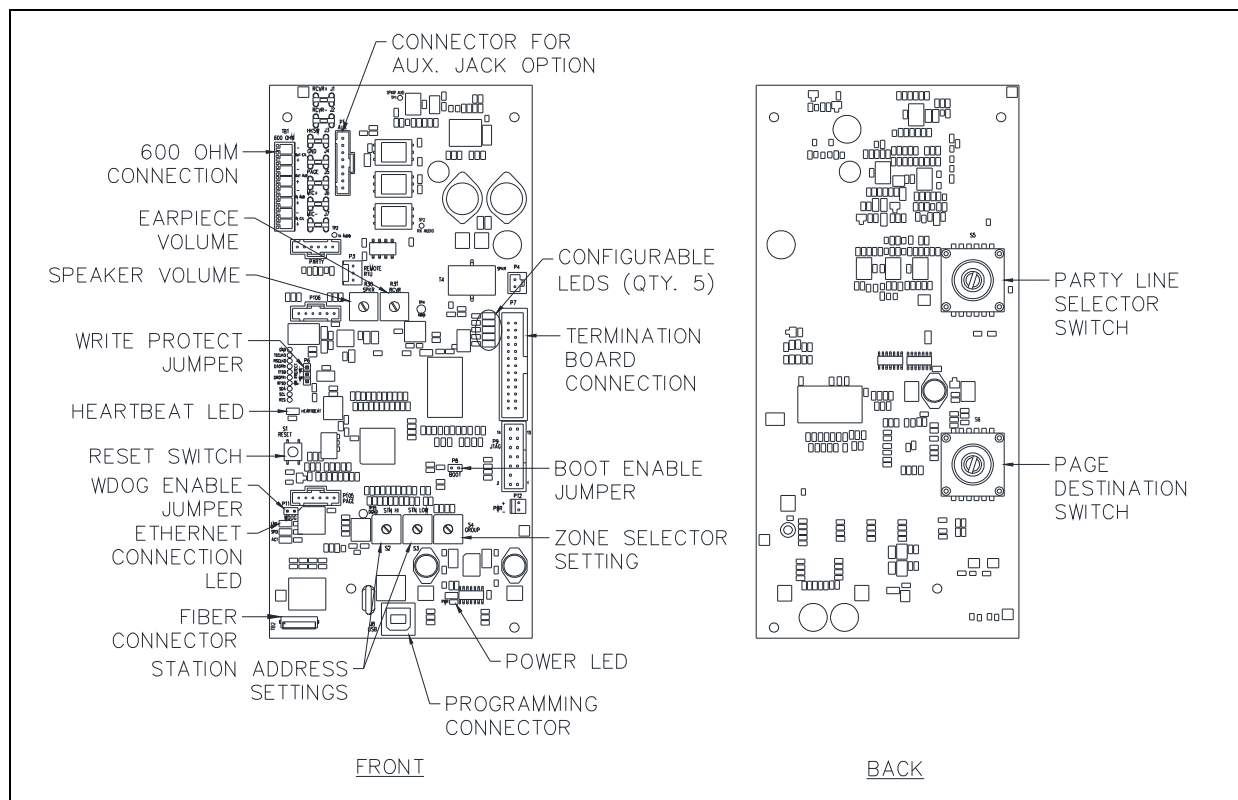




Figure 14. Main PCBA (Front and Rear Views)

Speaker and 600-ohm Audio Output Volume

The speaker volume potentiometer, R36, adjusts the signal level to the speaker from the page line. When 600-ohm audio is also connected, R36 adjusts the volume for both. Configure the 600-ohm audio output volume via the CLI (Command Line Interface) when using 600-ohm audio without an external speaker. The default setting is 4 watts from an 8-ohm speaker and 2 watts from a 16-ohm speaker.

 **WARNING**  —Maximum output power may exceed rated speaker wattage resulting in speaker damage.

To adjust the speaker or speaker and 600-ohm output volume:

1. Turn the speaker volume potentiometer, R36, fully counterclockwise.

The speaker emits an audible test-tone.

2. Slowly turn R36 clockwise to obtain the desired output.

The test-tone ceases three seconds after making no adjustments.

This setting can also be configured via USB or Ethernet connection using the CLI.

NOTE: Configuring this setting with the SP2 Console in a mutually provisioned system overrides this setting on the station. See the SP2 Configuration Guide, Pub. 42004-784 (see the [Reference Documentation](#) section).

Receiver Volume

Use the receiver-volume potentiometer, R37, to adjust the volume for the handset:

1. Remove the handset from the cradle.
2. Turn the receiver-volume potentiometer, R37, fully counter clockwise.

The receiver emits an audible test-tone.

3. Slowly turn R37 clockwise to obtain the desired output volume.

The test-tone ceases three seconds after making no adjustments.

This setting can also be configured via USB or Ethernet connection using the CLI.

NOTE: Configuring this setting with the SP2 Console in a mutually provisioned system overrides this setting on the station. See the SP2 Configuration Guide, Pub. 42004-784 (see the [Reference Documentation](#) section).

Group and Station Number Selector Switches

One *group-number* and two *station-number* hex-selector switches configure SP2 stations for mutual provisioning (see [Figure 14](#)). Each hex switch has a small arrow that indicates the current setting.

1. Adjust the position of the group-number selector switch to the desired group [0-F].
2. Adjust the two station-number switches to assign the station number [00–FF].

NOTE: Do NOT assign the same group/station number to more than one station.

Configure at least one SP2 station as a *master station* to utilize mutual provisioning in an SP2 system. Master stations must be assigned addresses [0.01], [0.02], or [0.03] using the selector switches. Master station(s) store the configuration for all SP2 stations on the network. Each SP2 station retrieves the mutual provisioning configuration from the master station as it powers up. See Pub. 42004-784, SP2 Configuration Guide, for detailed information on configuring SP2 stations and SP2 system mutual provisioning (see the [Reference Documentation](#) section).

Main PCBA Indicators

Power LED

The POWER LED illuminates when power is applied to the station, indicating the main board power supply is operational (see [Figure 14](#)).

Heartbeat LED

The HEARTBEAT LED flashes when network communication is established, indicating the microprocessor is operational (see [Figure 14](#)).

Ethernet Connection LEDs

The main PCBA contains three Ethernet connection LEDs; link (LNK), link speed (SPD), and activity (ACT). The LNK LED is blue, the SPD LED is green, and the ACT LED is yellow. The LNK and SPD LEDs indicate an active 100 Mbps Ethernet link when **off**. The activity LED, ACT, blinks yellow to indicate Ethernet data activity (see [Figure 14](#)).

Five Configurable LEDs

Configure the five LEDs (see [Figure 14](#)) through firmware. Information for configuring these LED indicators is in the SP2 Configuration Guide, Pub. 42004-784 (see the [Reference Documentation](#) section).

Front Cover Installation

After all adjustments are complete:

1. Inspect and clean the machined flange joint surfaces of both the cover and the box.
 - Surfaces must be smooth, free of nicks, scratches, dirt, or any foreign particle build-up that would prevent a proper seal.
 - Surfaces must seat fully against each other to provide a proper explosion-proof joint.
2. Clean the surfaces by wiping with a clean lint-free cloth.
3. Apply a light coat of Killark “LUBG” lubricant to the flange surfaces and close the cover.
4. Install and tighten all cover bolts to 30 ft·lb.
 - Do not omit any cover bolts.
 - Use only the bolts supplied with the enclosure.

It may become necessary to re-terminate some or all the enclosures in a system. If so, strip the wires back to clean copper and connect only one wire to each connector to allow for easier future troubleshooting.

NOTE: Refer to the Killark installation, operation, and maintenance data sheet enclosed with the unit for additional information.

Programming

SP2 stations are factory configured to provide basic page/party functions upon power-up. Configure stations for custom operation and/or larger system designs using the CLI or SP2 Console application. Refer to Publication 42004-784, SP2 Configuration Guide (see the [Reference Documentation](#) section).

Operation

Standard Handset Paging

Complete the following steps to make a page announcement from an SP2 handset station:

1. Lift the handset from the cradle.
2. *If requesting conversation:* rotate the party-line selector switch to select an unoccupied party line.
3. Press and hold the handset pressbar (not necessary when using the optional ALL-CALL button).
4. After hearing the short *preannouncement* tone (if configured), speak directly into the microphone to broadcast the page/announcement.

NOTE: SP2 stations incorporate a noise-canceling microphone to reduce transmitted ambient noise. This requires the user to place the microphone as close as possible to their mouth.

5. *If requesting conversation:*
 1. Designate the party line selected in Step 2.
 2. Release the handset pressbar.
 3. Wait for the designated individual(s) to respond.

Full-duplex communication takes place on the party line without broadcasting over the system's speakers.

6. Replace the handset in the cradle.

Party Line Communication

To respond to a page:

1. Turn the party-line selector switch on any SP2 station in the system to the requested party line.
2. Pick up the station handset.

Full-duplex communication takes place on the party line without broadcasting over the system's speakers.

NOTE: SP2 stations incorporate a noise-canceling microphone to reduce transmitted ambient noise. This requires the user to place the microphone as close as possible to their mouth.

3. Return the handset to the cradle following the party line conversation.

The system speakers do not broadcast party line conversations. Other individuals can join the conversation at any time by picking up a handset and rotating the party-line selector switch to the party line in use.

All-Call Button Use

Use the ALL-CALL button to page an alternate destination that is programmed for the station (see Figure 15). The All-Call option must be software configured for the SP2 station. To initiate a page using the ALL-CALL feature:

1. Lift the handset from the cradle.
2. *If requesting conversation:* rotate the party-line selector switch to an unoccupied party line.
3. Press and hold the ALL-CALL button.

The ALL-CALL button eliminates the need to press the PUSH TO PAGE button when paging.

4. After hearing the short *preannouncement* tone (if configured), speak directly into the microphone to broadcast the page/announcement.

NOTE: SP2 stations incorporate a noise-canceling microphone to reduce transmitted ambient noise. This requires the user to place the microphone as close as possible to their mouth.

5. Release the ALL-CALL button and wait for a response on the party line (if requested).
6. Return the handset to the cradle when finished.

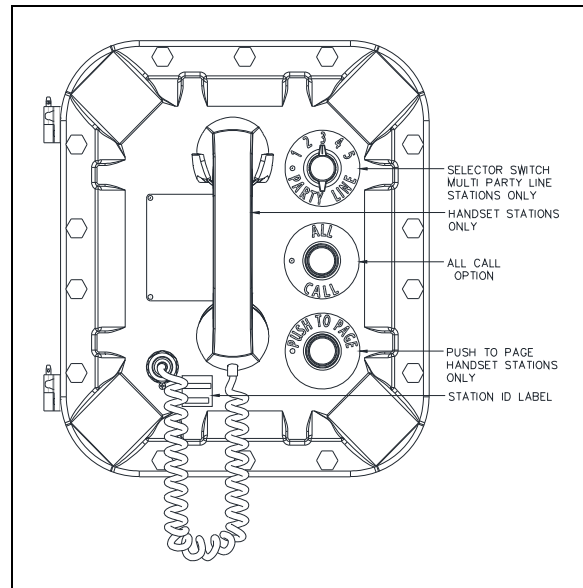


Figure 15. All-Call Option Button

Alternate-Page Destination Switch Use

Use the ALT-PAGE selector switch to page one of five alternate destinations that are programmed for the station (see [Figure 16](#)). Alternate page destinations must be software configured for the SP2 station. To initiate a page using the ALT-PAGE feature:

1. Lift the handset from the cradle.
2. *If requesting conversation:* rotate the party-line selector switch to an unoccupied party line.
3. Select the desired page destination using the ALT-PAGE selector switch.
4. Press and hold the PUSH TO PAGE button.
5. After hearing the short *preannouncement* tone (if configured), speak directly into the microphone to broadcast the page/announcement.

NOTE: SP2 stations incorporate a noise-canceling microphone to reduce transmitted ambient noise. This requires the user to place the microphone as close as possible to their mouth.

6. Release the PUSH TO PAGE button.
7. Return the handset to the cradle or wait for a response on the party line (if requested).

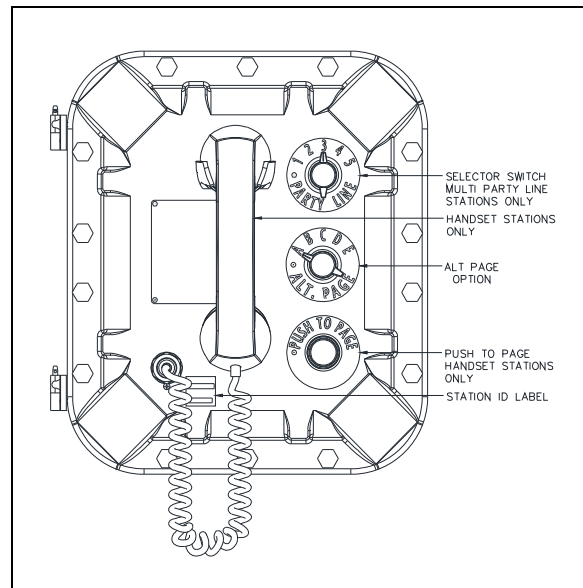


Figure 16. Alt-Page Option Button

Maintenance

Troubleshooting

The following table provides aid for qualified service personnel in troubleshooting problems with an SP2 station.

Problem	Solution
station not functional	<ul style="list-style-type: none"> • check wiring and cable terminations • check power supply voltage at TB3 on Termination PCBA • power LED on main PCBA illuminated • heartbeat LED blinking once per second for normal operation
network communication not functional	<ul style="list-style-type: none"> • verify LNK LED on main PCBA is off • verify SPD LED on main PCBA is off • verify IP connection settings using telnet • ping station IP address from an admin PC • verify network switch settings for IGMP snooping and multicast filtering
Handset receiver audio too high/low	<ul style="list-style-type: none"> • adjust <u>receiver volume</u> • check potentiometer R37 setting • check handset connections • check cable terminations between termination and main PCBAs • check hookswitch operation • replace handset
speaker volume too high/low	<ul style="list-style-type: none"> • adjust <u>speaker and 600-ohm audio output volume</u> • check potentiometer R36 setting • P2 and P3 termination PCBA jumper positions incorrect (see <u>Figure 7</u>) • check speaker wiring configuration on TB1 • replace speaker or driver
RTU output not functional	<ul style="list-style-type: none"> • verify no monitored output faults exist • check fuse F1 on the termination PCBA • check connected device operation
RTU input not functional	<ul style="list-style-type: none"> • verify no monitored input faults exist • check <u>RTU Inputs</u> on TB2 • check operation of connected device

Service

Contact GAI-Tronics' regional service center for an RA# (Return Authorization Number) if the equipment requires service. Ship equipment prepaid to GAI-Tronics with an RA# and a purchase order number. Repairs or a replacement are made in accordance with GAI-Tronics' warranty policy, if the equipment is under warranty. Please include a written explanation of all defects to assist our technicians in their troubleshooting efforts. Call 800-492-1212 inside the USA or 610-777-1374 outside the USA for help with identifying the nearest regional service center.

Reference Documentation

GAI-Tronics' product documentation is located on the GAI-Tronics website at <https://www.gai-tronics.com>.

SP2 Configuration Guide 42004-784

Specifications

Power

AC Input

Input voltage 120/230 V ac (nominal), 50/60 Hz
 Power factor @ nominal 120 V ac 0.5

DC Input

Input voltage 24 V dc +/-20%

Power Consumed (8-ohm load)	120 V AC	230 V AC	24 V DC
Idle	80 mA/6.6 VA	50 mA/12 VA	165 mA/4.0 W
4-watt output (default setting)	150 mA/18 VA	110 mA/25 VA	460 mA/11.0 W
30-watt output	550 mA/65 VA	350 mA/80 VA	1.95 A/46.8 W
Maximum Current Consumed (8-ohm load)	108 V AC	253 V AC	19.2 V DC
30-watt output	600 mA/65 VA	370 mA/77 VA	2.44 A/46.8 W

Current/Power requirements (+/-10%)

Ethernet

Cable fiber optic cable (customer supplied)
 Fiber Optic Transceiver 100 Mbps SFP (customer supplied)
 Supply Voltage 3.3 V dc
 Supply Current 300 mA
 Power Dissipation 1 W
 Connection Speed 100 Mbps
 Maximum Stations 4096

Warranty

Equipment. GAI-Tronics warrants for a period of one (1) year from the date of shipment, that any GAI-Tronics equipment supplied hereunder shall be free of defects in material and workmanship, shall comply with the then-current product specifications and product literature, and if applicable, shall be fit for the purpose specified in the agreed upon quotation or proposal document. If (a) Seller's goods prove to be defective in workmanship and/or material under normal and proper usage, or unfit for the purpose specified and agreed upon, and (b) Buyer's claim is made within the warranty period set forth above, Buyer may return such goods to GAI-Tronics nearest depot repair facility, freight prepaid, at which time they will be repaired or replaced, at Seller's option, without charge to Buyer. Repair or replacement shall be Buyer's sole and exclusive remedy. The warranty period on any repaired or replacement equipment shall be the greater of the ninety (90) day repair warranty or one (1) year from the date the original equipment was shipped. In no event shall GAI-Tronics warranty obligations with respect to equipment exceed 100% of the total cost of the equipment supplied hereunder. Buyer may also be entitled to the manufacturer's warranty on any third-party goods supplied by GAI-Tronics hereunder. The applicability of any such third-party warranty will be determined by GAI-Tronics.

Services. Any services GAI-Tronics provides hereunder, whether directly or through subcontractors, shall be performed in accordance with the standard of care with which such services are normally provided in the industry. If the services fail to meet the applicable industry standard, GAI-Tronics will re-perform such services at no cost to buyer to correct said deficiency to Company's satisfaction provided any and all issues are identified prior to the demobilization of the Contractor's personnel from the work site. Re-performance of services shall be Buyer's sole and exclusive remedy, and in no event shall GAI-Tronics warranty obligations with respect to services exceed 100% of the total cost of the services provided hereunder.

Warranty Periods. Every claim by Buyer alleging a defect in the goods and/or services provided hereunder shall be deemed waived unless such claim is made in writing within the applicable warranty periods as set forth above. Provided, however, that if the defect complained of is latent and not discoverable within the above warranty periods, every claim arising on account of such latent defect shall be deemed waived unless it is made in writing within a reasonable time after such latent defect is or should have been discovered by Buyer.

Limitations / Exclusions. The warranties herein shall not apply to, and GAI-Tronics shall not be responsible for, any damage to the goods or failure of the services supplied hereunder, to the extent caused by Buyer's neglect, failure to follow operational and maintenance procedures provided with the equipment, or the use of technicians not specifically authorized by GAI-Tronics to maintain or service the equipment. **THE WARRANTIES AND REMEDIES CONTAINED HEREIN ARE IN LIEU OF AND EXCLUDE ALL OTHER WARRANTIES AND REMEDIES, WHETHER EXPRESS OR IMPLIED BY OPERATION OF LAW OR OTHERWISE, INCLUDING ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.**

Return Policy

If the equipment requires service, contact your Regional Service Center for a return authorization number (RA#). Equipment should be shipped prepaid to GAI-Tronics with a return authorization number and a purchase order number. If the equipment is under warranty, repairs or a replacement will be made in accordance with the warranty policy set forth above. Please include a written explanation of all defects to assist our technicians in their troubleshooting efforts.

Call 800-492-1212 (inside the USA) or 610-777-1374 (outside the USA) for help identifying the Regional Service Center closest to you.