7


PRODUCTINFORMATION/SETTINGS:

Control No.	HWS772134	Page 4 of 4	_
		1	
Rev. 1		Date: 4/20/22	_

USB Host & Device Switch

Host: Select Host when connecting USB port to a computer.

Device: Select Device when connecting USB port to a USB device: i.e. USB memory

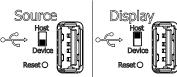

HDCP (I)


Important:

- Each extender (Source or Display) must be set to either Host or Device, they cannot be set to the same setting.
- If the Host/Device switch is changed while extenders are powered, the extender must be reset by pressing

the reset button or power cycling.



Power Light: Indicates device has power when illuminated

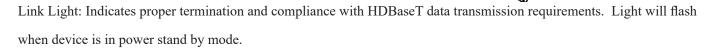

HDCP Light: Will be illuminated solid when transmitting encrypted video and will flash when non-encrypted video is transmitted.

TROUBLESHOOTINGGUIDE

No Power:

- Step 1: Verify green Power indication LED is illuminated on both devices.
 - If blinking make sure monitor and video source are powered and HDMI cables are plugged in.
- Step 2: Check 5VDC, polarity and termination on rear of device. 5 VDC min needs to be supplied.
- Step 3: Verify on/off switch is "ON" at the power supply (AVPS), LED light should be green.

No Link:

- Step 1: Verify Link indication LED is green on both devices.
- Step 2: Verify proper category cable termination. (Color code, seating of the conductors and stuffer caps)
- Step 3: Verify category cable does not exceed 100 Meters.

No HDCP:


- Step 1: HDCP indication LED should be green or blinking on both devices.
- •Solid green = encrypted video •Blinking = Non-encrypted
- Step 2: Check "source" DVD Player/Computer and "display" monitor/projector firmware have been updated. (reboot all devices after updates)

Reset Button:

Last Step: Use end of paper clip to depress reset button on each extender.

No USB:

Confirm switch configuration

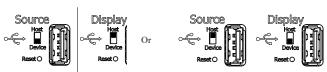

Hubbell Premise Wiring, HUBBELL INCORPORATED (Delaware)
23 Clara Dr Suite 103 Mystic, CT 06355 (800) 626-0005, Fax (860) 535-8328



Hubbell Premise Wiring Instruction Sheet

4KAV EXTENDER INSTRUCTIONS

Control No. HWS772134Page 1 of 4


Rev. 1 Date: 4/20/22

This Instruction sheet applies to the following Hubbell catalogs:

ISFHD5BK: INCLUDES ONE SOURCE AND ONE DISPLAY EXTENDER WITH HARDWARE


ISFHDT5BK : INCLUDES ONE SOURCE EXTENDER WITH HARDWARE ISFHDR5BK : INCLUDES ONE DISPLAY EXTENDER WITH HARDWARE

ISFHDx5xx series

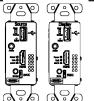

NOTE: SOURCE AND DISPLAY EXTENDERS CANNOT BE INTERCHANGED


*Use the following Hubbell extenders not outlined in these instructions for extending VGA and up to 3 HDMI inputs.

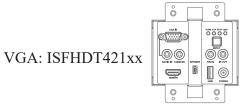

3 HDMI: ISFHDT431xx




ISFHDT421xx & ISFHDT431xx Extenders support video up to 4K-2K, @ 30Hz with Category 6A or higher UTP cable up to 100 Meters.

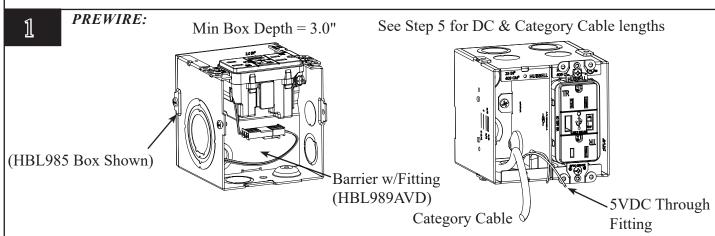

AV: CAT 6A TERMINATION:

CATEGORY 6A OR HIGHER RECOMMENDED FOR BEST PERFORMANCE.

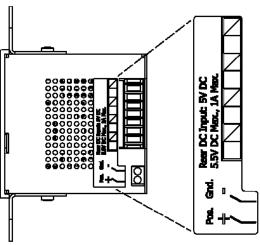

Orange Wht.
Orange
Green Wht.
Green
Blue Wht.
Blue
Brown Wht.

Brown

HOLD CABLE

HERE

HERE

HERE


HERE

HERE

HERE


110 Termination Tool Required


Install Stuffer Caps after termination

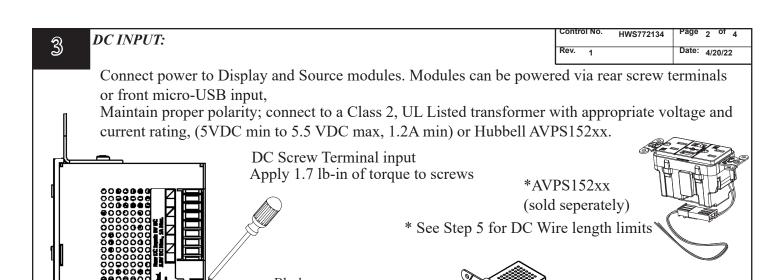

Front 5VDC micro-USB Input

DEVICE MOUNTING:

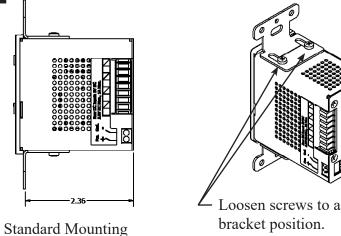

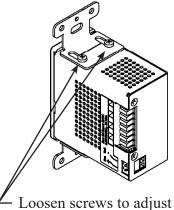



Shallow Mounting


Apply 3 lb-in of torque to screws


WIRING SPECIFICATIONS:

Hubbell recommends category 6A UTP or higher cable. ISFHDx5xx series supports video up to 4K-2K, @ 60Hz with no limit to the number of bundled cables up to 100 Meters when C6A or higher UTP cable is used.

UL2468 DC Hook-up Wire Length					
Gauge AWG	16	18	24		
Length (Ft)	50	25	5		
Length (M)	15.2	7.6	1.5		

CONNECTIONS & INSTALLATION:

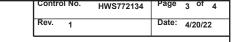

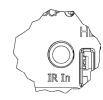


5VDC

IR Control Port: 3.5 mm

IR Input: Frequency 455 KHz. Max. Peak wavelength 950nm.

IR Output: Frequency 30 to 60 KHz. Peak wavelength 950nm.

Optional Hubbell IR Extender Kit: AVIR

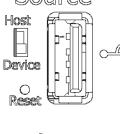

SB Port: USB 2.0 p to 100M



5VDC Port: Micro USB, Port is for supplying 5VDC power and for factory and

field updates only.



Audio Port: 3.5mm Stereo, Source is input, Display is output.

Ambient Operating Temperature: 50F (10C) to 104F (40C)

