


Curie Elite IP65 Recessed Fluorescent Luminaires

ATEX


INSTALLATION, OPERATION AND MAINTENANCE INSTRUCTIONS

Important: Please read these instructions carefully before installing or maintaining this equipment. Good electrical practices should be followed at all times and this data should be used as a guide only.


Curie Elite Modular Exposed 'T' (/MET) Ceiling - Luminaire Dimensions

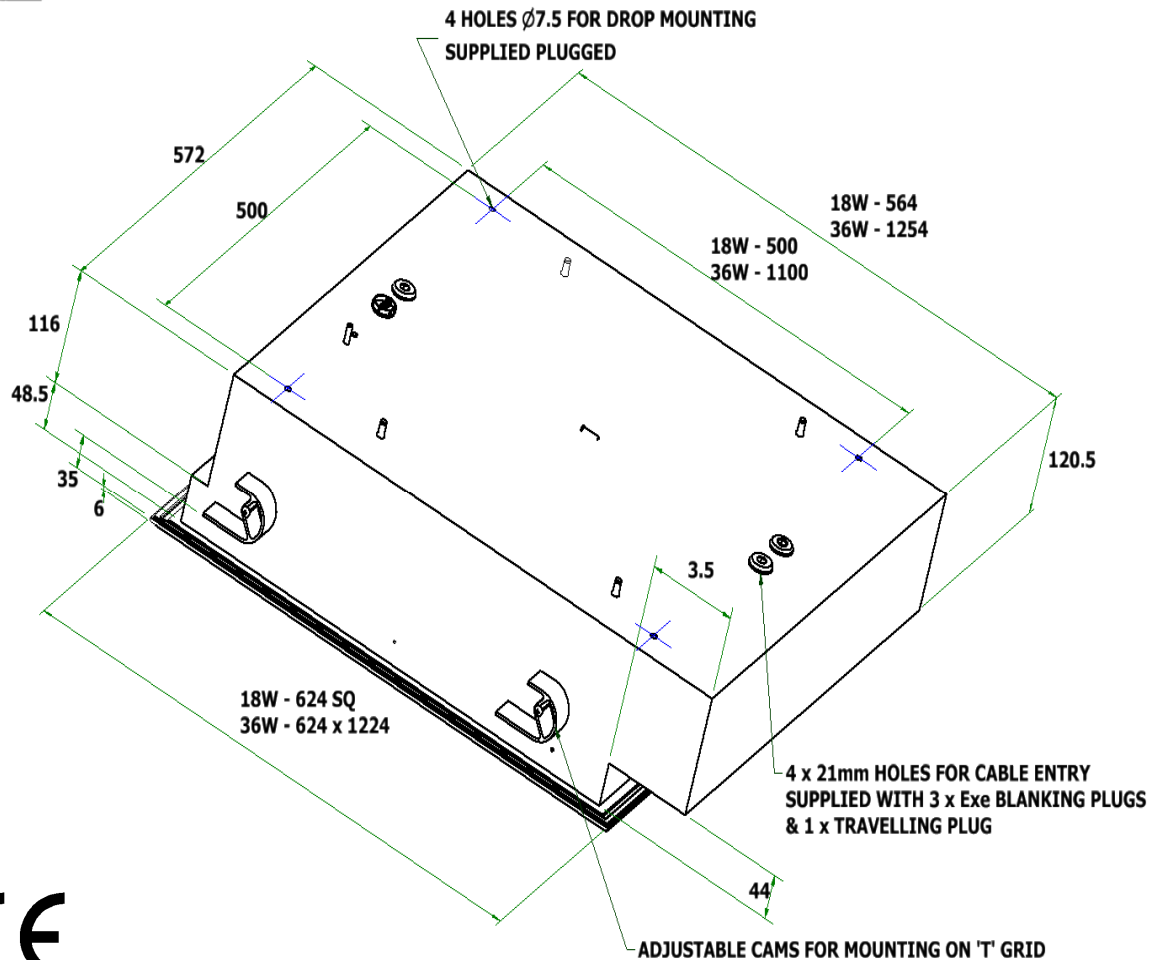


Curie Elite Modular Spring 'T' Ceiling (/MST) - Luminaire Dimensions

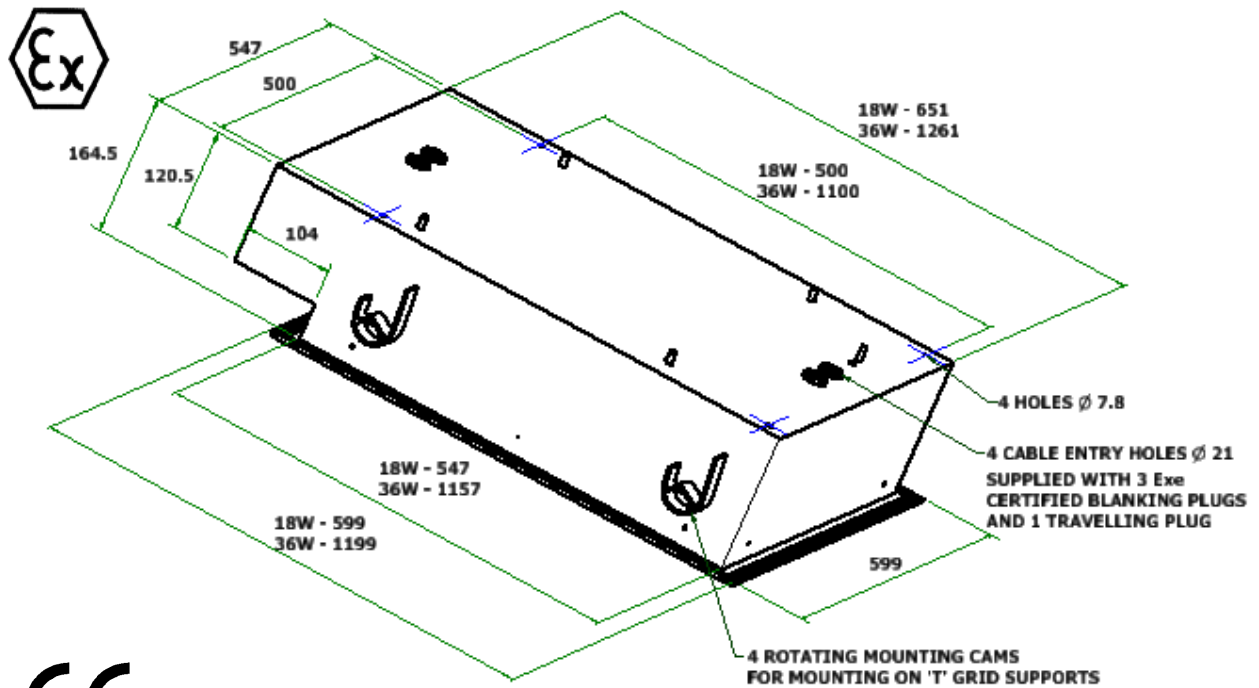

Curie Elite Non Modular Solid Ceiling - Luminaire Dimensions

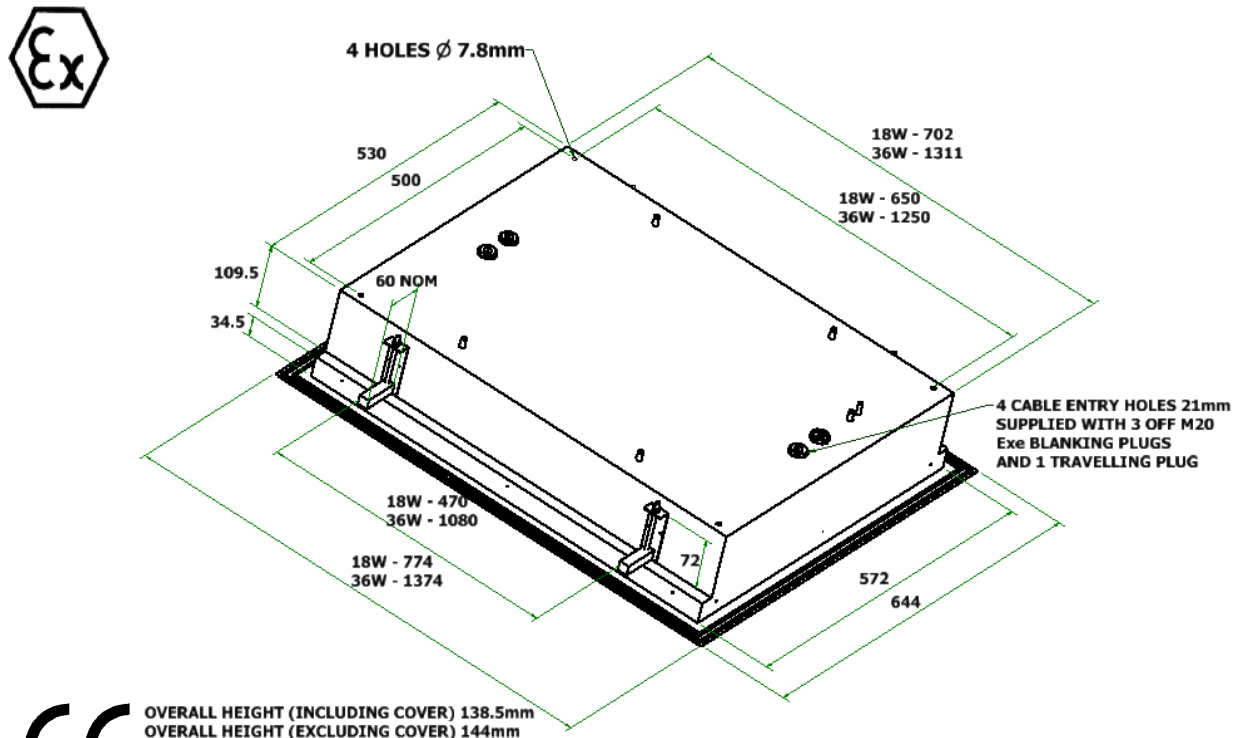

0.0 Specification	
Type Of Protection	Ex eqm Increased safety, Powder filling, Encapsulation
Protection Standards	EN 50014, EN 50017, EN50019, EN 50028, EN 50281-1-1.
Area Classification	Zone 1 and 2 areas to EN 60079-10-1, Zone 21 and 22 areas to EN 60079-10-2.
Installation	EN 60079-14
Certificate	EC- Type Examination Certificate Baseefa02ATEX0117X
Equipment Coding	Ex eqm II T4 (-20 to +40°C)
ATEX Coding	⊕ II 2GD T70°C
Ingress Protection	IP65 to EN 60529
CE Mark	 <p>The CE marking of this product applies to "The Electrical Equipment (Safety) Regulations 2006", "The Electromagnetic Compatibility Regulations 2004", the "Waste Electrical and Electronic Equipment Regulations 2006" and the "Equipment and Protective Systems intended for use in Explosive Atmospheres Regulations 1996". [This legislation is the equivalent in UK law of EU directives 2014/35/EU, 2014/30/EU, 2012/19/EU and 2014/34/EU respectively].</p> <p>The Equipment is declared to meet the provisions of the ATEX directive (2014/34/EU) by reason of the EC Type Examination and compliance with the Essential Health and Safety Requirements. M Poutney Technical Manager</p>

SPECIAL CONDITIONS FOR SAFE USE

Emergency luminaires must not be powered up without the battery fitted.

Luminaire is supplied with Battery plug/Socket disconnected, just prior to switching power on connect battery plug and socket.

1.0 Introduction – Curie Elite

The Curie Elite series, which has electronic control gear with EOL circuitry, is available as non-modular and modular recessed clean area luminaire for use with fluorescent lamps with the facility of an internal battery back up for emergency use. The non-modular is suitable for cut or prepared aperture ceilings. The modular is suitable for Exposed T and Spring T modular grid ceilings. The Curie Elite models have Ex q control gear, electronic safety sensor and micro-processor controlled emergency functions. Normal operation is mains supply with all lamps on, switching to one lamp on battery back up and having local switching of the mains lamps, the emergency lamp only being energised on mains failure.

The luminaries are available in 2 x 18W, 4 x 18W, 2 x 36W, and 4 x 36W for Modular and Non Modular Ceilings.

Note: Two lamp versions are only available as 600x600mm & 600x1200mm dimensions.

Refer to the current catalogue for information on product references. The range is available for use with T8 bi-pin lamps to IEC81 Emergency duration to BS EN 60598 2.22, 3 hours (4 hour versions are specials).

B15 SOLAS The luminaire can be installed to interface with fire resistant ceiling systems to maintain a B15 SOLAS fire rating; the integrity of the ceiling and insulation must be maintained using suitable insulation materials. The ceiling/fitting and insulation should be continuous (without any gaps), care must be taken to maintain this classification.



2.0 Electrical Supplies


Nominal Lamp Power and Supply Current

Supply Voltage	Lamps	Power W	Current A
230V, 50/60Hz	2X18W	35	0.17
	2X18W Emergency	40	0.19
	4x18W/ 2x36W	70	0.32
	4x18W Emergency	71	0.32
	2X36W Emergency	77	0.36
	4 x 36W	140	0.60
	4 x 36W Emergency	140	0.60
110V, 50/60Hz	2x18W	35	0.34
	2X18W Emergency	40	0.38
	4x 18W/ 2X36W	70	0.64
	4x 1 8w Emergency	71	0.64
	2 x 36W Emergency	77	0.71
	4 x 36W	140	1.2
	4 x 36W Emergency	140	1.2

- Batteries** 6V 4Ah NiCd (18W or 36W)
6V 7Ah NiCd (36W)
- Emergency Duration** 90 minutes or 3 hours depending on model specified
- Emergency Output** 1200mm lamp 25% of normal single lamp output
600mm lamp 30% of normal single lamp output
- Power Factor >0.98** Power is constant over voltage range.
- EMC** EN 50081-2 EN 50082-2
EN 61000-3-2 EN 55015
- Over voltage** 400V ac for 1 min and EN 61000-4-5 > 4kV
- Through Wiring** The through current rating is 16A. 4mm² terminals are standard (6mm² wiring can be used in the terminals in accordance with the luminaire certificate).
- Tamb Storage** -40°C to +80°C
- Storage** Luminaires and control gear boxes are to be stored in cool dry conditions preventing ingress of moisture and condensation.
Battery packs in storage should be cycled charged/discharged/charged every 9 months, as per instructions below.
Always disconnect battery plug and socket for storage.
Any specific instructions concerning emergency luminaires must be complied with.
(Warning: Battery packs not cycled and stored for a year may not be recoverable)
- Lamps** The lamps used in the range can be T8 bi-pin fluorescent with G13 cap. Lamp caps are to IEC 60061, lamp dimensions and safety to IEC 61195 and lamp performance to IEC 60081. Please note that this luminaire is suitable for IEC lamps only. Do not use American specification lamps.
- Fuse and MCB Ratings** It is recommended that for selection of MCBs users should consult the MCB manufacturer as this unit contains electronic control gear. MCB ratings can vary depending on the manufacturer and type and the size of the installation. The electronic control gear has nominal values of inrush current of 30A for 500µs on 230V and 45A for 350µs on 110V.

EOL Circuitry

The Curie Elite control gear has circuitry to protect against the potential effects from the end of life condition associated with fluorescent lamps in accordance with IEC 61347-2-3 and 60079-7.

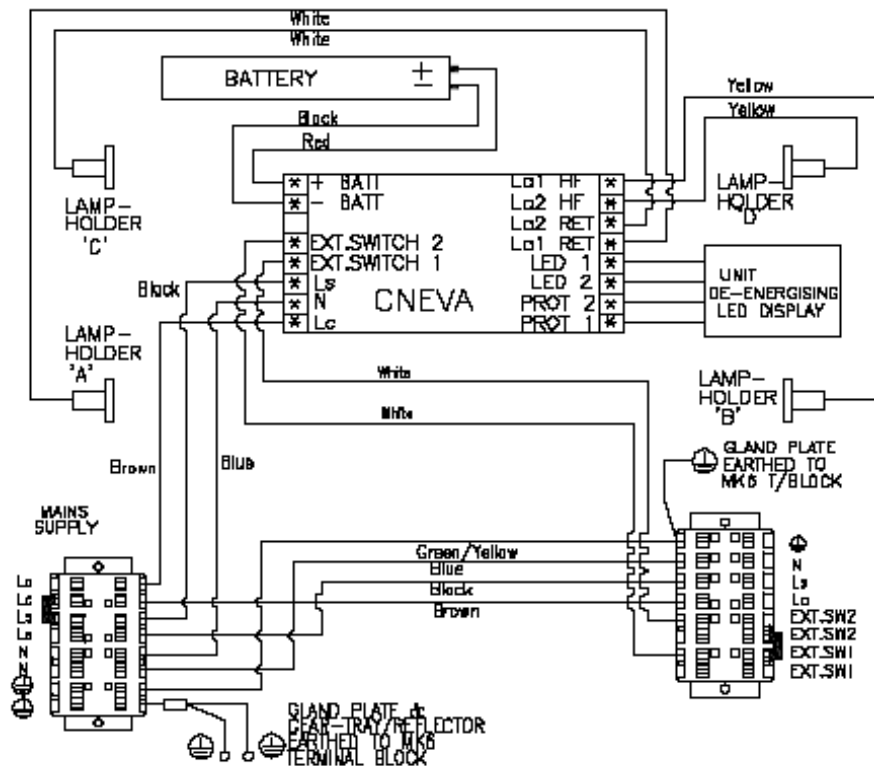

3.1 General

These instructions should be read fully and carefully before attempting to install the luminaire. For details of servicing operations, opening etc. see section 6.

Copies of these instructions should be held in a safe place for future reference. It is the responsibility of the installer to ensure that the apparatus selected is fit for its intended purpose and that the installation, operation and maintenance of the apparatus complies with applicable regulations, standards or codes of practice.

There are no health hazards associated with this product whilst in normal use, however, care should be exercised during the following operations.

Installation should be carried out in accordance with EN 60079-14 or with a local hazardous area code of practice, whichever is appropriate. Any specific installation instructions must be referred to. In the UK the requirements of the *Health and Safety at Work Act* must be met and electrical work associated with this product must be in accordance with the *“Manual Handling Operations Regulations”* and *“Electricity at Works Regulations 1989”*. Disposal instructions should be complied with.

The luminaires should be considered Class 1 to EN 60598 and effectively earthed.

The polycarbonate diffuser, if fitted, presents a potential source of ignition by **electrostatic electricity**. The diffuser should only be cleaned using a damp cloth. The luminaire should not be mounted very near to any probable location of fast moving stream of dry air, steam etc. which could generate a propagating brush static discharge.

To avoid applying static charge or scratching the diffuser:

- Never handle the polycarbonate diffuser with bare hands, use lint free gloves and carry using the frame.
- Never polish the diffuser with a dry cloth.
- If, due to site conditions the diffusers become dirty, they should be cleaned with an airgun. If smears are difficult to remove use an eggcup full of ‘Comfort’ fabric conditioner in a bucket of lukewarm water and allow



to dry naturally with the frame standing vertically. Do not polish dry as this will reapply static charge. Use only the recommended detergent at the stated concentration. Certification details on the rating plate must be verified against the application requirements before installation.

The luminaire is tested to EN 60598-1. If the temperature in an installation is continuously at the limiting level the duration will be reduced and the self-testing will be delayed.

The information in this leaflet is correct at the time of publication. The company reserves the right to make specification changes as required without notice.

3.1.1 Use in Combustible Dust Atmospheres

Where the equipment is used in combustible dust atmospheres, reference must be made to the selection and installation standards in order that the equipment is used correctly. In particular this applies to the de-rating of surface temperature for use where dust clouds may be present.

Refer to EN60079-10-2 & EN 60079-14 for additional details of selection, installation and maintenance

3.1.2 Hybrid Mixtures – Gas plus Dust.

Where Hybrid mixtures exist as defined in EN1127 as a potentially explosive atmosphere, consideration should be given to verifying that the maximum surface temperature of the luminaire is below the ignition temperature of the hybrid mixture.

3.1 Tools

12mm , 4mm and 3mm flat blade screwdriver. Socket head torque screwdriver. Suitable spanners for installing cable glands.

Pliers, knife, wire strippers/cutters.

3.3 Electrical Supplies

Luminaires are supplied with control gear suitable for the following rated supplies

Emergency 110-120V and 220-254V ac

Non-emergency 110-120V ac,
& 110-150V dc.

Non-emergency 220-254V & 220-300V dc.

The safety limit for surface temperature (T rating) is +/-10% on the rated voltage. Equipment should not be operated continuously at more than +10/-10% of the rated voltage of the control gear. The power factor correction gives a minimum of 0.95 lagging. The lamp supply is regulated therefore the change in light output over the supply range is substantially unchanged.

3.4 Lamps

The lamps used in the range can be T8 bi-pin fluorescent with G13 cap. Lamp caps are to IEC 60061, lamp dimensions and safety to IEC 61195 and lamp performance to IEC 60081.

3.5 Mounting

Luminaires should be installed where access for maintenance is practical and in accordance with lighting design information. Refer to the note in 3.1 concerning electrostatic charge.

Non-modular types: Prior to mounting remove front cover by undoing screws, releasing the safety chains and removing the gear tray; put front cover into a safe and clean place so as not to accumulate dust. Remove bag containing disposable caps from inside the luminaire. Ensure suspension brackets are flush with sides prior to positioning into the ceiling, ensuring that no cable is trapped. Position luminaire until the front flange meets the ceiling face.

Support into position from below. The ceiling suspension is activated from in front of the ceiling using a socket head torque screwdriver. Rotate the suspension bolt heads anticlockwise and the suspension arm will then activate and swing outwards, it then travels down onto the ceiling batten. Once contact has been made gradually tighten until the recommended torque of 1Nm has been reached. Confirm torque of bolts upon completion of this operation. When the assembly is complete fit the plastic caps.

Modular Types: Remove cover and gear tray and put into a safe place. Remove ceiling suspension cams from the sides of the luminaire.

Exposed T ceilings: Remove adjacent ceiling tiles from the sides of the luminaire, push the luminaire into the ceiling aperture and whilst supporting, fit two of the cams on diagonally opposite corners and screw in place. The

luminaire is now temporarily supported and remaining cams may be now fitted. The cam brackets should now be gradually rotated clockwise until the compression gasket is over half compressed. This should be done in sequence so as not to buckle the ceiling or damage the fitting by over stressing at any point.

Spring T ceilings: Remove the adjacent tiles from the sides where the ceiling suspension mates. Push the body of the luminaire into the ceiling aperture ensuring the body sits centrally in the ceiling structure. Fit two of the cams on diagonally opposite corners and screw in place. The luminaire is now temporarily supported and remaining cams may be now fitted. The cam brackets should now be gradually rotated clockwise until the front cover is flush/level with adjacent tiles. This should be done in sequence so as not to buckle the ceiling or damage the fitting by over stressing at any point.

3.6 Cabling and Cable Glands

The temperature conditions at the supply cable entry point are such that 70°C (ordinary PVC) cable can be used. Cable glands and sealing plugs must be “E generation” certified or have ATEX component approval. The cable and gland assembly when installed must maintain a minimum IP54 rating.

Where the cable **is not reliably clamped** externally to the apparatus the cable gland must clamp the cable against a pull in Newtons of 20 x the cable OD in mm.

Four entries suitable for M20 are provided. Three entries are fitted with suitably approved blanking plugs, the fourth entry with a transit plug. Other sizes are available on request.

3.7 Electrical Connections and Testing

If work other than re-lamping is to be done on any luminaire already connected to the electrical system, the luminaire must be isolated from the system. Access for the cabling is via removal of front cover and lamp tray. The front cover is secured using 6/10 off M6 captive screws, care to be taken as there is no suspension on this, and lampholder tray is secured by M5 screws and keyhole slots, with chain suspension allowing the tray to swing down, giving access to terminal blocks. Install the conductors in the appropriate terminals. Take care not to cut the conductor insulation excessively, 1mm of bare conductor outside the terminal throat is a maximum. Before re-fitting lampholder tray and front cover, the cores/cable should be neatly tucked away and a final check made on correct connections.

Luminaires are supplied suitable for looping and through wiring.

The through current rating is 16A. 4mm² terminals are standard (6mm² wiring can be used in the terminals as per the certificate).

Screw type or screw-less “cage clamp” terminals are fitted in the range of luminaires. Mains terminal blocks are marked L N Earth.

Mains terminal blocks on the emergency luminaires are marked Lc Ls N Earth.

Luminaires can also be supplied with three phase wiring to special order. The marking is L1 L2 L3 L s N Earth

The emergency units can be connected as switched, un-switched or non-maintained units. The switching facility is to allow the luminaire to be switched off whilst still charging the battery. Where switching is required, the un-switched line (Lc) is connected to the continuous mains supply. A link is fitted during assembly between Lc and switched line (Ls); this is removed for the switch-able mode. If the link is removed and Ls not supplied, the unit will only operate on emergency.

If the emergency luminaire is on a three phase system the switched line can be on any phase, it does not need to be on the phase connected to the un-switched line.

If local emergency inhibition (see 4.3) is required the luminaire should be ordered with the connections for this feature built in. The emergency inhibition function is connected via terminals, which must be specified to be included when ordering. The inhibition terminals are marked Ext Sw 1 and 2.

The electrical wiring will consist of two connections to the control gear brought out to an extra terminal block at the mains supply terminals. The switch should be of 5 VA rating and, if in the hazardous area, Ex protected.

The switch must have contacts which will reliably conduct small currents (10 mA levels) at low (6V) voltage. For information on suitable surface mount switches refer to Chalmit sales department. Closed circuit is normal, off inhibits the emergency function. Up to ten luminaires and 500 m of cable can be connected in parallel to one switch. *If the polarity is crossed the emergency function will work but can not be inhibited.*

If the inhibition is connected into a circuit with CEAG emergency luminaires having an inhibition connection the Curie Elite must be connected as follows EXT SW1 should be connected to CEAG “2” EXT SW2 should be connected to CEAG “3”

As there are four entries, four core cable must be used for looping the inhibition terminals if the mains through wire connection is to also be used. If any other configuration is needed it must be specially ordered or the internal wiring pack changed on site.

The cabling is made off to the correct length in the normal manner. Care should be taken not to cut the insulation back too far. The maximum amount of insulation allowed beyond the throat of the terminal is 1mm. Luminaires can be tested with a high impedance 500 V dc insulation tester to IEC 364 or BS 7671 **provided all line and**

neutral connections are solidly connected together for the test. The inhibition circuit can be tested at 500 V dc whilst connected to the luminaire terminals. (Units damaged by incorrect insulation testing can be detected). Before completing the wiring, ensure that all the connections are correctly introduced into place before reassembling the luminaire. Following cabling, lamps can be fitted. New lamps should be used.

4.0 Emergency Operation

4.1 General description of emergency unit and operation

The integrated unit consists of a mains supplied ballast for feeding the fluorescent lamps in normal situations, a battery pack, an emergency circuit that charges the battery and powers the lamp in an emergency situation, and a micro-controller based supervisory circuit that controls the charging, monitors the emergency functions and displays the results of self test and emergency unit status by means of a red and green LED.

The unit can be connected to an external switch that can inhibit the emergency functions when the mains power is on or off and restart the emergency functions with or without mains power being applied. The terminals for this feature must be specified when ordering. (See 3.7)

By switching the voltage on a connection Ls the lamps can be switched on and off without the emergency function being activated. The Ls connection is insulated from Lc and has a signal function only drawing a very small current.

The luminaire will go into emergency mode at not less than 60% rated supply voltage and will remain in mains mode above 85% of rated supply voltage.

On restoration of the mains supply there will be a **60 sec delay** before the emergency lamp is restored. This feature is not common on emergency luminaires and should be noted. The feature is provided to increase reliability when operating in bad supply conditions.

The charging function is monitored continuously. There is a check for over charging and no charging. In case of a control gear fault three red flashes, followed by a pause are displayed.

After a complete battery discharge, the unit will switch over to a low discharge current mode.

4.2 Self testing

An immediate full test of capacity can only be made by manually de-energising the installation and timing the discharge. The LED indication will show if the duration is less than 2.5 hours or 2 hours if the temperature during the test is very high or very low. ($45^{\circ}\text{C} < T_{\text{amb}} < -5^{\circ}\text{C}$, with mains lamps operating normally prior to test). The control continuously monitors all charging functions.

The unit will self test for a short period every 13 days. The short self testing is for emergency function. The initial starting time for the self test routines is at a random point in the 13 day cycle, starting at the first mains energisation after the battery is connected or re-connected. During the 13 day self test the unit will test for function including lamp condition. The test will last 9 minutes with one lamp being energised at emergency level during the test period, the other lamp will remain on. If Ls is off, the short test is delayed until Ls is re-energised. The unit will perform a complete battery discharge every "3" months (102 days) and will check for minimum emergency duration as stated above. The start of the first complete battery discharge is at a random point between 0 and 102 days after applying mains voltage. The test will be repeated at fixed 3 monthly intervals. The unit will also complete a full self test after completing a commissioning cycle to full charge and after battery replacement.

The test will be delayed if the battery is not fully charged or the operating temperature at the time is too high to give a proper result or Ls is off. The test is also made after the initial installation and energisation and a full charge cycle completed. One lamp remains energised at normal mains output. The long test will also take place after a battery is changed or disconnected then re-connected.

The emergency lamp condition is monitored during lamp start. At the start of the long test the emergency lamp is extinguished for 9 minutes to check cold starting performance. If the lamp ignition is not correct the LED will display 3 repeated red flashes. This will happen even if the lamp does ignite and run at the normal light level. If the self-test detects a failure it is indicated as follows. Refer to the Table 1 below.

Emergency lamp defective: continuous red flashing.

Battery defective or low capacity: two red flashes, followed by a pause.

Emergency unit defective: three red flashes followed by a pause.

If the charge condition is known, the unit will re-charge from empty to approximately 80 % charge in 14 hours,. Afterwards a reduced current post charge period will be applied to complete the charge. If the battery charge condition is unknown (e.g. first connection) a reduced charge is applied for 44 hours.

For battery temperatures below 10°C charge current is reduced and charge time increased.

The charging function is monitored continuously, there is a check for over charging and no charging. In case of a fault three red flashes, followed by a pause are displayed.

The control contains dedicated features which prevent any unsafe condition arising if the micro-processor were to malfunction. After a complete battery discharge, the unit will switch over to a low battery discharge mode which maintains the memory and monitoring function.

LED display

The status is displayed by means of red and green LED signals.

The green LED will flash slowly, if the batteries are being charged, and all emergency functions were found to be OK during the last self-test.

The green will be steady at full charge.

The red only will flash if there is a fault.

Table 1 Monitoring function indication

GREEN	RED	MODE	REMARKS
Continuous fast flash 1 per Second		Charge C/10	
Continuous slow flash 1 per 2 Seconds		Charge C/20	Charging currents at low temperatures reduced
Steady		Fully charged	
Fast Flashing alternate Red-Green	Fast flashing alternate Red-Green	Less than one ½ hour duration left during emergency operation	one lamp at emergency light level
	fast flashing	Lamp faulty	Emergency lamp only
	2 red flashes repeating	Battery faulty or battery not connected or low duration after long test	Minimum duration limit during long test not met, limits are temperature and type dependent
	3 red flashes repeating	fault in electronics of power supply	
Slow flash or steady	Periodic short flash once per 4 secs	Mains on emergency inhibited	
None	None	Defective display	Lamps on
None	None	-mains off, battery discharged, or -mains off, emergency inhibited or -total unit defective	Lamps off
None or steady green	None	Emergency control defective	Mains lamp on

4.3 Inhibition (also see 3.7)

If local emergency inhibition is required the luminaire should be ordered with the connections for this feature built in. The electrical wiring will consist of two connections to the control gear brought out to an extra terminal block at the mains supply terminals. Closed circuit is normal, off inhibits the emergency function. Up to ten luminaires can be connected in parallel to one switch and using 500m of cable.

The inhibit as well as de-inhibit functions can start with normal mains power present as well as without mains power, the emergency light can be switched on while the whole power system is still dead.

Inhibition is not possible with a completely discharged battery and no mains being present. The emergency function can be inhibited whilst in emergency operation.

5.0 Commissioning (Refer to section 6 for access)

Luminaire is supplied with Battery plug/Socket disconnected, just prior to switching power on connect battery plug and socket.

The units will only be fully operational and give completely correct indication after the completion of a full charge, self-test discharge and recharge cycle, approx. 100 hours. Once this is complete the unit will have it's full operating parameters installed in the memory. Provided the battery is not disconnected indication will function correctly.

5.1 Non-emergency luminaires are energised after the lamps are fitted and the luminaire closed. Both lamps should light. Open the cover the lamps will go out.

5.2 Commissioning Emergency

5.2.1 Commissioning with un-powered installation

After inserting the lamps and closing the cover, the unit will go onto emergency mode until discharged if the initial battery voltage is high enough. (> 5.5 V).

If the emergency inhibition switch is in the blocked condition the lamp will go on for 60 seconds unless there is not enough charge in the battery to sustain it for that time.

5.2.2 Commissioning with mains power applied.

If a local light switch is connected put it to on.

After inserting the lamps and closing the cover the unit will light. At first power up the emergency lamp will light fully after 60 secs. This is done to increase reliability in very frequent mains on and off situations or irregular supply such as may occur during commissioning.

The initial C/20 charge will be indicated by a green flashing LED 1sec on 1 sec off.

If an emergency blocking switch is present a short red flash every 4 sec will be displayed if the switch is in the blocked state.

If the battery charge condition is unknown (e.g. first connection) a reduced current charge is applied for 44 hours.

The long self test takes place after the initial installation and energisation has been made and a full charge cycle completed. The test will be delayed if the operating temperature at the time is too high to give a proper result or if Ls is off. One lamp remains energised at normal mains output. After the test the unit will fast charge to 80% then post charge to fully charged and the indication will then be steady green.

5.2.3 Low Temperature Operation

At battery temperatures below 10°C charge current is reduced and charge time increased. This temperature is equivalent to the luminaire operating at -5°C with the lamps on or at +5°C with the lamps off.

Under operating conditions where the ambient temperature is below 0°C for long periods the luminaire should preferably be used in maintained mode so that the mains supplied lamps warm up the battery to a normal working temperature.

6.0 Servicing and Operation

The luminaire incorporates an electronic safety de-energiser for maximum reliability and utility of the emergency monitoring function. The electronic sensor is operated by the actuating plate on the cover. This provides for the safe opening and carrying out of re-lamping.

Safe servicing behind the gear tray requires the mains supply to be isolated, and battery connections must be treated with care, see 6.8.

6.1 Opening and Closing front cover.

The front cover is secured using up to 10 off M6 captive screws. Do not remove plastic caps on non-modular types by levering with a screwdriver as this will damage the paint finish and create a bacterial trap. Use a self-tapper to screw into the cap and then pull out.

6.2 Fitting lamps and Re-Lamping

IMPORTANT – Isolate mains supply before opening. The control gear will be damaged if the lamps are removed without being de-energised and there is an ignition risk. This could occur if the sensor arrangement is

faulty or has been defeated. The luminaire must be de-energised the control gear checked and electronic sensor assembly must be replaced if faulty, see 6.7.

Lamps that are not operating or appear dim should be replaced as soon as practical. The control gear is designed to withstand end of life conditions of lamps The emergency unit will indicate in advance that the lamp is approaching end of life. Always replace both lamps.

The bi-pin lamps are fitted in lampholders with a rotating section. The lamp must be pushed firmly down into the lampholder and rotated 90°. The contact is biased to remain in the 90° position. If the lamp does not rotate, check that it is completely positioned into the lampholder. Before inserting lamps ensure the lamp pins are not damaged or slack in the end cap.

6.3 Releasing the Reflector/Gear Tray

Loosen the two fixing screws retaining the reflector/gear tray far enough for it to slide over keyhole slots. Check the tray will hang on the retaining chains without stressing the wiring between body and tray. Replace in reverse order.

The lampholder assemblies can be removed from the gear tray, if necessary, by removing the fixing screw and pushing up the click finger at the end of the gear tray and pushing the lampholder assembly forward towards the centre of the tray.

Re-assembly is a reversal of the above, ensure the lampholder assembly fully clicks into place on the gear tray. Lampholder assemblies have the connecting receptacles and are specific to each model. If they are being replaced the correct spare assembly must be ordered.

6.4 Removal of Reflector/Gear Tray c/w Lampholder Assemblies

Release gear tray from body and hang on retaining cords, as explained above. Disconnect the cables from the gear tray to the mains terminal block, unhook retaining cord from gear tray and lift clear.

6.5 Servicing Behind the Gear Tray

The release of the gear tray exposes live mains terminals. Any work behind the gear tray requires that the supply is isolated to avoid ignition risk and damage to components.

6.6 Replacement of Ballast or Emergency control

The ballast contains no replaceable parts. Should it be found necessary to replace the ballast, the following procedure should be adopted:

Ensure that the luminaire is isolated from the mains supply.

Remove gear tray from body and swing down as previously explained. Undo the battery plug on emergency luminaires.

Ballasts use 6mm tab connectors which are locked and are released when the black cover sleeve is pulled away axially. When replaced a 'click' will be heard as the lock locates. **On no account should the quick release connectors be replaced with proprietary items.**

Disconnect the leads to the ballast, note the connections. When removing the connections **always** disconnect the sensor and LED connections (LED1 LED2 PRPT1 and PROT2) **last** and reconnect them **first**. Remove the ballast retaining screws and remove ballast from tray.

Replacement of the units is in the reverse order. Check the connections carefully before re-energising. The emergency lamp leads are marked with a plastic sleeve (E). The lamp leads on the emergency are marked as pairs. Take care to connect correctly. The unit is **not** protected against reverse battery polarity. The yellow leads are the high voltage ones. Miss-connection of the units will be very likely to result in damage. **Care and checking during replacement can not be over emphasised.**

6.7 Replacement of sensor with or without LED assembly

It is very unlikely that this assembly will need replacement other than as a result of mechanical damage.

Isolate the mains. Disconnect and note the connections. Undo the two screws and replace the unit using the nuts from the old unit. Reconnect and carefully check the connections before re-energising.

6.8 Replacement of battery

The battery is accessed by releasing the gear tray fixing screws sliding the tray and hinging it down.

The battery is connected to the control using a plug and socket arrangement. The battery load is disconnected by the electronic sensor device. The screws holding the battery pack are loosened and the battery pack slid axially one way then the other in order to release. The battery pack is not intended to be opened and is replaced as a unit. The battery is potentially incandive but is protected during removal by the IP30 construction which

covers live parts. The battery assembly must be protected from damage and water ingress then **removed from any potentially hazardous area as soon as practical.**

The replacement battery is slid axially one way then the other in order to insert then the screws are tightened. The socket is then inserted. The luminaire must not be operated without the battery connected. If the battery is removed and not replaced the control gear supply must be disconnected at the mains terminal block and secured.

6.9 Checking of Battery separately

The easiest way of checking the battery is in a known serviceable luminaire against the rated duration.

If the battery is to be checked separately, it should be charged using a **constant current charger** at 200/400mA for 30/15 hours for the 4Ah (18W) or 350/700mA for 30/15 hours for the 7Ah (36W). Discharge measurement is not easy as the current is proportional to the voltage for resistance loads, so it has to be averaged. Discharge the battery at 1 to 2A and multiply current by time. Do not discharge below 1 volt per cell, that is 5V. The capacity should be 70% or more of normal.

7.0 Routine Maintenance

Visual tests and checks should be carried out at intervals described by the appropriate regulations, EN 60079-17, and should include the following:

Check that the lamps are working or appear badly aged. Blackening at the lamp ends is a good indication of length of use.

Check for mechanical damage/corrosion.

Check for loose connections including earthing.

Check for undue accumulations of dust or dirt.

Verification of tightness of fixing, glands, blanking plugs etc.

Check for unauthorised modifications.

Check condition of enclosure gasket and fastenings.

Check for any accumulation of moisture.

Periodic inspection of the enclosure seal should be carried out to ensure that the seal is sound. The seal can be replaced and, if necessary, secured in position by the application of a small amount of silicone RTV adhesive.

If the luminaire has been subject to abnormal conditions, for example, severe mechanical impact or chemical spillage, it must be de-energised until it has been inspected by an authorised and competent person. If in doubt, the unit should be returned to Chalmit for examination and, if necessary, replacement.

7.1 Fault finding

In general, installations of luminaires have a number of units on site. Once apparently faulty components are in the workshop fault finding is done by substituting known healthy components. Except for checking continuity to the supply and ballast input connections there is little that can be done to fault find using instruments. Live testing and use of meters on high frequency units in a workshop will gain little information and may damage healthy components. Take great care in connecting and disconnecting see 6.7. Use a charged battery wait for 60 seconds for units to respond.

7.1.1 Non emergency

The lamps will run until one fails to strike. Fit new lamps. If the result is not satisfactory, check continuity to the ballast. If still no result, check the continuity to lampholders after disconnecting leads from ballast. If no fault found replace ballast. If still no result, disconnect the connection to the sensor. If the lamps light this would indicate a faulty sensor, see 6.7 but as this is most unlikely check all connections before replacing.

7.1.2 Emergency

Check for operation of the LED. **If the LED is red** refer to the table which shows the fault diagnostics. If the unit does not work on the mains with Ls energised carry out the checks in 7.1.1. If mains operation can not be restored replace the control unit.

The usual first service operation with emergency units which appear to work normally on mains but not on emergency is to energise for a few minutes before checking emergency operation. If no result, check that the inhibit connection is closed circuit. If the unit works on emergency let it discharge fully. The unit should then be energised for 60 mins and the discharge re-checked.

If the unit runs for a few minutes it is charging. If not, change the battery and repeat the full discharge and short charge test. If OK, give the unit a full 48 hour charge and check the duration. If there are still fault indications replace the control unit.

7.2 Cleaning

The diffuser should not be polished or wiped with a dry cloth as a risk of ignition due to electrostatic discharge may result. Cleaning of the diffuser with any chemical or hydrocarbon solvent based cleaner may result in severe damage.

8.0 Fuse and MCB Ratings

It is recommended that for selection of MCB's users should consult the MCB manufacturer as this unit contains electronic control gear. MCB ratings can vary depending on the manufacturer and type and the size of the installation, i.e. impedance of conductors. The electronic control gear has an inrush current of 30A for 500µs on 230V, emergency and non-emergency, 45A for 350µs on 110V, non-emergency, and 35A for 250µs on 110V, emergency. These figures are for low resistance connections with short cables and low impedance supplies.

9.0 Disposal of Material

General

Disposal of Material

Any disposal must satisfy the requirements of the [WEEE directive \[2012/19/EU\]](#) and therefore must not be treated as commercial waste. The unit is mainly made from incombustible materials. The control gear contains plastic resin and electronic components. All electrical components may give off noxious fumes if incinerated.

9.1 Lamps


Fluorescent lamps in modest quantities are not "special waste". They should be broken up in a container to avoid injury, avoid inhaling dust.

Important: *Do not incinerate lamps.*

9.2 Battery Disposal

Nickel cadmium batteries are defined as 'controlled waste' under the hazardous waste regulations and the person disposing needs to observe a 'duty of care'.

Batteries can be returned to the manufacturers for recycling. They must be stored and transported safely and any necessary pollution control forms completed prior to transportation. Take care to fully discharge batteries before transporting, or otherwise ensure that there can be no release of stored energy in transit. For further details refer to our Technical Support Department.

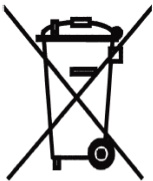

To comply with the Waste Electrical and Electronic Equipment directive 2012/19/EU the apparatus cannot be classified as commercial waste and as such must be disposed of or recycled in such a manner as to reduce the environmental impact.





Chalmit Lighting is a leading supplier of Hazardous Area lighting products

	CHALMIT LIGHTING PO Box 5575 Glasgow, G52 9AP Scotland	
Telephone: +44 (0) 141 882 5555 Fax: +44 (0) 141 883 3704 Email: info@chalmit.com Web: www.chalmit.com	Registered No: 669157 Registered Office: Cannon Place 78 Cannon Street London EC4N 6AF UK	

For technical support, please contact: techsupport@chalmit.com

Note: Chalmit Lighting reserves the right to amend characteristics of our products and all data is for guidance only.

	EU-Declaration of conformity		
	UE-Déclaration de conformité		
	EU-Konformitätserklärung		
Manufacturer	Chalmit	Address	388 Hillington Road, Glasgow. G52 4BL Scotland UK
Product	Curie Recessible Luminaires.		
EC - Type Examination Certificate	Baseefa02ATEX0117X		
Notified Body	SGS FIMKO OY 0598		
ATEX Coding	 II 2GD	ATEX Classification	Group II Category 2 GD
Equipment Coding	Ex eqm II T4 T70°C		
Ingress Protection	IP65		
The technical basis, with respect to equivalence of			
La base technique, en ce qui concerne l'équivalence de			
Die technische Grundlage hinsichtlich der Normen			
Protection Standards EN 50014, EN 50017, EN50019, EN50028, EN 50281-1-1			
Area Classification EN 60079-10-1, EN 60079-10-2.			
of compliance with the EHSRs is valid as there are no changes which materially affect the state of technological progress of the product.			
en conformité avec les EESS est valide puisqu'il n'y a aucun changement qui affecte matériellement l'état de l'évolution technologique du produit.			
zur Erfüllung der GSGA ist gegeben, da keine Änderungen erfolgt sind, die einen Einfluss auf den technischen Stand des Produkts haben.			
Terms of the directive:		Standard & Date Certified to	Standards Date Declared to
Prescription de la directive:		Standard & date certifiée à	Normes date Déclaré
Bestimmungen der Richtlinie:		Standard & Datum Zertifiziert nach	Standards Datum erklärt
2014/34/EU	Equipment and protective systems intended for use in potentially explosive atmospheres.	EN 50014: 1997 Amd 1&2 EN 50017: 1998	
2014/34/UE	Appareils et les systèmes de protection destinés à être utilisés en atmosphères potentiellement explosibles.	EN 50019: 2000	
2014/34/EU	Geräte und Schutzsysteme zur bestimmungsgemäßen Verwendung in explosionsfähigen Bereichen.	EN 50028:1987 EN 50281-1-1: 1998	
2014/30/EU	Electromagnetic compatibility	EN 55015 : 2013	
2014/30/UE	Compatibilité électromagnétique	EN 61547 : 2009	
2014/30/EU	Elektromagnetische Verträglichkeit	EN 61000-3-2 : 2014	
2014/35/EU	Low voltage equipment	EN 60598-1 : 2015	
2014/35/UE	Équipements électriques à bas voltage	EN 60598-2-2 : 2015	
2014/35/EU	Niederspannungsgeräte / -systeme	EN 60598-2-22 : 2014 EN 60529 : 1992	
2012/19/EU	Waste of electrical and electronic equipment		
2012/19/UE	Déchets d'équipements électriques et électroniques		
2012/19/EU	Entsorgung der elektrischen und elektronischen Geräte / Systeme		
2011/65/EU	RoHS II Directive		



On behalf of the Chalmit, I declare that, on the date the equipment accompanied by this declaration is placed on the market, the equipment conforms to all technical and regulatory requirements of the above listed directives.

En tant que représentant du fabricant Chalmit, je déclare qu'à la date où les équipements accompagnant cette déclaration sont mis sur le marché, ceux-ci sont conformes à toutes les dispositions réglementaires et techniques des directives énumérées ci-dessus.

Hiermit bestätige ich, im Namen von Chalmit, dass am Tag der Lieferung des Produkts/der Produkte zusammen mit dieser Erklärung das Gerät/die Geräte alle technischen und regulativen Anforderungen der oben aufgeführten Direktiven erfüllt.

Name and Date Mark Poutney 01/01/2021
Nom et Date
Name und Datum

Technical Manager
Directeur technique
Technischer Leiter

Quality Assurance Notification by: **SGS FIMKO OY**
Notification d'assurance qualité par: **0598**
Qualitätssicherungsnotifikation durch:

Quality Management System Accreditation:
Système de Management Qualité Accréditation:
Qualitätsmanagementsystem Akkreditierung:
Environmental Management System.
Système de gestion de l'environnement.
Umwelt kontroll system.
Certificate No./Certificat N°/Zertifikat Nr.

ISO 9001
ISO 14001
by/par/durch
Lloyd's Register
LRQ 4005876