

# INSTALLATION, OPERATION & MAINTENANCE DATA SHEET FOR VMHKPC1, VMHKPC2, and VMHKPC3 Photocontrols

**CAUTION:** Before installing HK-GL, make sure it complies with area classifications, failure to do so may result in bodily injury and/or property damage.


**NOTE:** All installations must comply with the applicable local and /or National Electric Code.

Make sure that the circuit is deactivated before starting installation or maintenance.

Refer to nameplate for suitability and other ratings in specific hazardous locations

## **DIRECTIONS FOR INSTALLATION:**

1. Remove cover from HK box.
2. Pull supply wires and wires from fixture into box
3. Connect the supply wire to the black wire from the photocontrol, Connect the fixture(luminaire) wire to the red wire from the photocontrol, and Connect the Common wire from the supply, the common wire from the fixture (luminaire) to the white wire from the photocontrol. See fig. 1.
4. Replace cover. Tighten securely to box.

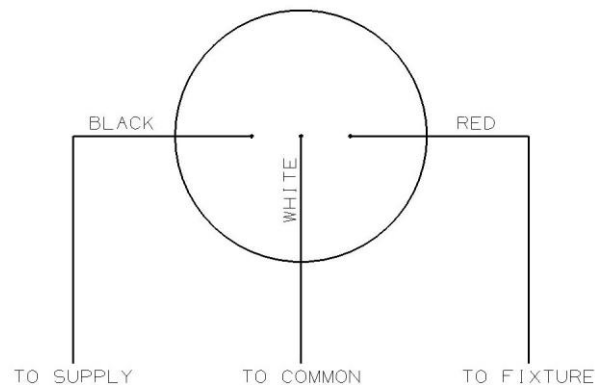

**Fig. 1**

## **REMEMBER TO SAVE THESE SHEETS FOR MAINTENANCE PERSONNEL**

Technical information, advice and recommendations contained in these documents are based on information that Killark believes to be reliable. All the information and advice contained in these documents is intended only for use by persons having been trained and possessing the requisite skill and know-how and to be used by such persons only at their own discretion and risk. The nature of these instructions is informative only and do not cover all of the details, variations or combinations in which this equipment may be used, its storage, delivery, installation, check out, safe operation, and maintenance. Since conditions of use of the product are outside of the care, custody and control of Killark, the purchaser should determine the suitability of the product for its intended use, and assumes all risk and liability whatsoever in connection therewith.