

installation over non-feed outlet boxes.

LITECONTROL

litecontrol.com | (781 294 0100)

 
INSTALLATION INSTRUCTIONS

P/C 510481-1000

FIXTURE TYPE___

FAI/ACC, FAI/ACC/V, FAI/ACC/F PID59/98 FIELD ADJUSTABLE AIRCRAFT CABLE ASSEMBLIES

PG. 2 OF 2



FAI/ACC/F: Making sure that outlet box is flush with ceiling, mount support

strap to outlet box with outlet box screws and #8 washers.

Make wiring connections at box and let feed cord hang down.

Press universal bushing into canopy and raise canopy to

support strap while leading the feed cord thru bushing.

Screw cable sleeve onto support strap stud making sure that

canopy is up against ceiling.

5. INSTALLATION OF FEED CORD INTO FIXTURE: (CATALOG DESIGNATOR "FAI/ACC/F")

Note: Feed cord is shipped separately in bulk. Bushings and canopy are shipped in hardware package.

A) Remove a 5/8" knockout at feed location. Run feed cord down along aircraft cable and insert into knockout with strain relief bushing.

Both straight and right angle strain relief bushings have been provided: use the one which bests suits your particular wire routing situation and discard the other.

B) Make wiring connections inside fixture wireway in accordance with the NEC and any local codes.

C) Using the nylon tie fasteners provided, secure feed cord to cable every 4-5". Snip off loose ends of the fasteners.

AIRCRAFT CABLE

ISOMETRIC VIEW OF FIXTURE

LITECONTROL litecontrol.com | 781 294 0100

