



KIM LIGHTING

16555 East Gale Avenue
City of Industry, CA 91745-1788
626/968-5666 • FAX 626/968-5716



HUBBELL
Lighting

ArcheType™ X Flood Installation Instructions ARFX



WARNING: Fixtures must be grounded in accordance with local codes or the National Electrical Code. Failure to do so may result in serious personal injury.

MAINTENANCE INSTRUCTIONS: 

Make certain electricity is **off** before beginning maintenance procedures

1. For opening and closing of the fixture, refer to instructions and diagrams on other side of sheet.
2. A regularly scheduled maintenance program should be established to retain optimum light output and reduce heat retention. Dusting with a soft, clean, dry cloth is normally sufficient for the optics.

Do not use alkaline or acid cleaners on reflector surfaces.

NOTE: All wiring must be done by a qualified electrician.

KEEP THIS SHEET FOR FUTURE REFERENCE.

Tools Required: 3/16" Hex Wrench Ratchet 9/16" Socket



1. Loosen (2) 1/4" -20 hex socket bolts with 3/16" hex key.



2. Remove Arm Cover.




3. Loosen (4) 3/8" hex bolts with 9/16" socket and ratchet.



4. Insert wiring from line voltage into bottom of Floodlight.



5. Pull wiring from line voltage over the top of the tenon clamp.

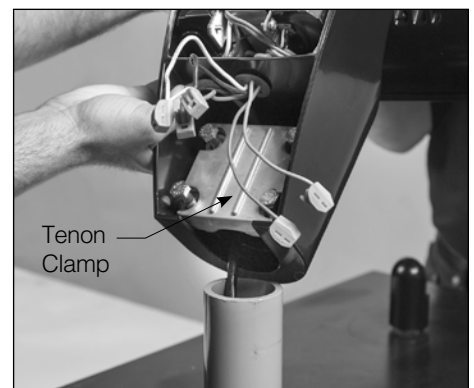

6. Slide fixture over tenon assembly. Fixture is capable of mounting to a 1" (1 5/8" OD) to 2" (2 3/8" OD) pipe tenon. Minimum 4" length required for adequate strength. For diameters less than 2" O.D., the tenon clamp will need to be removed and remounted with the 2 ribs facing inwards.

ArcheType™ X Flood Installation Instructions ARFX




7. Tighten (4) 3/8" hex bolts with 9/16" socket and ratchet. Casting has a $\pm 5^\circ$ tilt allowance for leveling. Tightening the top bolts first, angles the fixture towards rear. Tightening bottom bolts first, angles fixture forward.




8. Make wire connections, black to voltage, white to neutral/common, green to ground. Bundle wires neatly above tenon clamp.



9. Fixture head has a $+30^\circ$ to -5° tilt allowance for aiming. Loosen (2) bolts with 3/16" hex wrench. to adjust tilt on head. When head is at selected angle, tighten the two bolts sufficiently to eliminate unwanted movement.

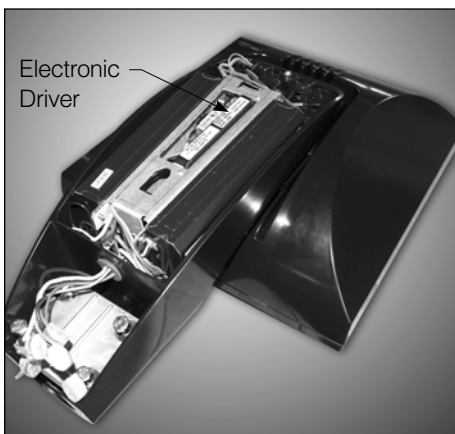

10. Avoid running wires over electronic driver to eliminate any chance of pinching wires.

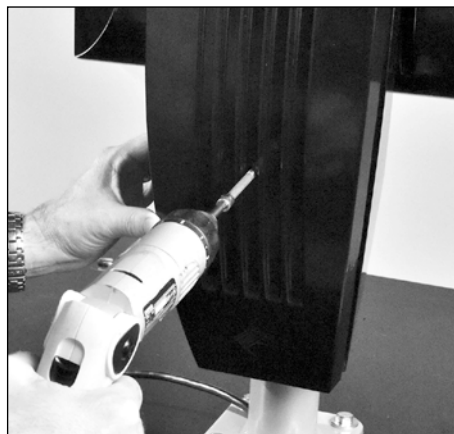

11. Attach cover and tighten with 3/16" hex key or drill bit.

For warranty see <http://www.hubbellighting.com/resources/warranty>

