

# SLA TID

#### **READ BEFORE INSTALLATION**


#### **Assembly Instructions:**

- 1. Attach conduit adapter to %" conduit. Seal conduit connections with weather resistant sealing compound.
- 2. Attach correct lampholder assemblies (see manufacturer's order) to fixture assemblies.
- 3. Hold fixture assembly up to conduit/ adapter assembly. Make the proper wire connections and insert bolts into position, making sure gasket is installed, and tighten.
- 4. Insert reflector end cap blocks in notch of end caps, wedged between rubber boot of lampholders and end caps.
- 5. Insert  $\frac{1}{2}$  20 x 2 $\frac{1}{2}$ " bolt through holes in end cap and block. Snug bolt so fixture can still be adjusted for proper aiming.
- 6. Adjust aiming level and tighten  $\frac{1}{4}$ -20 ×  $2\frac{1}{2}$ " bolt.
- 7. Install lamps, and energize fixture.

CAUTION: Do not install lamps when fixture is energized. It could result in premature ballast failure and shorting out of socket assemblies.


#### Notes:

- · All socket housing assemblies are sealed and water resistant.
- · Weatherproof gasket secured in conduit adapter cover.
- Optional "DR" extruded, high impact lens. Recommended for severe cold weather for proper lamp starting.
- · Self-centering, weather resistant seal between lamp and socket housings.
- Die cast aluminum socket housings, covers, end reflector blocks, and end caps.

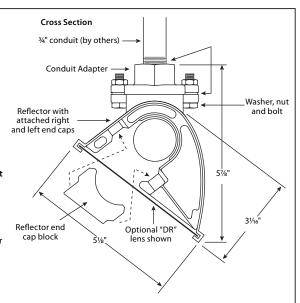

Columbia Lighting is not responsible for damage due to improper installation or handling. Recommend using lamps rated for outdoor use.

Note: All lamps, conduit, condulets and wiring to be supplied by others

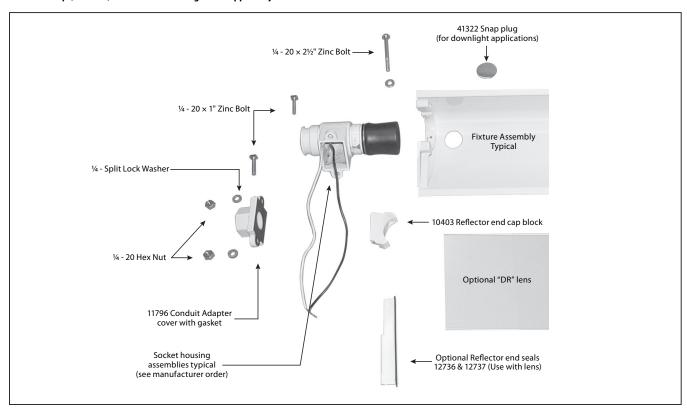


Page 1/3 Rev. 08/11/09 INDUSTRIALS / SLA TID






# SLA TID

### **RECOMMENDED MOUNTING**

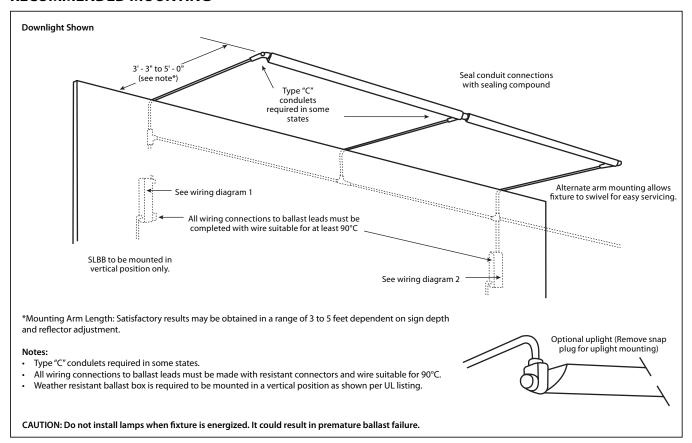

### **RECOMMENDED AIMING FOR SLA UNITS**

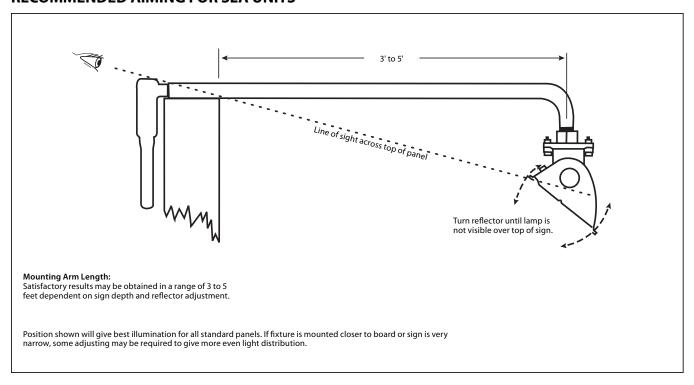


Page 2/3 Rev. 08/11/09 INDUSTRIALS / SLA TID






#### MOUNTING DIMENSIONS

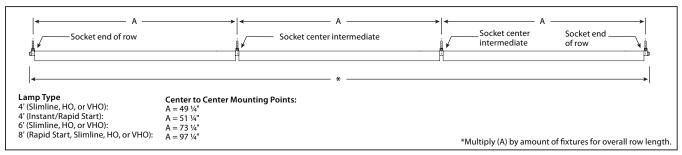

- Columbia Lighting is not responsible for damage due to improper installation or handling.
- Use outdoor rated lamps only on outdoor applications.

## **WIRING DIAGRAMS (COMMON)**

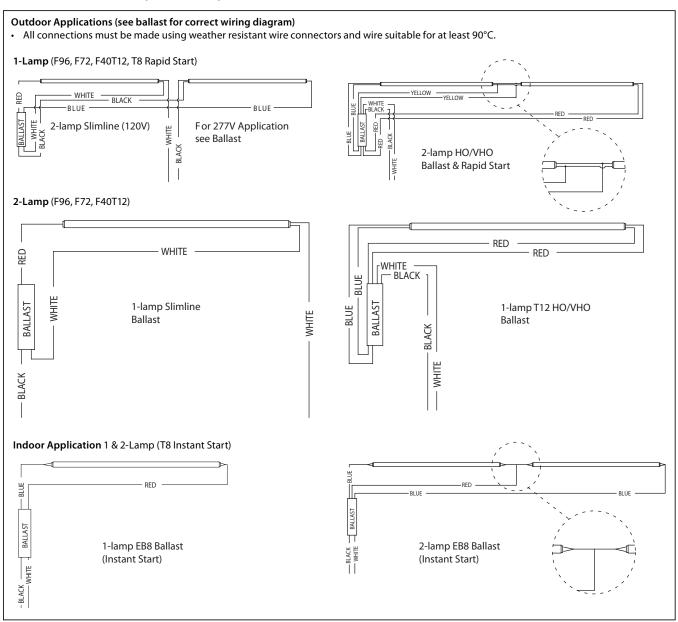

Page 3/3 Rev. 08/11/09 INDUSTRIALS / SLATID

