

## WIRELESS TORQUE INDICATOR

## **AVOID EXCESSIVE TORSIONAL LOADING**

Using the Wireless Chance® Torque Indicator, you can install screw anchors to a pre-determined torque value, which gives a positive indication of anchor holding capacity in any soil type.

The Indicator mounts between the Kelly bar adapter and drive tool (or locking dog assembly). The LCD display is easy to read in full daylight and gives the operator a direct readout of installation torque at all times.



- Operational temperature range: -30° to 80°C (-22° to 175° F)
- Accuracy: ±500ft-lb at any reading
- Torque is measured using strain gauges
- No shear pins to replace
- Powered by a standard 9V battery
- Base unit with wireless display
  - Torque is displayed on Base Unit and on Wireless Display
  - Multiple Wireless Display units can be linked to Base Unit
  - Solid one-piece spool design to withstand bending loads. Top and bottom flange, each provides six holes tapped 12"- 13 on a 5-1⁄4" bolt circle and twelve holes tapped 58"- 11 on a 7-5⁄8" bolt circle.



Base Unit



Wireless Display

Catalog Number	Description
C3031689NG	Base Indicator with Wireless Display Screen
C3031723	Wireless Display Screen

