

PVC END CAP INSTALLATION INSTRUCTIONS

- 1 Verify that the solvent end cap is the correct size for the PVC pipe.
2. For solvent welding, refer to ASTM D 2855.

IMPORTANT

For use on:
PVC gas pipe meeting the requirements of ASTM D 2513

Pressure Rating: 100 psig MAOP