

XLD0001A Junction Box, Ver. 2

Field Installation Kit Instructions

Confidentiality Notice

This manual is provided solely as an operational, installation, and maintenance guide and contains sensitive business and technical information which is confidential and proprietary to GAI-Tronics. GAI-Tronics retains all intellectual property and other rights in or to the information contained herein, and such information may only be used in connection with the operation of your GAI-Tronics product or system. This manual may not be disclosed in any form, in whole or in part, directly or indirectly, to any third party.

Installation

Mount the Junction box in an appropriate location that will be accessible for the future additions or circuit test measurements.

Two (2) captive fasteners secure the junction box cover; the fasteners may be operated with a screwdriver or by hand. Releasable cable ties are provided with the junction box for strain relief.



Using the keyholes located in the base of the unit is the customer's responsibility. #8 hardware is recommended.

Internal Connections

Pins 1-15 of connectors J1-J6 have a 1:1 relationship with pins 1-15 of connector P1 (15 pin D). Refer to the chart below for an example:

XLD0001A Connection Chart

P1 Connections	J1 Pin#	J2 Pin#	J2 Pin#	J4 Pin#	J5 Pin#	J6 Pin#
P1-1	1	1	1	1	1	1
P1-2	2	2	2	2	2	2
P1-3	3	3	3	3	3	3
P1-4	4	4	4	4	4	4
P1-5	5	5	5	5	5	5
P1-6	6	6	6	6	6	6
P1-7	7	7	7	7	7	7
P1-8	8	8	8	8	8	8
P1-9	9	9	9	9	9	9
P1-10	10	10	10	10	10	10
P1-11	11	11	11	11	11	11
P1-12	12	12	12	12	12	12
P1-13	13	13	13	13	13	13
P1-14	14	14	14	14	14	14
P1-15	15	15	15	15	15	15