
INSTALLATION INSTRUCTIONS:

- DO NOT REMOVE THE PILOT CUP.
 IT CONFINES AND GUIDES THE STRANDS FOR EASY INSERTION.
 STRAND MUST BE CLEAN, STRAIGHT, IN LAY AND FREE OF BURRS.
 INSERT STRAND INTO PILOT CUP.
 NOTE: STRAND DISPLACES PILOT CUP.

 4. STRAND SHOULD EXTEND BEYOND GRIPPING UNIT WHEN ADJUSTED TO DESIRED TENSION.

CATALOG NUMBER	PRIMARY STRAND APPLICATION	RANGE (IN)	RANGE (MM)	DIMENSIONS IN INCHES		
				Α	В	С
GDE-5100	1/4"	0.240-0.253	6.11-6.44	9.2	5.7	1.4
GDE-5101	5/16"	0.310-0.335	7.89-8.53	9.25	5.6	1.5
GDE-5101L	5/16"	0.310-0.335	7.89-8.53	13.1	9.5	1.5
GDE-5102	3/8"	0.360-0.405	9.16-10.31	11.5	7.1	2.0
GDE-5102L	3/8"	0.360-0.405	9.16-10.31	16.5	12.0	2.0

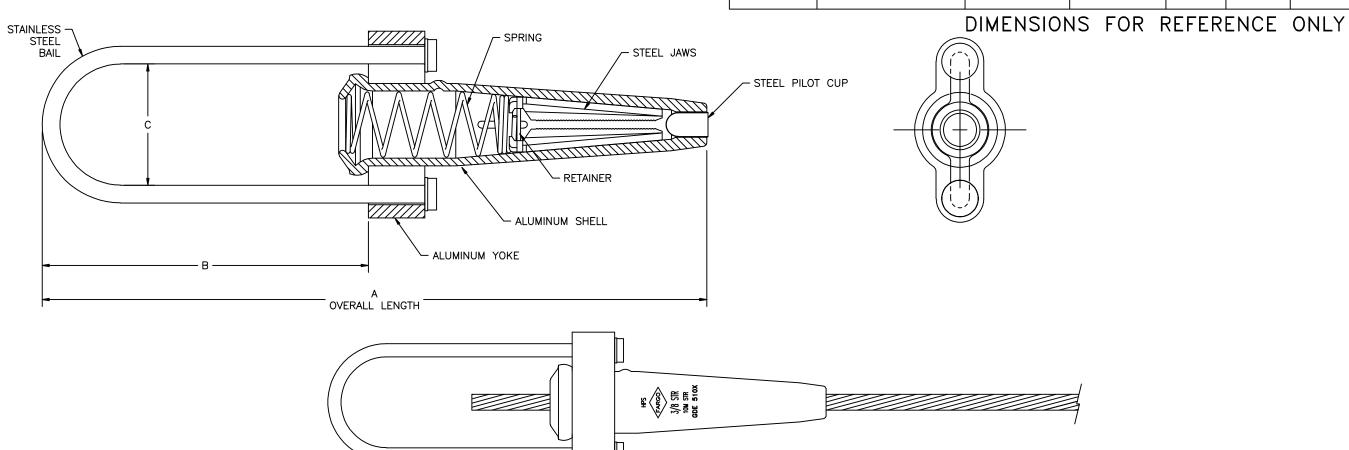

			APS 3/8 S/R 104 S/R GDE 510X				
17472	03/13/06	BAF	SAS	FARGO*	"HIRRFII" PAWER CYCTEMO		
EC #	DATE	CHG BY	RESP ENG	TOLERANCE CHART POWER SYSTEMS TO THE POWER SYSTEMS			
DESC OF DWG: ADDED ITEM GDE-5101L.				CONFIDENTIAL: THIS DRAWING AND ITS CONTENTS ARE CONFIDENTIAL AND THE EXCLUSIVE PROPERTY OF HUBBELL POWER SYSTEMS. NO PUBLICATION,	SALES DRAWING GDE 510X		
 REASON (S) FO DISPOSITION OF				DISTRIBUTION OR COPIES MAY BE MADE WITHOUT THE WRITTEN CONSENT OF HUBBELL POWER SYSTEMS. HUBBELL POWER SYSTEMS UNPUBLISHED ALL RIGHTS RESERVED UNDER THE COPYRIGHT LAWS.	B CC = 17555 CDF 510Y		