

Truck Boom Leakage-Current Monitor

By Chance Lineman Tools & Equipment
Catalog # T4070327

To alert utility-line workers of overcurrent conditions on truck booms, the Sentinel sounds an alarm if leakage current reaches pre-set level. The leakage setting adjusts from 1 to 1,000 microamperes in resolution increments of 0.1 microamp. The audible warning eliminates the need to watch the actual current level, continuously displayed on the Sentinel's digital LCD screen. The alarm sounds immediately upon overcurrent and continues until the condition is corrected. To also trigger a truck horn or other external alarm, a jack on instrument panel accepts a standard 'A' two-conductor phone plug. A test terminal on the panel permits a simple continuity check of the monitor leads prior to each operation. Before each use, the instrument automatically performs a rapid electronic selftest. Simple operating steps are printed on the inside lid panel. A detailed instruction sheet also comes with each unit.

Features

- Mounts on truck body and hardwires into truck's 12-Volt system, eliminating need for battery changes
- The alarm sounds immediately upon overcurrent and continues until condition is corrected, eliminating the need to watch the actual current level that is continuously displayed on the digital LCD screen
- Jack on instrument panel accepts a standard 'A' two-conductor phone plug to also trigger a truck horn or other external alarm
- Automatically performs a rapid electronic self test before each use, and a test terminal on the panel permits a simple continuity check of monitor leads prior to each operation
- Simple operating steps printed on the inside lid panel, and a detailed instruction sheet is included

General

Catalog Number	T4070327
EU RoHS Indicator	No
Style	Truck Boom Leakage-Current Monitor



UPC 096359060208

Dimensions

Weight 14.7 lb
WeightMetric 6.66 kg

Certifications And Compliance

Buy American Compliant Contact Manufacturer

Logistics

Pallet Quantity 36
Standard Package 1

Product Assets

[Catalogs - Instruments and Meters](#)
[Installation Manuals - CHANCE Sentinel Operating Instructions](#)
[Spanish](#)
[Installation Manuals - CHANCE Sentinel Operating Instructions](#)
[Specifications - T4070327](#)