



# PowerTrak® Type E & EF

By Gleason Reel

PowerTrak E & EF are cable and hose carriers with rugged steel side chains and aluminum or steel carrier bars, ideal for harsh environments and high-speed operation. Links are high-strength, low-alloy steel. Low friction disks placed between links enable smooth function, and reduce wear, drag, and operating noise. Stainless steel material options are available for corrosive environments – please consult factory.

E Trak are designed for use with equipment in harsh environments, including machine tools, robotics, gantry cranes, loaders, shuttle cars, gas/laser cutting torches, and more. Standard model sizes include 25E, 35E, 38E, 48E, 55E, 60E, 80E, 100E, and higher. For further custom applications, please consult factory.

EF Trak are designed for use with equipment in the harshest environments (steel mills, oil and gas) such as: rail mounted equipment, coil handling cars, and more. Bolted construction and flanged links make for a much stronger, more robust assembly. Standard model sizes include 55EF, 60EF, 80EF, 100EF, and higher. For further custom applications, please consult factory.

## Features

- 2:2 Flat Link Design
- Retaining Ring Fasteners
- High Strength, Low Alloy Steel Construction
- Anti Friction Discs
- Multiple Carrier Types
- Full Range of Sizes
- Multiple Radii
- Variable Widths

## General

|        |                  |
|--------|------------------|
| Series | PowerTrak E & EF |
| Type   | Standard Track   |

## Product Assets

Brochures - PowerTrak Cable& Hose Carriers

- Engineering Drawing - PT80E-23 DXF
- Engineering Drawing - PT45E-57 DWG
- Engineering Drawing - PT45E-11 DXF
- Engineering Drawing - PT28E-29 DXF
- Engineering Drawing - PT60E-14 DXF
- Engineering Drawing - PT60E-29 DWG
- Engineering Drawing - PT48E-57 DWG
- Engineering Drawing - PT35E-15 DXF
- Engineering Drawing - PT55F-15 DXF
- Engineering Drawing - PT55F-11 DWG
- Engineering Drawing - PT80E-23 DWG
- Engineering Drawing - PT100E19 DXF
- Engineering Drawing - PT80E-10 DXF



- Engineering Drawing - PT45E-24 DXF
- Engineering Drawing - PT45E-11 DWG
- Engineering Drawing - PT28E-29 DWG
- Engineering Drawing - PT60E-24 DXF
- Engineering Drawing - PT60E-14 DWG
- Engineering Drawing - PT55F-36 DXF
- Engineering Drawing - PT55F-11 DXF
- Engineering Drawing - PT48E-24 DXF
- Engineering Drawing - PT80E-19 DXF
- Engineering Drawing - PT80E-10 DWG
- Engineering Drawing - PT100E19 DWG
- Engineering Drawing - PT25E-80 DXF
- Engineering Drawing - PT45E-24 DWG
- Engineering Drawing - PT38E-78 DXF
- Engineering Drawing - PT60E-24 DWG
- Engineering Drawing - PT60E-11 DXF
- Engineering Drawing - PT80F-19 DXF
- Engineering Drawing - PT48E-24 DWG
- Engineering Drawing - PT48E-11 DWG
- Engineering Drawing - PT55E-36 DXF
- Engineering Drawing - PT60F-29 DXF
- Engineering Drawing - PT80E-19 DWG
- Engineering Drawing - PT55E-15 DWG
- Engineering Drawing - PT45E-15 DXF
- Engineering Drawing - PT38E-78 DWG
- Engineering Drawing - PT60E-11 DWG
- Engineering Drawing - PT35E-75 DXF
- Engineering Drawing - PT60E-20 DXF
- Engineering Drawing - PT25E-80 DWG
- Engineering Drawing - PT100F25 DXF

Engineering Drawing - PT55E-30 DXF  
Engineering Drawing - PT48E-15 DXF  
Engineering Drawing - PT80F-19 DWG  
Engineering Drawing - PT60F-29 DWG  
Engineering Drawing - PT38E-60 DXF  
Engineering Drawing - PT38E-35 DWG  
Engineering Drawing - PT60F-14 DXF  
Engineering Drawing - PT55E-18 DWG  
Engineering Drawing - PT35E-75 DWG  
Engineering Drawing - PT60E-20 DWG  
Engineering Drawing - PT55F-36 DWG  
Engineering Drawing - PT25E-11 DWG  
Engineering Drawing - PT25E-51 DXF  
Engineering Drawing - PT55E-24 DXF  
Engineering Drawing - PT80F-12 DXF  
Engineering Drawing - PT100F25 DWG  
Engineering Drawing - PT28E-61 DXF  
Engineering Drawing - PT60F-24 DXF  
Engineering Drawing - PT38E-15 DXF  
Engineering Drawing - PT60F-14 DWG  
Engineering Drawing - PT25E-51 DWG  
Engineering Drawing - PT38E-60 DWG  
Engineering Drawing - PT35E-15 DWG  
Engineering Drawing - PT55F-30 DWG  
Engineering Drawing - PT55E-36 DWG  
Engineering Drawing - PT55E-18 DXF  
Engineering Drawing - PT35E-52 DXF  
Engineering Drawing - PT48E-15 DWG  
Engineering Drawing - PT80F-12 DWG  
Engineering Drawing - PT100F19 DXF  
Engineering Drawing - PT80F-23 DXF  
Engineering Drawing - PT45E-75 DXF  
Engineering Drawing - PT28E-61 DWG  
Engineering Drawing - PT60F-11 DXF  
Engineering Drawing - PT55E-24 DWG  
Engineering Drawing - PT60F-24 DWG  
Engineering Drawing - PT38E-50 DXF  
Engineering Drawing - PT38E-15 DWG  
Engineering Drawing - PT25E-29 DXF  
Engineering Drawing - PT55E-11 DWG  
Engineering Drawing - PT55E-30 DWG  
Engineering Drawing - PT35E-52 DWG  
Engineering Drawing - PT35E-11 DXF  
Engineering Drawing - PT55F-24 DWG  
Engineering Drawing - PT55F-30 DXF  
Engineering Drawing - PT100F19 DWG  
Engineering Drawing - PT80F-23 DWG  
Engineering Drawing - PT80F-10 DXF  
Engineering Drawing - PT48E-11 DXF  
Engineering Drawing - PT45E-75 DWG  
Engineering Drawing - PT28E-45 DXF  
Engineering Drawing - PT60F-20 DXF  
Engineering Drawing - PT38E-50 DWG  
Engineering Drawing - PT38E-11 DXF  
Engineering Drawing - PT60F-11 DWG  
Engineering Drawing - PT55E-11 DXF  
Engineering Drawing - PT35E-24 DXF  
Engineering Drawing - PT55F-24 DXF  
Engineering Drawing - PT35E-11 DWG  
Engineering Drawing - PT55F-18 DWG

Engineering Drawing - PT48E-75 DXF  
Engineering Drawing - PT25E-29 DWG  
Engineering Drawing - PT80F-10 DWG  
Engineering Drawing - PT100E25 DXF  
Engineering Drawing - PT80E-12 DXF  
Engineering Drawing - PT45E-15 DWG  
Engineering Drawing - PT28E-45 DWG  
Engineering Drawing - PT60F-20 DWG  
Engineering Drawing - PT48E-75 DWG  
Engineering Drawing - PT45E-57 DXF  
Engineering Drawing - PT60E-29 DXF  
Engineering Drawing - PT38E-35 DXF  
Engineering Drawing - PT25E-11 DXF  
Engineering Drawing - PT38E-11 DWG  
Engineering Drawing - PT55F-15 DWG  
Engineering Drawing - PT55F-18 DXF  
Engineering Drawing - PT48E-57 DXF  
Engineering Drawing - PT55E-15 DXF  
Engineering Drawing - PT35E-24 DWG  
Engineering Drawing - PT80E-12 DWG  
Engineering Drawing - PT100E25 DWG  
Installation Manuals - E-Trak Splicing Instructions - PT25E thru PT48E 044523  
Installation Manuals - PT55E-NV2 Parts List 041185  
Installation Manuals - PT100EF-BC Parts List 041231  
Installation Manuals - PT28E-T1 Parts List 046135  
Installation Manuals - PT35E-SR Parts List 041161  
Installation Manuals - PT38E-RN Parts List 041166  
Installation Manuals - PT80EF-BC Parts List 041217  
Installation Manuals - PT80EF-WH Parts List 041222  
Installation Manuals - PT25E-RR Parts List 041147  
Installation Manuals - PT28E-R1 Parts List 041152  
Installation Manuals - PT28E-A1 Parts List 043684  
Installation Manuals - PT60E-HV2 Parts List 041198  
Installation Manuals - PT60EF-BC Parts List 041203  
Installation Manuals - PT100EF-WV2 Parts List 041237  
Installation Manuals - PT48E-RN Parts List 041179  
Installation Manuals - PT55E-HV2 Parts List 041184  
Installation Manuals - PT100E-WV2 Parts List 041230  
Installation Manuals - PT35E-TB Parts List 046136  
Installation Manuals - PT35E-RR Parts List 041160  
Installation Manuals - PT38E-BC Parts List 041165  
Installation Manuals - PT80E-HN Parts List 041211  
Installation Manuals - PT80E-WV2 Parts List 041216  
Installation Manuals - PT25E-RN Parts List 041146  
Installation Manuals - PT35E-A1 Parts List 043685  
Installation Manuals - PT80EB-WC Parts List 047675  
Installation Manuals - Cable/Hose Guidelines 043181  
Installation Manuals - PT60E-HN Parts List 041197  
Installation Manuals - PowerTrak On-Edge Instructions PT-1\_4  
Installation Manuals - PT60E-WV2 Parts List 041202  
Installation Manuals - PT48E-BC Parts List 041178  
Installation Manuals - PT55E-HN Parts List 041183  
Installation Manuals - PT100EF-NV2 Parts List 041234  
Installation Manuals - PT55E-WH Parts List 041187  
Installation Manuals - PT55EF-NV2 Parts List 041192  
Installation Manuals - PT25E-T1 Parts List 046133  
Installation Manuals - PT38E-SR Parts List 041168  
Installation Manuals - PT45E-RN Parts List 041173  
Installation Manuals - PT80EF-HV2 Parts List 041219

Installation Manuals - PT100E-BC Parts List 041224  
Installation Manuals - PT25E-SS Parts List 041149  
Installation Manuals - PT28E-RR Parts List 041154  
Installation Manuals - PT45E-TR1 Parts List 046147  
Installation Manuals - PT60E-WC Parts List 041200  
Installation Manuals - PT60EF-HV2 Parts List 041205  
Installation Manuals - PT100EF-WC Parts List 041235  
Installation Manuals - PT48E-SR Parts List 041181  
Installation Manuals - PT55E-WC Parts List 041186  
Installation Manuals - PT28E-TB Parts List 046134  
Installation Manuals - PT38E-RR Parts List 041167  
Installation Manuals - PT45E-R1 Parts List 041172  
Installation Manuals - PT80EF-HN Parts List 041218  
Installation Manuals - PT80EF-WV2 Parts List 041223  
Installation Manuals - PT25E-SR Parts List 041148  
Installation Manuals - PT28E-RN Parts List 041153  
Installation Manuals - PT25E-A1 Parts List 043683  
Installation Manuals - PT48E-R1 Parts List 046496  
Installation Manuals - PT60E-NV2 Parts List 041199  
Installation Manuals - PT60EF-HN Parts List 041204  
Installation Manuals - PT100EF-WH Parts List 041236  
Installation Manuals - PT48E-RR Parts List 041180  
Installation Manuals - PT45E-RB Parts List 046144  
Installation Manuals - PT60EF-WH Parts List 041208  
Installation Manuals - PT80E-NV2 Parts List 041213  
Installation Manuals - PT25E-AC Parts List 041143  
Installation Manuals - PT100EF-HN Parts List 041232  
Installation Manuals - PT55EF-BC Parts List 041189  
Installation Manuals - PT55EF-WH Parts List 041194  
Installation Manuals - PT45E-A1 Parts List 041170  
Installation Manuals - Maintenance Bulletin for PT55E/EF-100E/EF  
Installation Manuals - PT45E-SR Parts List 041175  
Installation Manuals - PT80EF-WC Parts List 041221  
Installation Manuals - PT100E-HV2 Parts List 041226  
Installation Manuals - PT28E-BC Parts List 041151  
Installation Manuals - PT35E-TRB Parts List 046140  
Installation Manuals - PT35E-AC Parts List 041156  
Installation Manuals - PT45E-RB1 Parts List 046145  
Installation Manuals - PT60EF-WC Parts List 041207  
Installation Manuals - PT80E-HV2 Parts List 041212  
Installation Manuals - PT100EF-HV2 Parts List 041233  
Installation Manuals - PT55E-WV2 Parts List 041188  
Installation Manuals - PT55EF-WC Parts List 041193

Installation Manuals - PT25E-TB Parts List 046132  
Installation Manuals - PT45E-AC Parts List 041169  
Installation Manuals - PT45E-RR Parts List 041174  
Installation Manuals - PT80EF-NV2 Parts List 041220  
Installation Manuals - PT100E-HN Parts List 041225  
Installation Manuals - PT28E-AC Parts List 041150  
Installation Manuals - PT35E-TR1 Parts List 046141  
Installation Manuals - PT28E-SR Parts List 041155  
Installation Manuals - PT45E-TRB Parts List 046146  
Installation Manuals - PT60E-WH Parts List 041201  
Installation Manuals - PT60EF-NV2 Parts List 041206  
Installation Manuals - PT100E-WH Parts List 041229  
Installation Manuals - PT35E-T1 Parts List 046137  
Installation Manuals - PT35E-RN Parts List 041159  
Installation Manuals - PT38E-A1 Parts List 041164  
Installation Manuals - PT45E-TB Parts List 046142  
Installation Manuals - PT80E-BC Parts List 041210  
Installation Manuals - PT80E-WH Parts List 041215  
Installation Manuals - PT25E-R1 Parts List 041145  
Installation Manuals - PT100E-WC Parts List 047682  
Installation Manuals - PT38E-R1 Parts List 043686  
Installation Manuals - PT55EF-HV2 Parts List 041191  
Installation Manuals - PowerTrak Maintenance Instructions PT-1\_2  
Installation Manuals - PT60E-BC Parts List 041196  
Installation Manuals - PT48E-A1 Parts List 041177  
Installation Manuals - PT55E-BC Parts List 041182  
Installation Manuals - PT100E-WC Parts List 041228  
Installation Manuals - PT35E-RB Parts List 046138  
Installation Manuals - PT35E-R1 Parts List 041158  
Installation Manuals - PT38E-AC Parts List 041163  
Installation Manuals - PT45E-T1 Parts List 046143  
Installation Manuals - PT60EF-WV2 Parts List 041209  
Installation Manuals - PT80E-WC Parts List 041214  
Installation Manuals - PT25E-BC Parts List 041144  
Installation Manuals - PT55EF-HN Parts List 041190  
Installation Manuals - PT55EF-WV2 Parts List 041195  
Installation Manuals - PowerTrak Installation Instructions PT-1\_1  
Installation Manuals - PT45E-BC Parts List 041171  
Installation Manuals - PT48E-AC Parts List 041176  
Installation Manuals - PT100E-NV2 Parts List 041227  
Installation Manuals - PT35E-RB1 Parts List 046139  
Installation Manuals - PT35E-BC Parts List 041157  
Installation Manuals - PT35E-SS Parts List 041162  
Specifications - PowerTrak® Type E & EF



A Hubbell brand

©2025 Hubbell Incorporated. All rights reserved  
GRD-PID2108334-SPEC-EN | REV 3/2025