


## Features:

- 10" diameter 5 blade exhaust fan
- Adjustable thermostat
- Automatic gravity shutter
- Wire fan guard
- Totally enclosed motor
- UL listed for US and Canada
- Fixed blade wall vent(s) & winter cover(s) to prevent heat loss in cold weather. (see section 2.0)

## Technical Specs:

- 120 volt single phase
- 60 Hz
- 1/30 hp motor
- 1550 rpm
- 585cfm @ .00-In. SP
- Maximum 1.5 amps
- Maximum Ambient Temp. 104 degrees F

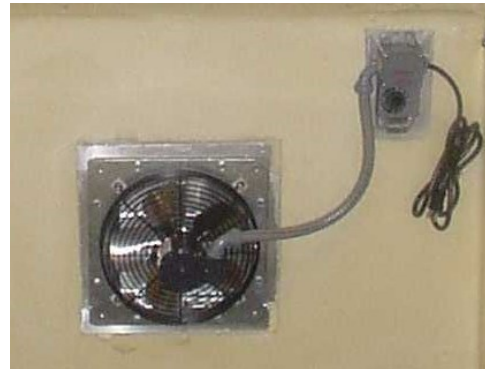


Fan location, vent size and quantity will vary depending on the size of the enclosure. Contact Customer service for more information.

## Installation:

- Contractors other than Hot Box are responsible for the installation of the G.F.I. protected 15 amp, 120v, single phase service and receptacle. All installations to be in accordance with the local and national codes.
- Simply plug the fan into the receptacle
- Adjust the thermostat to the desired temperature.

## Maintenance:

- Install the winter covers into the vents when temperatures hold in the region of 40°F or less for any prolonged period of time. The same rule applies in reverse when the weather warms again. **Winter covers must be removed when the fan is in use.**
- Keep the area around the automatic shutter free of objects that could impede air flow.
- Lubricate the motor sleeve bearings annually using S.A.E. 20 (non detergent) oil.

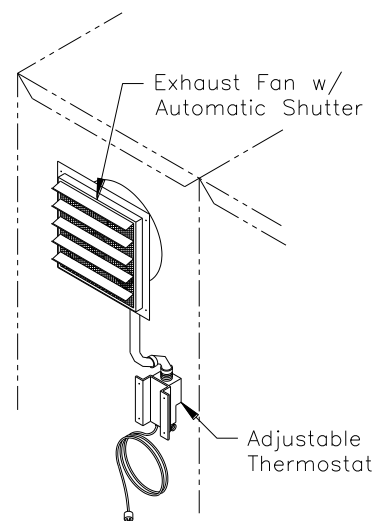

Hot Box  
3621 Industrial Park Drive  
Lenoir City, TN 37771

Contact Information  
Phone: (800) 346-3062  
hotboxsales@hubbell.com  
www.hot-box.com


### Features:

- 4" diameter aluminum fixed blade wall vent with foam rubber winter cover that is sized to be pushed inside the vent itself. It is pliable and soft, molding into the opening with out resistance.
- 12" x 12" aluminum fixed blade wall vent with integrated insect screen. Winter covers are included to help prevent heat loss in the winter. They slide against the back side of the vent and are constructed of the same stucco embossed aluminum as the enclosure. (non insulated)

Vent location and quantities vary depending on the size of the enclosure. Vents come fully installed.

### Maintenance:

- Install the winter covers when temperatures hold in the region of 40°F or less for any prolonged period of time. The same rule applies in reverse when the weather warms again. **Winter covers must be removed when the fan is in use.**

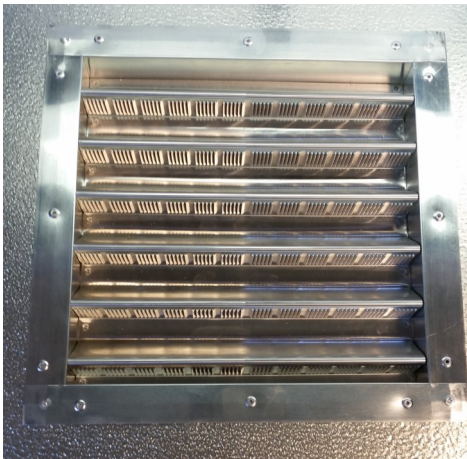

Hot Box  
3621 Industrial Park Drive  
Lenoir City, TN 37771

Contact Information  
Phone: (800) 346-3062  
hotboxsales@hubbell.com  
www.hot-box.com