

CONTACTOR P/N	BLOWOUT COIL & STATIONARY CONTACT P/N
58870-001	58851-101
58870-002	58851-102
58870-003	58851-103
58870-004	58851-104


NOTE: WHEN ORDERING REPLACEMENT PARTS BE SURE TO FURNISH SERIAL NUMBER AND CATALOG NUMBER WHICH ARE LOCATED ON THE NAMEPLATE. ALSO GIVE PART NUMBER & DESCRIPTION. **RPC-58870-1**

ITEM	DESCRIPTION	PART NO.	QTY.
1	#8-32 X .62 LG. ROUND HEAD SCREW	47241-104	3
2	#8 SPLIT LOCK WASHER	47252-064	3
3	BLOWOUT COIL & STATIONARY CONTACT ASSEMBLY (25 AMP BLOWOUT COIL)	58851-101	1
3	BLOWOUT COIL & STATIONARY CONTACT ASSEMBLY (5 AMP BLOWOUT COIL)	58851-102	1
3	BLOWOUT COIL & STATIONARY CONTACT ASSEMBLY (10 AMP BLOWOUT COIL)	58851-103	1
3	BLOWOUT COIL & STATIONARY CONTACT ASSEMBLY (15 AMP BLOWOUT COIL)	58851-104	1
4	.250-20 X 1.125 LG. STUD	66475-035	1
5	.250 SPLIT LOCK WASHER	47252-038	3
6	.250-20 HEX NUT	47253-021	1
7	#10 BRASS FLAT WASHER	47251-008	2
8	BASE ASSEMBLY	58875-001	1
9	LOCKOUT COIL	19971-001	1
10	STATOR ASSEMBLY	58663-000	1
11	OPERATING COIL	19970-000	1
12	.312-18 X 1.37 LG. STUD	57439-010	1
13	OPERATING COIL CORE	58660-001	1
14	CORE CAP	21440-000	1
15	.250-20 X .62 LG. FILLISTER HEAD SCREW	47244-147	1
16	OPERATING SPRING	08778-000	1
17	.250-20 X .375 LG. HEX HEAD SCREW	47246-059	2
18	SPRING ADJUSTING BRACKET	42960-000	1
19	.312-24 HEX NUT	47253-204	1
20	ADJUSTING SCREW	42899-000	1
21	ARMATURE ASSEMBLY	58878-000	1
22	ARMATURE HINGE PIN	18581-000	1
23	#10-32 BRASS HEX NUT	47254-009	1
24	#10 EXTERNAL TOOTH LOCK WASHER	47303-006	1
25	#10-32 X .37 LG. PAN HEAD SEMS SCREW	49137-083	1
26	FINGER BOARD	42005-000	1
27	FINGER SPRING	04657-000	1
28	MOVABLE FINGER	05721-000	1
29	SHUNT	04870-002	1
30	LOCKOUT COIL CORE	58880-000	1
31	.500 EXTERNAL RETAINING RING	57429-012	1
32	ARC SHIELD ASSEMBLY	42855-001	1
33	.250-20 X 1.50 LG. BRASS STUD	57438-039	2
34	.250 BRASS FLAT WASHER, .562 OD	47251-041	4
35	.250-20 BRASS HEX NUT	47254-011	6
36	PLUNGER AUXILIARY PARTS KIT	68011-003	A/R
37	#8-32 X 2.06 LG. ROUND HEAD SCREW (NOT SHOWN)	47241-261	A/R
38	#8 SPLIT LOCK WASHER (NOT SHOWN)	47252-006	A/R
39	AUXILIARY ASSEMBLY (NOT SHOWN)	67976-001	A/R
40	STATIONARY CONTACT SUPPORT	58661-001	1
41	BLOWOUT COIL SUPPORT L.H.	42872-000	1
42	BLOWOUT COIL SUPPORT R.H.	42871-000	1
43	BLOWOUT COIL CORE	42023-000	1
44	#10-24 X .37 LG. S.S. HEX HEAD SCREW	47779-042	2
45	#10 SPLIT LOCK WASHER	47252-065	2
46	STATIONARY CONTACT	02315-000	1
47	.250 BRASS FLATWASHER, .50 OD	47251-050	1
48	CUP WASHER	81279-061	1

NOTE: FOR ITEM 3, CHOOSE ONLY 1 ITEM (SEE CHART)

NOTE: AUXILIARY CONTROL CONTACT ASSEMBLY TO BE ORDERED SEPERATELY. REFER TO PRINT B-68011. AUXILIARY CONTROL CONTACT ASSEMBLY IS NOT INCLUDED WITH COMPLETE CONTACTOR ASSEMBLY.

INCLUDED ON ITEM 3 BLOWOUT COIL & STATIONARY CONTACT ASSEMBLY

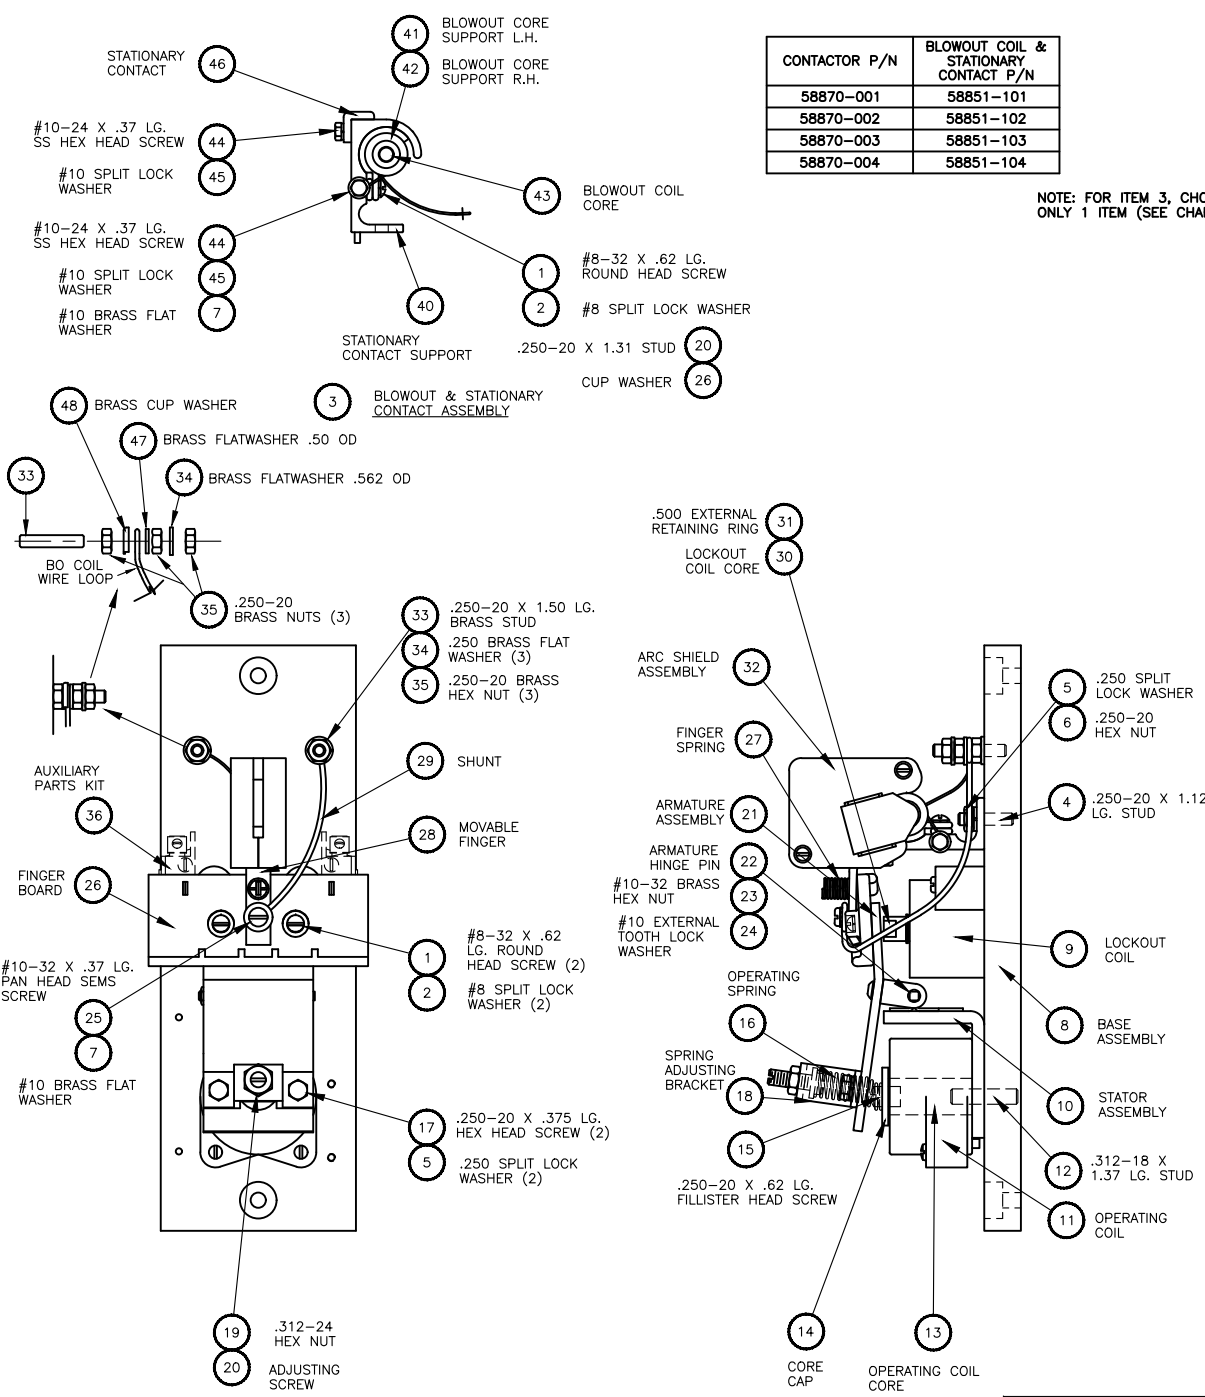

E 061419	LMH	ADD ITS 47 & 48 FCN A18-054	LINEAR	HOLE	ANGLES	SIZE 1 NC CONTACTOR RENEWAL PARTS BULLETIN 25 AMP DC BULL 5210
D 4-17-00	TLJ	REDRAWN TO CAD	0.X = ±.050	PLUNG = ±.002	DIMEN. ± 1°	
C 9-27-99	RR	WAS 68040-003	0.XX = ±.020	BEAM SPECIFIED	UNDM. 90° ±2°	
B 1-6-99	LMH	WAS 04870-000	0.XXX = ±.005			
A 9-3-92	BS/PJS	ECN 5210-181	CADD NO. 58870001	R.M.S.	DATE 10-11-79	DRG. NO. RPC-58870-1
Rev	DATE	BY	DESCRIPTION		DRG. NO.	1 OF 1

THIS DRAWING FILE AND THE DATA SHOWN IS PROPRIETARY AND CONFIDENTIAL AND THE SOLE PROPERTY OF HUBBELL INDUSTRIAL CONTROLS. DO NOT USE OR REPRODUCE WITHOUT WRITTEN APPROVAL OF HUBBELL.

Hubbell Industrial Controls, Inc.
4301 Cheyenne Dr., Archdale, NC 27263