


Master Panel CX16

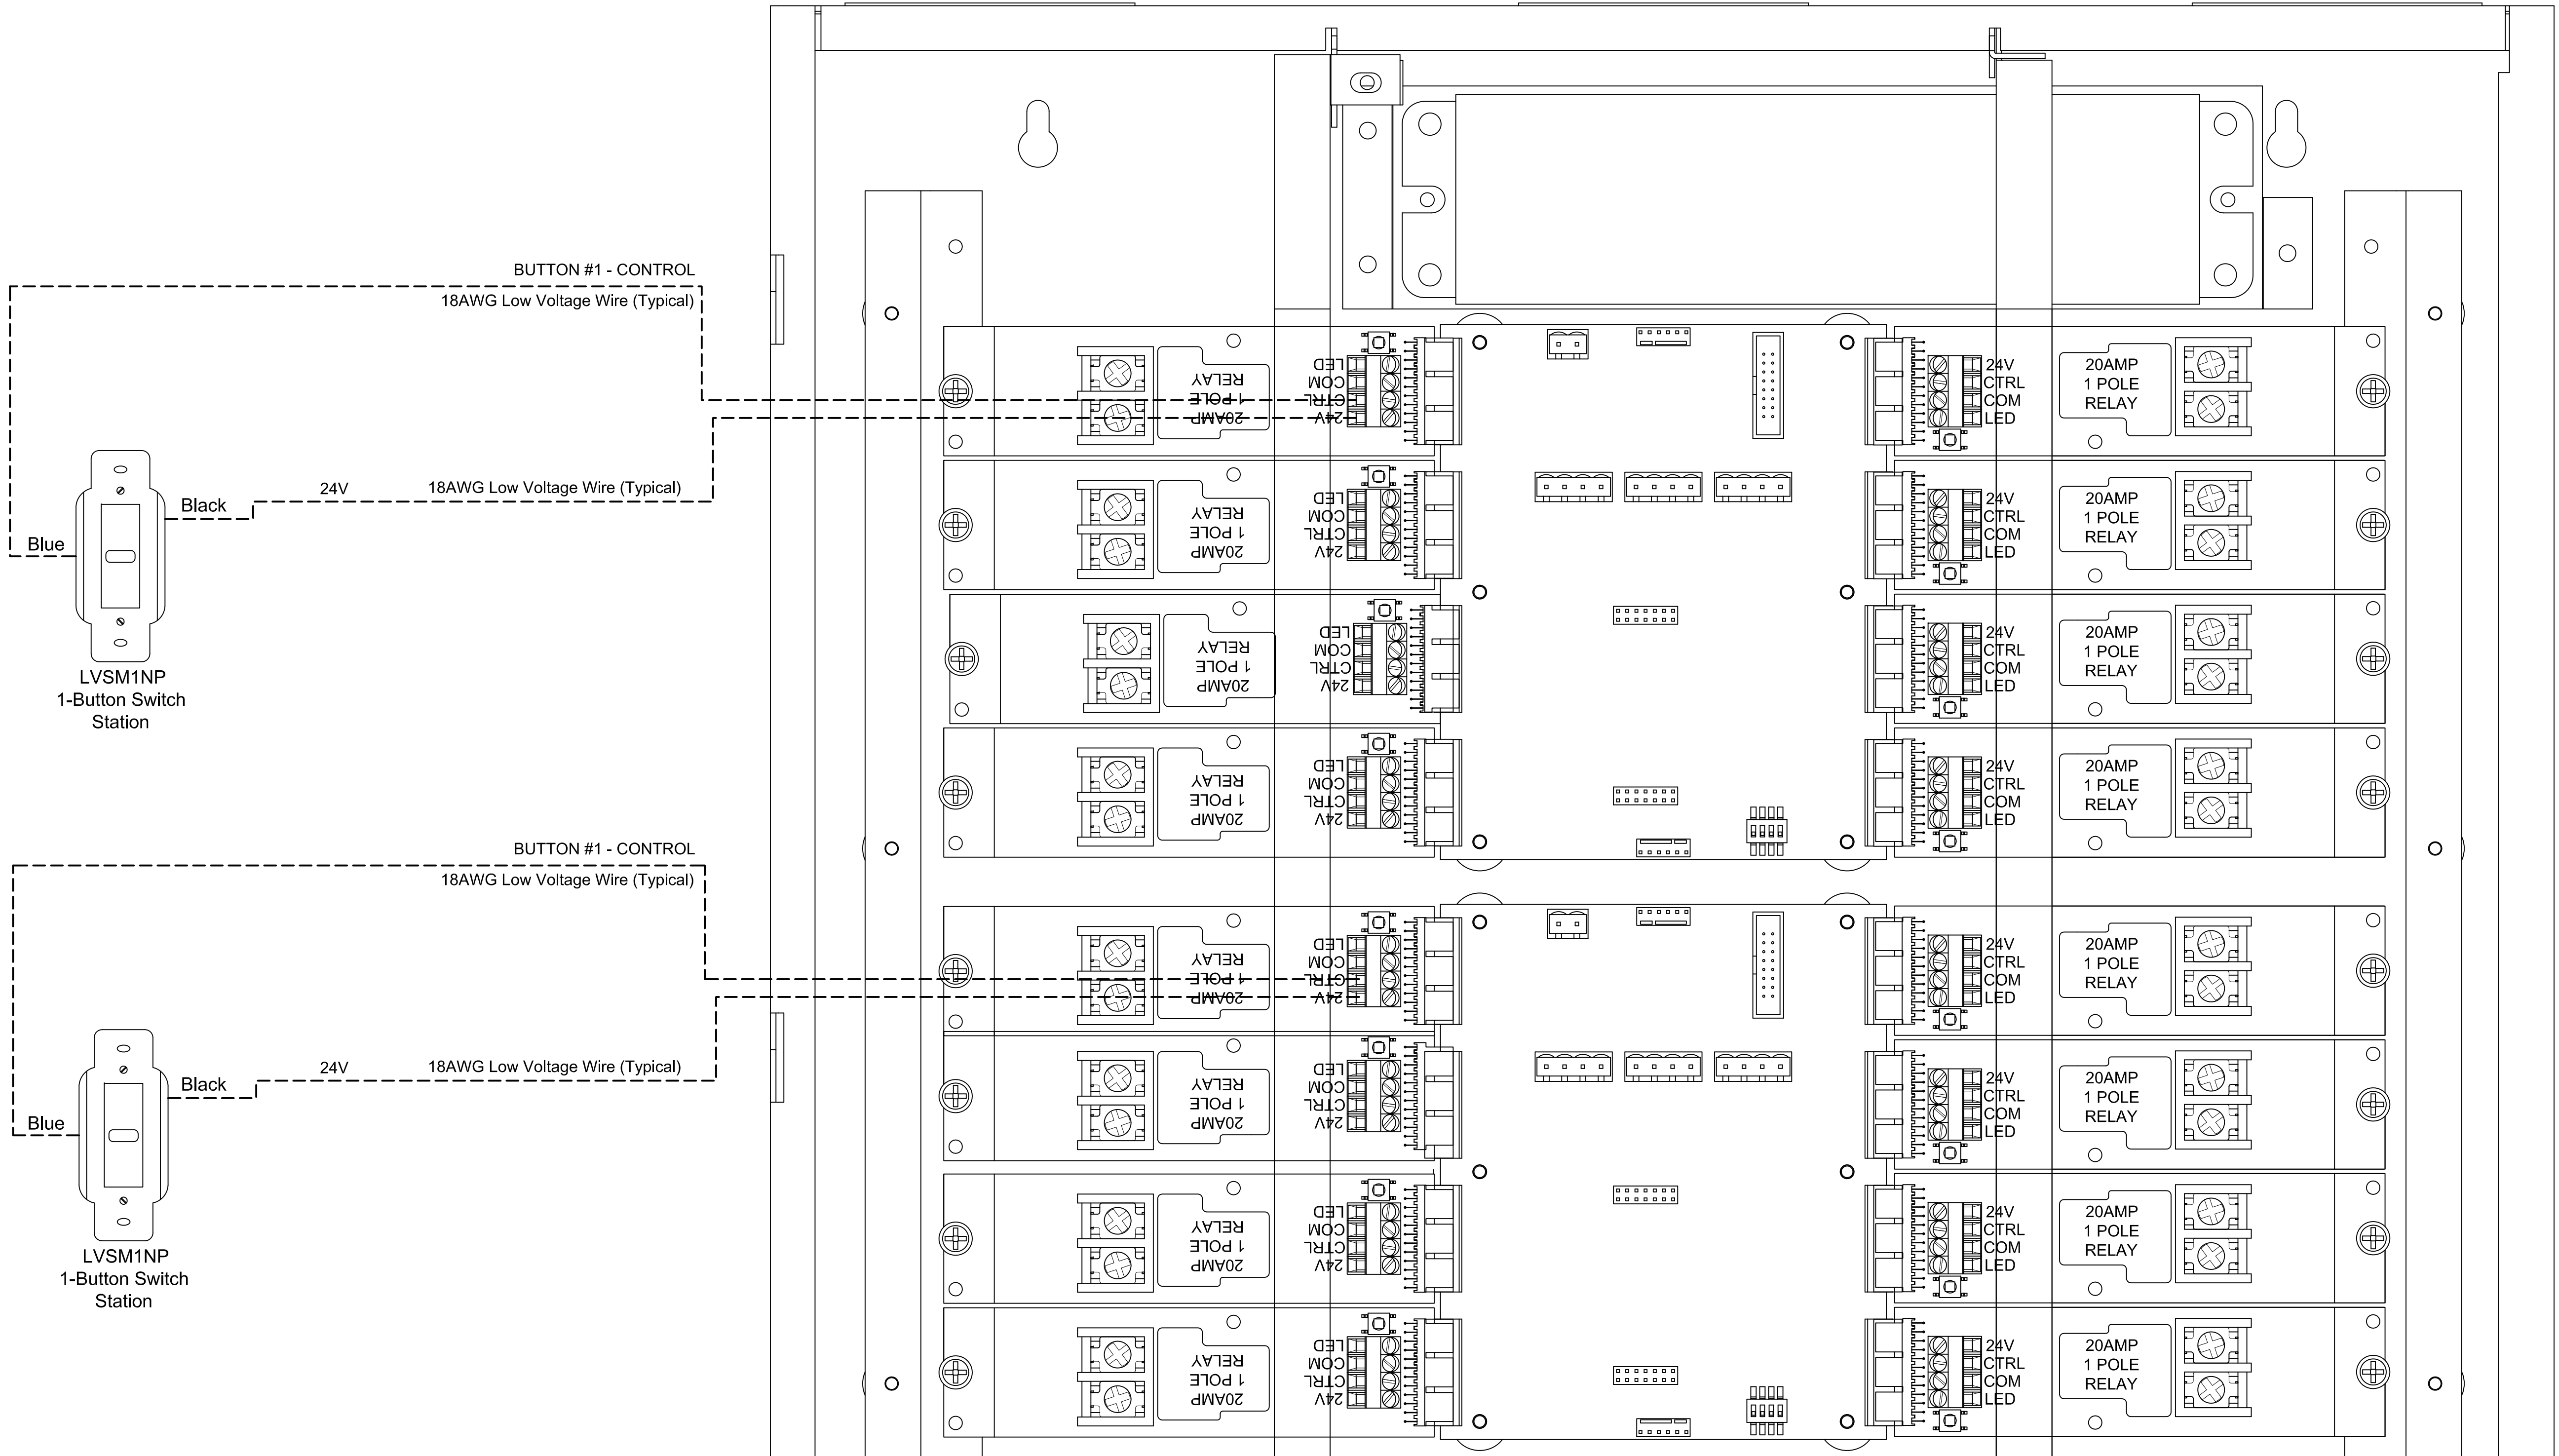


- NOTES:**
1. If an Area Controller is not used or manual configuration is not set for programming, then the default function will be Vacancy mode.
 - 1.1. After Occupancy is detected the switch setup will function in Vacancy for only the room controller/s that are wired within.
 2. The 24V required to operate the motion sensor is to be sourced from only one room controller. Do not connect the Red wire from multiple room controllers together.
 3. Only 2 Occupancy Sensors can be powered from any one port on a room controller.
 4. All switches must be addressed prior to programming.
 5. If the distance between the Signal Generating Devices (Area Controller, NX Panel, NXHDI or NXHNB) exceeds 100 meters (328 feet) of cable, an Ethernet Router (not provided by Hubbell Control Solutions) will need to be installed.

CX16 Panel with 2-LVSM1NP Switch Stations

9601 Dessau Road Building One
Austin, Texas 78754
www.Hubbell-Automation.com

HUBBELL
Control Solutions

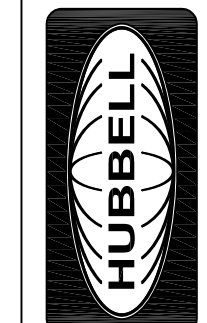

CX
1