


**Notes:**

1. Sensor is shipped with all dip switches in the OFF position (Factory Default)
2. Our product is meant to leak milliamps to the ground wire to produce a current so you can have power, in order to have the switch function.

<p>LHMTS1 Wiring Diagram</p>
 <p><b>Building Automation, Inc.</b></p>