



Notes:

1. Sensor is shipped with all dip switches in the OFF position (Factory Default)

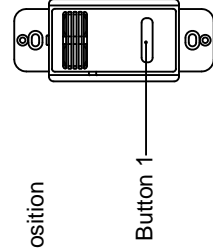

LHUSS1 Wiring Diagram
 Building Automation, Inc.