



# ***Installation Instructions and User Manual***

***For  
LiteGear®***

For 125VA/110W & 250VA/220W Mini-Inverter Power Systems

- Models:     **LG125S**   *Surface Mounted Version*  
              **LG125R**   *Recessed Wall Mounted Version*  
              **LG125T**   *Recessed Ceiling T-Grid Mounted Version*  
              **LG250S**   *Surface Mounted Version*  
              **LG250SI** *Surface Mounted Version w/ Self-Test*



# READ AND FOLLOW ALL SAFETY INSTRUCTIONS

## IMPORTANT SAFEGUARDS

When using electrical equipment, you should always follow basic safety precautions, including the following:

- 1. Read and follow all safety instructions.*
- 2. Do not install the LiteGear system outdoors.*
- 3. Do not let power supply cords touch hot surfaces.*
- 4. Do not install near gas or electric heaters or in other high-temperature locations.*
- 5. Use caution when servicing batteries. Battery acid can cause burns to skin and eyes. If acid is spilled on skin or in the eyes, flush with fresh water and contact a physician immediately.*
- 6. Equipment should be mounted in locations where it will not be readily subjected to tampering by unauthorized personnel.*
- 7. The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition and may void the warranty.*
- 8. Do not use this equipment for other than intended use.*
- 9. All servicing of this equipment must be performed by qualified service personnel.*

## SAVE THESE INSTRUCTIONS IMPORTANT SAFETY INSTRUCTIONS

The installation and use of this product must comply with all national, federal, state, municipal, or local codes that apply.

Please read this manual thoroughly before operating the LiteGear Inverter System.

***For technical assistance, contact Dual-Lite's Technical Support Center at 1-800-848-6439. Technicians are available during normal working hours (EST).***

# Table of Contents

<i>Description</i>	<i>Page</i>
<b>Section 100</b>	
<b>System Installation Instructions</b>	
101..... Unit Specification .....	4
102. .... Receiving, Moving and Storing Systems and Batteries .....	5
102.1..... Shipping Damage .....	5
102.2 .... Temporary Storage of Units and Batteries.....	5
103. .... Installation Requirements .....	5
103.2 .... High Altitude Operation.....	5
104. .... Cabinet Mounting.....	6
104.1 .... Tools Required.....	6
104.2 .... Mounting Hardware .....	6
104.3 .... Knockout Locations .....	6
104.4 .... Cabinet Mounting - Surface (-S) Models .....	6
104.5.... Cabinet Mounting - Surface (-R) Models .....	7
104.6.... Cabinet Mounting - Surface (-T) Models.....	7
105. .... AC Connectors.....	8
105.1 .... AC Wiring Preparations .....	8
105.2 .... AC Input, AC Output and DC Dimming Connections.....	8
..... Wiring Diagram 1 - 120VAC Connections .....	9
..... Wiring Diagram 2 - 277VAC Connections .....	9
..... Wiring Diagram 3 - Dimming Control (120-277VAC).....	10
106..... Battery Information.....	10
106.1..... Tools.....	11
106.2..... Battery Installation and Connections.....	11
..... Wiring Diagram .....	12
106.3..... Battery Connection Voltage Check .....	12
107..... Final Installation Checklist.....	13
108. .... System Start-Up Procedure .....	13
109..... Manual System Test .....	13
109.1 .... For LG125 and LG250 Models .....	13
109.2..... For LG250SI Model.....	14
110..... System Self-Test/Diagnostics.....	14
110.1..... Self-Test / Diagnostic Functions .....	14
110.2..... Self-Test / Diagnostic Indication .....	14
<b>Section 200</b>	
<b>Maintenance</b>	
200.1..... Safe Shut Down Procedure.....	15
200.2..... Routine System Maintenance .....	15
200.3..... Manual Routine Inverter Tests .....	15
200.4..... Replacement Fuses .....	16
200.5..... Routine Battery Inspection and Maintenance .....	16
200.6..... Battery Replacement Procedure .....	16
200.7..... Battery Disposal .....	16

# Section 100 System Installation Instructions

## 101. Specifications

### Input

- Input voltage: Universal 120 or 277VAC
- Input frequency: 60HZ  $\pm$ 2%
- Operating Temperature: 20°C to 30°C (68°F to 86°F)
- Input Surge Protection: Meets UL 924

### Output

- Output voltage: Universal 120 or 277VAC, 60HZ. Other voltages available upon request
- Output regulation: (static)  $\pm$ 5% based on a 0% - 100% resistive load
- Minimum loading: none required
- Output distortion: Less than 3% THD linear load
- Load power factor: .88 lead to .88 lag
- Output frequency:  $\pm$ 0.3 Hz during emergency
- Time to transfer to inverter after a utility power failure: <1 second

### Battery

- Battery type: Maintenance free sealed lead calcium
- Battery charger: Fully automatic dual-mode with temperature compensation
- Recharge time: Meets UL requirements (96 Hours)
- Battery protection: Automatic low-battery voltage disconnect and reverse polarity protection.
- Battery switch: Also used as battery isolator
- Standard battery: Sealed lead-calcium: 10-year life
- Battery voltage: 24 or 48 (system dependent - See Table 1 below)
- Runtimes: 90 minutes standard.
- Operating temperature: 20°C to 30°C (68°F to 86°F)
- Relative humidity: 95% non-condensing

*Note: Battery performance rated at 25°C (77°F)*

**Table 1**

System Model Number	Type	Input/ Output Volts	Capacity For 1½ Hours	Battery Voltage (VDC)	Cabinet Dimensions			System Weight*	
			In Watts		Length	Height	Depth	(Lbs.)	(Kg.)
LG125S	Surface	120/277	110	24	165/8" (42.2cm)	115/8" (29.5cm)	4 3/8" (11.1cm)	42	19
LG125R	Recessed	120/277	110	24	181/8" (46.0cm)	131/8" (33.3cm)	4 3/8" (11.1cm)	42	19
LG125T	Ceiling T-Grid	120/277	110	24	237/8" (60.6cm)	61/4" (15.9cm)	8.0" (20.3cm)	43	20
LG250S / LG250SI	Surface	120/277	220	48	165/8" (42.2cm)	115/8" (29.5cm)	6 3/8" (16.2cm)	60	27

*System Weights shown include installed batteries*

**Table 2**

System Model Number	On-Line System Efficiency (Full Load)	Number Of Batteries	Battery Voltage (VDC)	Battery Current (Amps)	AC Input Current		Thermal Output In BTUs	
					120VAC (Max.)	277VAC (Max.)	On-Line	Emergency
LG125S,R,T	98%	2	24	5.7	1.2	0.52	9	95
LG250S / LG-250SI	98%	4	48	5.6	2.4	1.1	18	167

# 102. Receiving, Moving and Storing Systems and Batteries

## 102.1 Shipping Damage

LG125S,R and T inverter system batteries are shipped installed within the unit housing. The LG250S and LG250SI inverter system batteries are shipped separately from the inverter cabinet.

Carefully inspect all cartons upon receipt for evidence of shipping damage.

Notify carrier immediately of leaking or damaged cartons for possible concealed damage.

## 102.2 Temporary Storage of Units and Batteries

For temporary storage of LG inverter systems and batteries prior to installation, select a clean, cool, dry location with normal ventilation for human habitation and level floors.

Storage Temperature:

Store all batteries at 0° to +40° C (32° to +104° F). Batteries will have a longer shelf life if stored at 15° C (60° F). The LG electronics and battery cabinets may be stored at -20° to +60° C (-4° to +140° F).

### IMPORTANT:

*Lengthy storage of batteries will cause irreversible damage to the cells.*

*Failure to connect **LG** inverter system batteries to an energized charging circuit within 90 days from the date of shipment will void the battery warranty.*

### DANGER: Explosive - Can Cause Blindness Or Other Severe Injuries

Every type of battery can produce hydrogen gas, even sealed, maintenance-free batteries. *The gas is vented through the vent caps and into the air. Do not allow smoking, sparks, or flames in battery storage location because hydrogen is concentrated under the vent cap of each cell of the battery. Hydrogen is highly explosive, and is hard to detect because it is colorless, odorless, and lighter than air.*

# 103. Installation Requirements

## 103.1 Operating Environment

Install the **LG** inverter system in a clean, cool, dry place with normal ventilation for human habitation and in such a location to hamper vandalism but allow easy access for testing and maintenance.

### Operating Temperature:

LG inverter Systems are UL Listed for 20° to 30° C (+ 68° to +86° F) operation.

Battery performance and service life is maximized if the operating temperature is maintained at 25° C (77° F).

### Temperature Effect On Battery Performance:

*Batteries will be less efficient at temperatures below 20° C (68° F), and high temperatures will reduce battery life. Typically, at 35° C (95° F), battery life will be half of what it would be at normal temperature of 25° C (77° F). At 45° C (113° F), battery life will be one-fourth of normal.*

### Ventilation:

*The air around the unit must be clean, dust-free, and free of corrosive chemicals or other contaminants. Do not place the **LG** inverter system or batteries in a sealed room or container.*

**CAUTION: Never Install Batteries in A Sealed Room Or Enclosure**

## 103.2 High Altitude Operation:

The maximum operating temperature drops 1° Celsius per 300 meters (2° F per 1000 feet) above sea level. Maximum elevation is 3000 meters (10,000 feet).

# 104. Cabinet Mounting

## 104.1 Tools Required

The following tools are required to install the system:

Socket Set, Phillips Screwdriver, Diagonal Wire Cutters, Long Nose Pliers, Electrical Tape, Digital Volt-Ohm Meter, Safety Glasses with Side Shields, Small Punch (knockout removal), Hammer, Electric Drill, Wood or Masonry Bits, Level.

## 104.2 Mounting Hardware

Mounting hardware is not provided. Care should be taken when selecting mounting hardware to assure that it is the proper type for the application and sized to safely support the systems full weight when installed assuring safe and secure attachment of system to wall surface. For ease of installation, the factory recommends that the head size of mounting screws or bolts be small enough to pass through the keyhole knockouts provided for mounting. This will allow the unit to be hung on partially installed mounting hardware and facilitate easy cabinet removal if ever necessary.

## 104.3 Knockout Locations


All models provide knockouts on the top and left-hand side of the unit.

Additional entry points, if required can be added using a metal punch. Do not drill into the cabinet as metal filings can cause short circuits and damage the equipment.

NOTE: Consider unit knockout locations prior to mounting unit. Allow room for easy routing of conduit to entry point.

## 104.4 Surface Mount Models (LG125S, LG250S, and LG250SI):

- 1) Remove cover and any packing material inside unit housing that may have been used for shipping purposes.
- 2) For ease of installation, and to prevent possible damage to the equipment, the inverter/charger assembly may be temporarily removed prior to knockout removal and attachment to mounting surface. This is accomplished by removing (4) 8-32 hex nuts on the inverter/charger mounting plate. If shipped factory installed, batteries may also be temporarily removed to facilitate ease of installation.
- 3) Remove the appropriate knockouts, 7/8" diameter, on the top and/or left side of the unit housing to facilitate conduit attachment. Also remove keyhole knockouts in the upper corners on the back of the housing on **LG125S** model. Due to the additional battery weight, the **LG250S** and **LG250SI** models are supplied with mounting keyhole knockouts located at all four corners on the back of the unit housing. Remove all four keyhole knockouts on this model.
- 4) Secure housing to mounting surface through all keyhole knockouts provided using mounting hardware (not supplied) sized appropriately to support the unit weight.
- 5) Re-install inverter/charger assembly if removed in step 2.

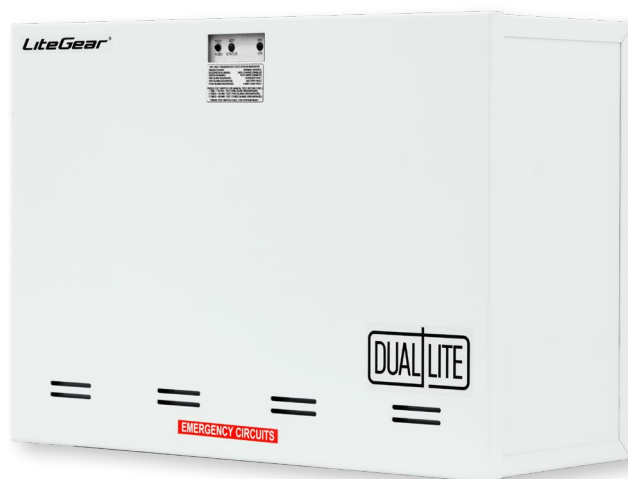

## 104.5 Recessed Wall Mount Model (LG125R):

- 1) Remove cover and any packing material inside unit housing that may have been used for shipping purposes.
- 2) For ease of installation, and to prevent possible damage to the equipment, the inverter/charger assembly may be temporarily removed prior to knockout removal and attachment to mounting surface. This is accomplished by removing (4) 8-32 hex nuts on the inverter/charger mounting plate. If shipped factory installed, batteries may also be temporarily removed to facilitate ease of installation.
- 3) Remove the appropriate knockouts, 7/8" diameter, on the top and/or left side of the unit housing to facilitate conduit attachment. Also remove the appropriate round knockouts, 5/16" diameter, which are located on all sides of unit housing. Specific knockout requirements are dictated by mounting orientation of unit (vertical or horizontal) and location of wall studs and /or other support members.
- 4) Secure housing to support members through round knockouts using mounting hardware (not supplied) sized appropriately to support the unit weight.  
**IMPORTANT: Unit should be so positioned that the cabinet extends between 3/8" and 3/4" beyond the finished wall surface after installation.**
- 5) Prior to final attachment of unit cover, the LED indicator panel assembly position must be adjusted to sit flush against inside surface of cover after attachment. This is accomplished using the (2) 8-32 hex nuts on the indicator assembly.
- 6) Re-install inverter/charger assembly if removed in step 2.



## 104.6 Recessed Ceiling T-Grid Mount Model (LG125T):

- 1) Remove cover and any packing material inside unit housing that may have been used for shipping purposes.
- 2) For ease of installation, and to prevent possible damage to the equipment, the inverter/charger assembly may be temporarily removed prior to knockout removal and attachment to mounting surface. This is accomplished by removing (4) 8-32 hex nuts on the inverter/charger mounting plate. If shipped factory installed, batteries may also be temporarily removed to facilitate ease of installation.
- 3) Remove the appropriate knockout(s), 7/8" diameter, located on either side of unit housing to facilitate conduit attachment.  
**IMPORTANT: Take care to remove only the knockouts required for utility connection. Removal of knockouts if unused and left open will void the plenum rating of the unit.**
- 4) Mount the unit securely in place between T-Grid members.  
**NOTICE: Safety chain or cable, rated 50lb minimum working load, 250lb minimum breaking strength is required to hang the unit in a T-Grid system. Failure to correctly install unit will cause an unsafe condition!**
- 5) Re-install inverter/charger assembly if removed in step 2.



# 105. AC Connections

## CAUTION:

- A) All **LG** inverter system units contain hazardous AC and DC voltages. Because of these voltages, a qualified electrician must install the **LG** inverter system, AC line service, and batteries. The electrician must install the AC line service according to local, state and NEC codes and must be familiar with batteries and battery installation.
- B) Before installing, maintaining, or servicing the unit, always remove or shut off all sources of AC and DC power to the **LG** inverter system. Turn off the AC line input circuit breaker at the service panel and place the **LG Battery Switch S2** in the **OFF** position to make sure the unit will not supply output voltage.
- C) Whenever AC and/or DC voltage is applied, there will be AC voltage inside the **LG** inverter system unit; the unit can supply power from AC line or from its batteries. To avoid equipment damage or personal injury, always assume that there may be voltage inside the **LG** inverter system.
- D) Remove rings, watches, and other jewelry before installing the AC wiring. Always wear protective clothing and eye protection and use insulated tools when working near batteries. Whenever servicing an energized unit with the inside panel open, electric shock is possible; follow all local safety codes. **TEST BEFORE TOUCHING!**
- E) To reduce the risk of fire or electric shock, install the **LG** inverter system and the batteries in a temperature-controlled and humidity-controlled indoor area free of conductive contaminants. See **Section 103** for operating environment specifications.

## 105.1 AC Wiring Preparations

- 1) Remove the system's front cover. Make sure the **LG Battery Switch S2** is in the **OFF** position.
- 2) Make sure the **LG** inverter system input and output voltages are correct for the particular application. Remember that the **LG** system provides single-phase power only.
- 3) The input circuit breaker in the input service panel provides the means for disconnecting AC to the **LG** inverter system. Only authorized persons shall be able to disconnect AC to the unit. (See **NEC 700-20 and 700-21**.)  
**CAUTION: To prevent electrical shock or equipment damage, for all units, the LG Battery Switch S2 and the AC input circuit breaker at the service panel are all OFF before making AC connections to the LG inverter system.**
- 4) If not previously done, remove cabinet knockouts for AC Input and AC Output as described in **Sections 104-4, 104.5 or 104.6** depending on mounting method  
**CAUTION: Do not drill the cabinet; drill filings may damage the unit and prevent it from operating. If larger knockouts are needed, use a chassis punch to enlarge the appropriate knockout. Do not add additional or unnecessary knockouts.**
- 5) Install the input and output conduits.
- 6) Run the AC Input service conductors and AC Output conductors through separate conduits. **LG** inverter system emergency output circuits shall be installed in dedicated conduit systems and not shared with other electrical circuits as described in **NEC 700-9(b)**.

## 105.2 AC Input, AC Output and DC Dimming Connections

**CAUTION: Prior to making any wiring connections to unit make sure branch AC input circuit breaker feeding the LG unit is turned off at the service panel!**

The **LG** models can be configured for various modes of operation and are described in this section. Refer to the appropriate wiring diagrams to properly connect the utility AC power, fixtures and external switching device (where applicable). Perform all wiring procedures in accordance with applicable codes.

**Normally-On Operation** - Fixtures remain illuminated in AC and emergency operating modes. See “**A**” in **Wiring Diagram 1** for 120V wiring or “**F**” in **Wiring Diagram 2** for 277V wiring. Notice the jumper between HOT and SW terminals.

**Normally-Off Operation** - Fixtures illuminate only upon loss of utility AC power. See “**B**” in **Wiring Diagram 1** for 120V wiring or “**G**” in **Wiring Diagram 2** for 277V wiring. Notice the jumper between HOT and SW terminals.

**Normally-On and Normally-Off Operation** - A combination of the operating modes described above. See “**C**” in **Wiring Diagram 1** for 120V wiring or “**H**” in **Wiring Diagram 2** for 277V wiring. Notice the jumper between HOT and SW terminals.

**Switched Load Operation** - Single Circuit - Fixtures can be externally switched and will illuminate upon loss of utility AC power regardless of external switch position. See “**D**” in **Wiring Diagram 1** for 120V wiring or “**I**” in **Wiring Diagram 2** for 277V wiring.




**Dimmable (2.5, 5.0, 7.5 or 10 volts) Load Operation / Adjustable Output (-AO Option)** - Functionally identical to the Switch Load Operation above, but provides four (4) independent settings for each of the two dimmable loads. See “E” in **Wiring Diagram 1** for 120V wiring or “J” in **Wiring Diagram 2** for 277V wiring.


**Caution: Dimming switches must be programmed such that loads do not exceed unit rating in emergency mode.** (See Wiring Diagram “K” for details on dimming switch field programming)

**Diagram “K” in Wiring Diagram 3 can be used for both 120V or 277V wiring and setting of the desired load requirement in the emergency Mode for the 0 to 10 volt dimmer.**


## Wiring Diagram 1 - 120VAC Connections

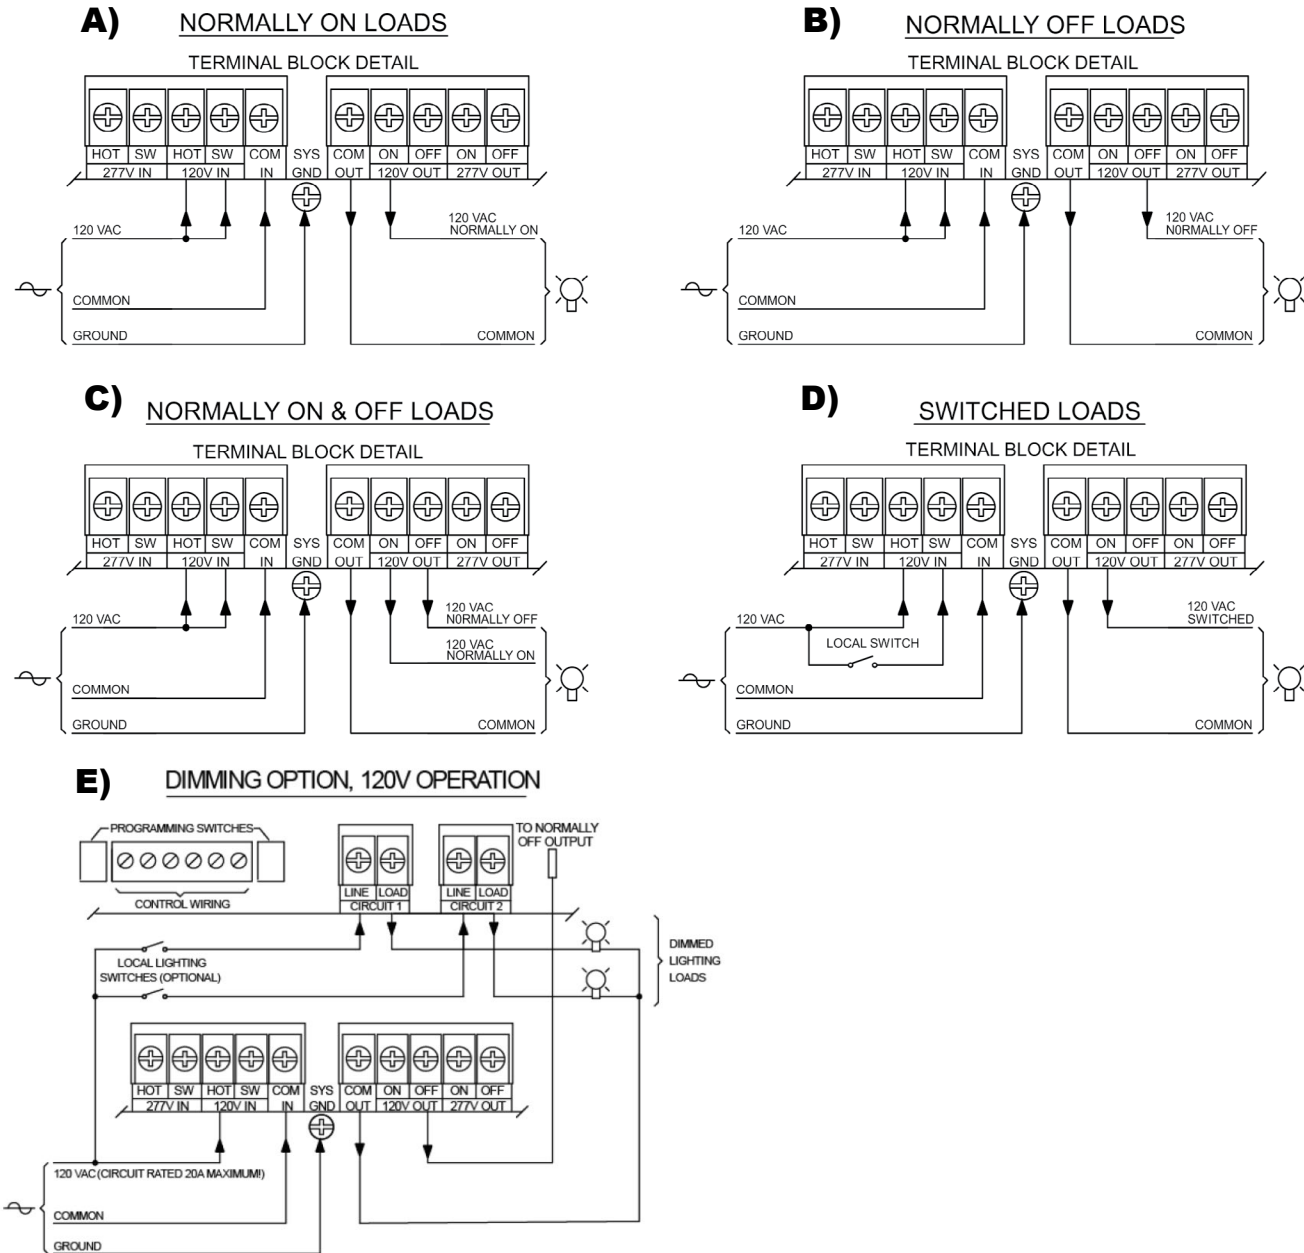

## Wiring Diagram 2 - 277VAC Connections

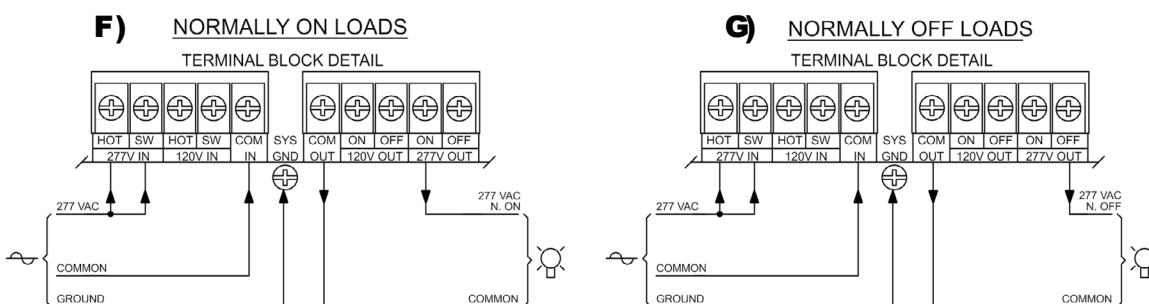

## Wiring Diagram 2 - 277VAC Connections cont.

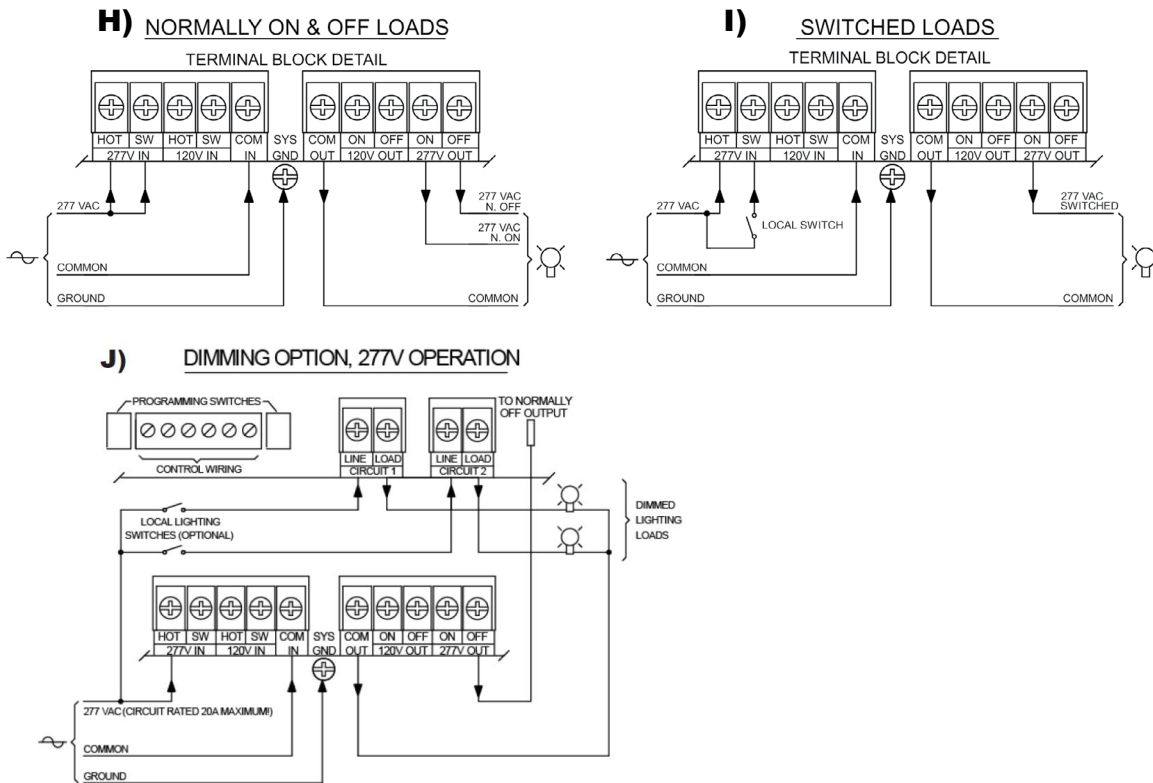

## Wiring Diagram 3 - Dimming Control - 120 or 277VAC Operation

### K) DIMMING OPTION PROGRAMMING TABLE


S1,2-1	S1,2-2	VOUT 1, VOUT 2
OPEN (OFF)	OPEN (OFF)	10.0V
OPEN (OFF)	CLOSED (ON)	7.50V
CLOSED (ON)	OPEN (OFF)	5.00V
CLOSED (ON)	CLOSED (ON)	2.50V

**NOTE:** Dimming switches S1 and S2 are designed for independent setting to allow different emergency voltages for Output Circuits 1 and 2 if required.

**CAUTION:** Dimming switches must be programmed such that loads do not exceed unit rating in emergency mode.

See LiteGear Loading Table below.

### DIMMING OPTION CONTROL WIRING

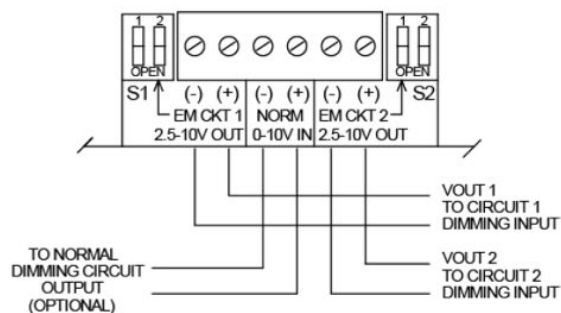

**CAUTION:** The sum of loads connected to Output Circuits 1 and 2 must not exceed unit rating in emergency mode.

**Table 3**

Output of both dimming circuits (Volts)	Maximum Load (Watts)							
	2.5		5.0		7.5		10.0	
Model	Normal Mode	Emergency Mode	Normal Mode	Emergency Mode	Normal Mode	Emergency Mode	Normal Mode	Emergency Mode
LG125S-AO	400	110	200	110	133	110	110	110
LG125R-AO	400	110	200	110	133	110	110	110
LG125T-AO	400	110	200	110	133	110	110	110
LG250S-AO	800	220	400	220	267	220	220	220
LG250SI-AO	800	220	400	220	267	220	220	220

# 106. Battery Information

## Important Safety Precautions

*The installer must take these precautions:*

- 1) *Wear protective clothing, eye-wear, rubber gloves and boots. Batteries contain corrosive acids or caustic alkalis and toxic materials and can rupture or leak if mistreated. Remove rings and metal wristwatches or other metal objects and jewelry. Don't carry metal objects in pockets where the objects can fall onto the batteries or into the LG inverter system.*
- 2) *Tools must have insulated handles so that they will not short battery terminals. Do not allow a tool to short a battery terminal to another battery terminal or to the cabinet at any time. Do not lay tools or metal parts on top of the batteries, and do not lay any objects where they could fall onto the batteries or into the cabinet.*
- 3) *Install the batteries as shown on the battery wiring diagram provided in this manual. When connecting cables, never allow a cable to short across a battery's terminals, the string of batteries, or to the cabinet.*
- 4) *Keep the cable away from any sharp metal edges.*
- 5) *Install the battery cables so they cannot be pinched by the LG inverter system cover/door.*
- 6) *Where conductors may be exposed to physical damage, protect conductors in accordance with NEC requirements.*
- 7) *Full voltage and current are always present at the battery terminals. The batteries used in this system can produce dangerous voltages, extremely high currents, and possible risk of electric shock. Batteries may cause severe injury if the terminals are shorted together or to ground (earth).  
Be extremely careful to avoid electric shock and burns caused by contacting battery terminals or shorting terminals during battery installation. Do not touch uninsulated battery terminals.*
- 8) *A qualified electrician who is familiar with battery systems and required precautions must install and service the batteries. Any battery used with this unit shall comply with the applicable requirements for batteries in the standard for emergency lighting and power equipment, UL 924. Cabinets are designed to be used with, and batteries must be replaced by identical cells or a Manufacturer approved equivalent. If using substitute batteries not supplied by the Manufacturer, the unit's UL listing will be void, and the equipment may fail to perform properly. The installation must conform to national and local codes as well. Keep unauthorized personnel away from batteries.*

### 106.1 Tools

The following tools are required to install the system batteries: Socket Set, Tape, Digital Volt-Ohm Meter, Safety Glasses

**CAUTION:** Always use insulated tools for battery installation.

### 106.2 Battery Installation and Connection

**CAUTION:** Prior to connection of battery string to the inverter/charger assembly make sure the LG Battery Switch S2 is in the OFF (down) position.


\* LG125S,R and T models are supplied with two (2) batteries installed (24VDC string voltage) with the positive (+) battery lead disconnected. This connection will need to be completed prior to system startup. See **Battery Wiring Diagrams 1 and 2** for verification of proper battery connections.

\* LG250S and LG250SI models are supplied with four (4) batteries shipped separately (48VDC string voltage). See **Battery Wiring Diagram 3** for battery connections. Install batteries with terminals facing outwards. Connect batteries using wiring conductors supplied with the system.


System Model Number	System DC Voltage	Number of Batteries	Battery Part Number	Battery Wiring Diagram
LG125S	24	2	93068301	1
LG125R	24	2	93068301	1
LG125T	24	2	93068301	2
LG250S / LG250SI	48	4	93068301	3

**IMPORTANT:** Observe correct polarity on the battery terminals. Polarity markings may vary from battery to battery


### Battery Wiring Diagram 1

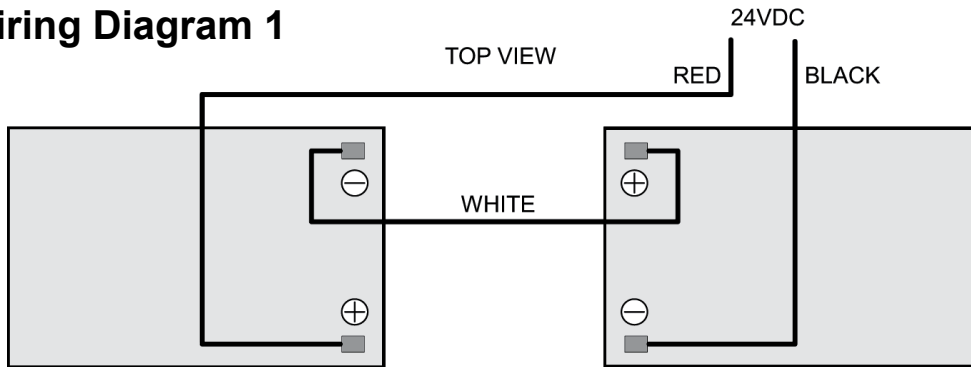

### Battery Wiring Diagram 2

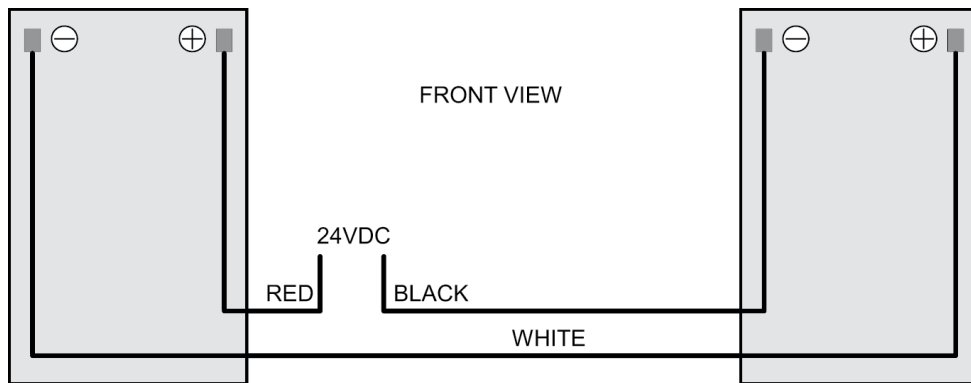

### Battery Wiring Diagram 3

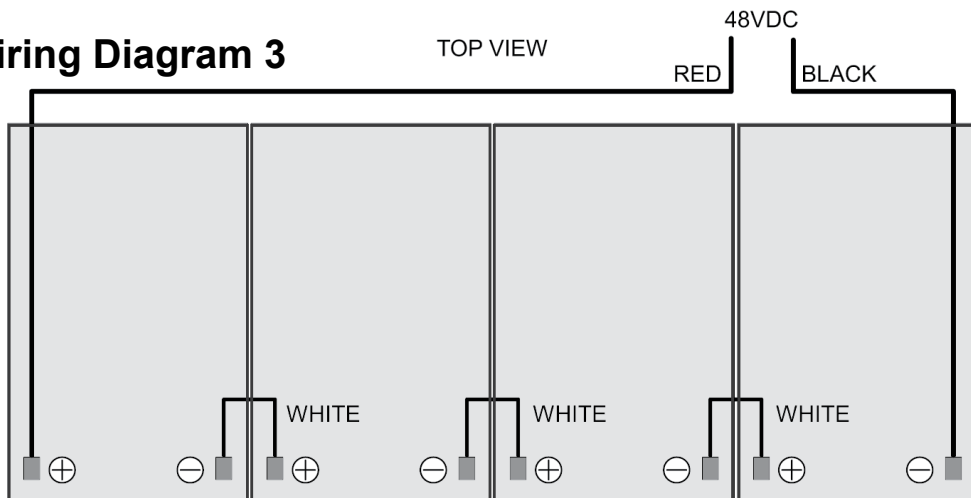

## 106.3 Battery Connection Voltage Check

Using a digital volt-ohm meter, check for correct nominal battery voltage between DC Input NEG and POS wires. Refer to table in Section 106.2 for proper system DC voltage. Voltage reading should be  $\pm 10\%$  of system DC voltage.

# 107. Final Installation Checklist

**IMPORTANT:** Before proceeding to the System Start-Up Procedure (Section 108) complete the Final Installation Checklist below.

- 1) Insure the LG cabinet(s) is securely fastened to a wall or other structure.
- 2) Insure that the input circuit breaker in the building service panel serving as the AC disconnect to the LG system is in the OFF position.
- 3) Check for proper ground connections in the LG unit cabinet.
- 4) Check for any loose wiring connections in the LG unit cabinet.
- 5) Check that correct nominal battery voltage (24 or 48 VDC) is present in the LG unit between the DC Input NEG and POS. Refer to Section 106.2 for proper system DC voltage.
- 6) Verify AC Input voltage to unit matches system voltage configuration.

# 108. System Start-Up Procedure

**IMPORTANT:** The LG inverter system is a sophisticated electronic backup power supply. Care must be taken to follow the steps below in their exact sequence. Failure to do so may result in possible equipment failure.

**CAUTION:** Familiarize yourself with the shut down procedure in Section 200.1 before proceeding with the Start Up.

- 1) Hold **S1 PRECHARGE SWITCH** in the **ON** (up) position for 10 seconds, then release.
- 2) Place **S2 BATTERY SWITCH** in the **ON** (up) position.
- 3) Apply utility AC power to the system using branch circuit breaker.
- 4) Observe the LED Status indicators and verify the following:
  - A) **AC ON** indicator (red LED) is illuminated (indicates AC utility power is available to unit).
  - B) **CHG ON** indicator (green LED) is illuminated (indicates battery is connected and charger is operational).
- 5) Verify **Normally-On** fixtures or switched fixtures (where applicable) are illuminated (local fixture switch must be in ON position).

# 109. Manual System Test

## 109.1 For LG125 and LG250S Models

Momentarily push **TEST** switch and verify the following:

- A) **INV ON** status indicator (yellow) illuminates (indicates inverter is operational).
- B) **Normally-On, Normally-Off** and **Switched** fixtures are illuminated (where applicable).

## 109.2 For LG250SI Model:

This model also provides for manual testing by pushing the TEST button in a specific pattern:

<b>A) Action</b>	<b>Reaction and LED Indication</b>
Push test switch Once (within (2) seconds)	(30) second test: one blink GREEN/pause
Push test switch Twice (within (2) seconds)	(30) minute test: two blinks GREEN/pause
Push test switch Three times (within (2) seconds)	(90) minute test: three blinks GREEN/pause
Push test switch and hold for (3) seconds	Cancels test
Push test switch and hold for (6) seconds	System reset

B) INV ON status indicator (yellow) illuminates (indicates inverter is operational).

C) Normally-On, Normally-Off and Switched fixtures are illuminated (where applicable).

## 110. System Self-Test/Diagnostics (Model LG250SI )

Once the LG250SI system is properly installed in accordance with the installation instructions, and AC power is supplied to the unit, the dual color (SDT STATUS) LED indicator will illuminate, followed by the amber (INV ON) LED indicator. The dual color LED indicates the unit's status. A steady GREEN LED indicates normal service; A blinking GREEN/RED LED indicates the battery is charging; A blinking RED LED (in different combinations) indicates a service alert. Refer to the INDICATION chart in Section 110.2 for details. During loss of normal utility power the dual color LED will not be illuminated. The AMBER (INV ON) LED indicator will be illuminated only during inverter operation initiated by the loss of utility power or during any manual or automatic self-test.

### 110.1 Self-Test/Diagnostic Functions

The self-diagnostic function is factory preset and performs the following:

- A) Continuous monitoring of battery, battery charger and connected loads.
- B) Self-testing and a (30) second battery discharge with a randomized start (per UL 924, Sec. 30.2), once every (30) days, after normal utility power has been supplied for a minimum of (48) hours.
- C) Self-testing and a (30) minute battery discharge with a randomized start (per UL 924, Sec. 30.2), once every (180) days, after normal utility power has been supplied for a minimum of (48) hours.
- D) Self-testing and a (90) minute battery discharge with a randomized start (per UL 924, Sec. 30.2), once every (365) days, after normal utility power has been supplied for a minimum of (48) hours.

### 110.2 Self-Test/Diagnostic Indication

#### **SDT Status LED Indicator**

GREEN steady  
RED/GREEN blinking  
GREEN blinking  
One blink RED/pause  
Two blinks RED/pause  
Four blinks RED/pause

#### **System Status**

Normal service  
High Charge enabled  
Test Mode enabled  
Battery Charger fault  
Battery fault  
Lamp/Load fault

# Section 200 Maintenance

## 200.1 Safe Shut Down Procedure

**CAUTION:** To avoid possible equipment damage or personal injury, assume that there is AC voltage present inside the LG inverter system unit any time AC input power or DC battery voltage is applied. The inverter is capable of providing output voltage from the batteries even when there is no AC input line voltage. When AC input voltage is present, the unit can provide output voltage even when the batteries are disconnected.

Do not touch components inside the unit. DC voltage is always present at the batteries and battery cables.

### Final Shut Down Procedure

- 1) Open the unit's front access panel.
- 2) Place the LG Battery Switch S2 in the off OFF position and then place the AC Input circuit breaker at the service panel in the OFF position.  
**CAUTION: HAZARDOUS ENERGY IS STORED IN CAPACITORS INSIDE THE LG UNIT. AFTER TURNING OFF SWITCHES, ALLOW 5 MINUTES FOR CAPACITORS TO DISCHARGE BEFORE ATTEMPTING ANY SERVICE PROCEDURES.**
- 3) If the service technician does not need to access the inside of the unit, keep the unit's front cover/door closed.
- 4) If the unit will be shut off for an extended period of time, recharge batteries every 60 to 90 days.  
**CAUTION: The batteries will be damaged and the warranty voided if not routinely recharged.**

NOTE: To turn power back on, follow the "System Start-up Procedure" outlined in Section 108. Be sure to complete all of the steps to assure the unit will operate properly.

## 200.2 Routine System Maintenance

The **LG** inverter system unit is designed to provide years of trouble-free operation. The unit does require some routine attention to assure peak performance. The Manufacturer recommends a Preventative Maintenance check be performed by a qualified service technician at least every six months. The technician must observe important safety precautions while performing the following recommended tasks:

- **Inspect and clean the unit interiors;**
- **Inspect all batteries for leaks, case swelling or terminal corrosion;;**
- **Perform an emergency operation test to check operation of all critical connected loads**

## 200.3 Manual Routine Inverter Tests

NFPA101 requires that Emergency Lighting Equipment be tested on a monthly basis for a period of at least 5 seconds, and a minimum of 90 minutes once a year. We strongly recommend these guidelines be followed to insure system readiness, and to prolong battery life. The **LG** system was designed with a front panel test switch to facilitate monthly testing. Simply depress the button and hold to test the inverter at anytime. Once released, the **LG** will revert back to standby operation. For annual 90-minute discharge or other prolonged tests, simply turn off the AC Input breaker at the service panel.

## 200.4 Replacement Fuses

USE	VOLTAGES	LG125 (S,R,T)	LG250 (S, SI)
DC Battery Fuse	+ INPUT	Bussman MDA-10-R	Bussman MDA-10-R
AC Line Fuse (F1)	120 VAC	1.6A, 300V Time Delay 1) Bussman GMF-1-6/10 2) Littelfuse LMF-1-6/10	2.8A, 300V Time Delay 1) Bussman GMF-2-8/10 2) Littelfuse GMF-2-8/10
AC Line Fuse (F2)	277 VAC	0.6A, 300V Time Delay 1) Bussman GMF-6/10 2) Littelfuse LMF-6/10	1.6A, 300V Time Delay 1) Bussman GMF-1-6/10 2) Littelfuse LMF-1-6/10

## 200.5 Routine Battery Inspection and Maintenance

### Sealed Lead-Calcium Batteries

Lead-Calcium cells are the most common type of battery used today in standby equipment. By design it is as maintenance free as a battery can be. It is recommended, however, that some simple steps be taken to increase system life and maximize reliability:

- A) A quarterly visual check of the batteries should be conducted to look for deformities in the cases and terminal corrosion. Any defective batteries should be replaced. All corroded terminals, regardless how slight, are to be cleaned and retightened at once to prevent failure of the entire battery bank.
- B) Once a year, all battery connections should be checked for tightness and re-tightened if necessary.

## 200.6 Battery Replacement Procedure

### WARNING:

**Always use the same quantity and type of battery as replacements.**

Substituting batteries not supplied by the Manufacturer will void the UL listing of the system and may cause equipment failure. To ensure the superior performance of your LG inverter system and to maintain proper charger operation, replace spent batteries only with cells having the same part number, voltage and ampere-hour rating as the original batteries.

- 1) Follow the proper shut down procedure as described in Section 200.1.
- 2) Disconnect the battery string beginning with the white inter-cell connectors followed by the red (B+) and black (B-) connectors.
- 3) Remove the batteries from the cabinet.
- 4) Install new batteries following the instructions outlined in Section 106.2.

## 200.7 Battery Disposal

### WARNINGS:

- **Do not dispose of batteries in a fire, the batteries could explode.**
- **Do not open or mutilate batteries.**
- **Released electrolyte is highly toxic and harmful to the skin and eyes.**

**CAUTION: Batteries contain lead. Many state and local governments have regulations about used battery disposal. Please dispose of the batteries properly.**