

June 20, 2011

To: Ampt


Re: Grounding recommendations for the Ampt mounting bracket part # 21000000-1 and a galvanized steel angle bracket.

From: BURNDY LLC

BURNDY LLC recommends the following grounding procedures for the Ampt mounting bracket and galvanized steel angle brackets.

The WEEB-9.5 must be used to bond the Ampt mounting bracket to galvanized steel angle brackets. Each bolt/nut combination that installs a WEEB-11.5 must be tightened to at least 10 ft-lbs / 13.5 N-m of torque. 1/4" hardware must be used along with large flat washers and installed according to the figure pictured below.

All bolts that install any grounding or bonding hardware must have general purpose anti-seize applied to their threads prior to installation.

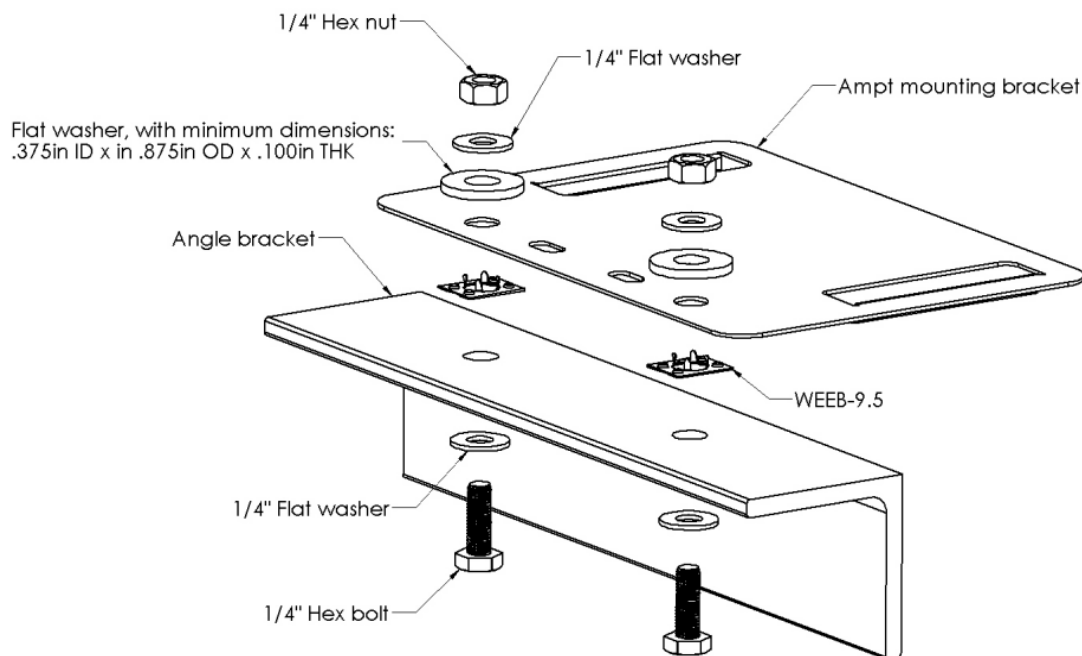

Sincerely,

Thomas Olenick
Product Engineer, Wiley Products
BURNDY LLC
tolenick@burndy.com