





Hubbell Commercial Construction
Hubbell Incorporated (Delaware)


Instructions for using *RACO Prefab Far Side Support*

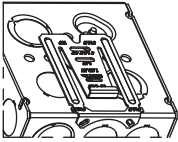


For 2-1/2" deep studs.
Comes preset.

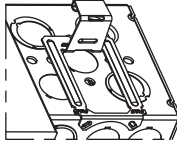


For 3-1/2" deep studs.
Bend center tab as shown
in 2 places.

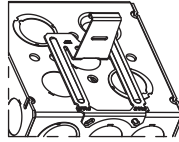


For 3-5/8" deep studs.
Bend center tab as shown.

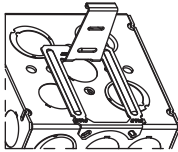

For 4" deep studs.
Bend center tab as shown.

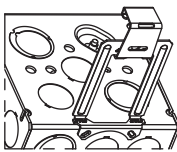

For 5-1/2" deep studs.
Bend both tabs as shown.

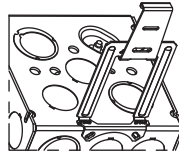

For 6" deep studs.
Bend both tabs as shown.

NOTICE: Back knockouts are NOT usable with the FS support on certain stud depths.