

**SURFACE MOUNT KIT INSTALLATION INSTRUCTIONS**




**STEP 1**

Attach 1 end-cap from surface mount kit to surface mount housing.

**STEP 2**

Attach surface mount housing to ceiling using appropriate fasteners. Make sure feed cutout in housing is aligned with j-box in ceiling.

Note: ZPT Surface Mount is not suitable for continuous row mounting.

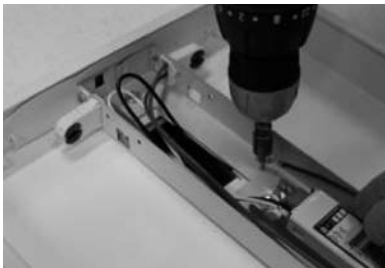

**STEP 3**

Remove access plate from luminaire and expand luminaire housing.

**STEP 4**

Remove luminaire shielding - lens, basket, or louver, and ballast cover.

**STEP 5**

Slide luminaire into surface mount housing. Make sure access hole in luminaire aligns with feed cutout and j-box.

**STEP 6**

Drive included Tek-Screw with ground wire into ballast channel adjacent to wire entry.



**STEP 7**

Attach second end-cap to surface mount housing.

**STEP 8**

Connect luminaire ground and feed power per NEC and any state or local code.

**STEP 9**

Replace ballast cover and shielding.