

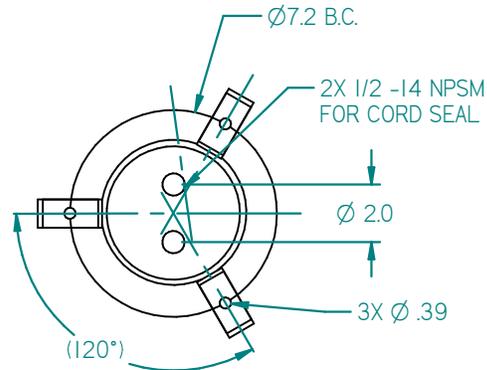


INSTALLATION INSTRUCTIONS

Fixture: PROB™ - PM MOUNT - LED

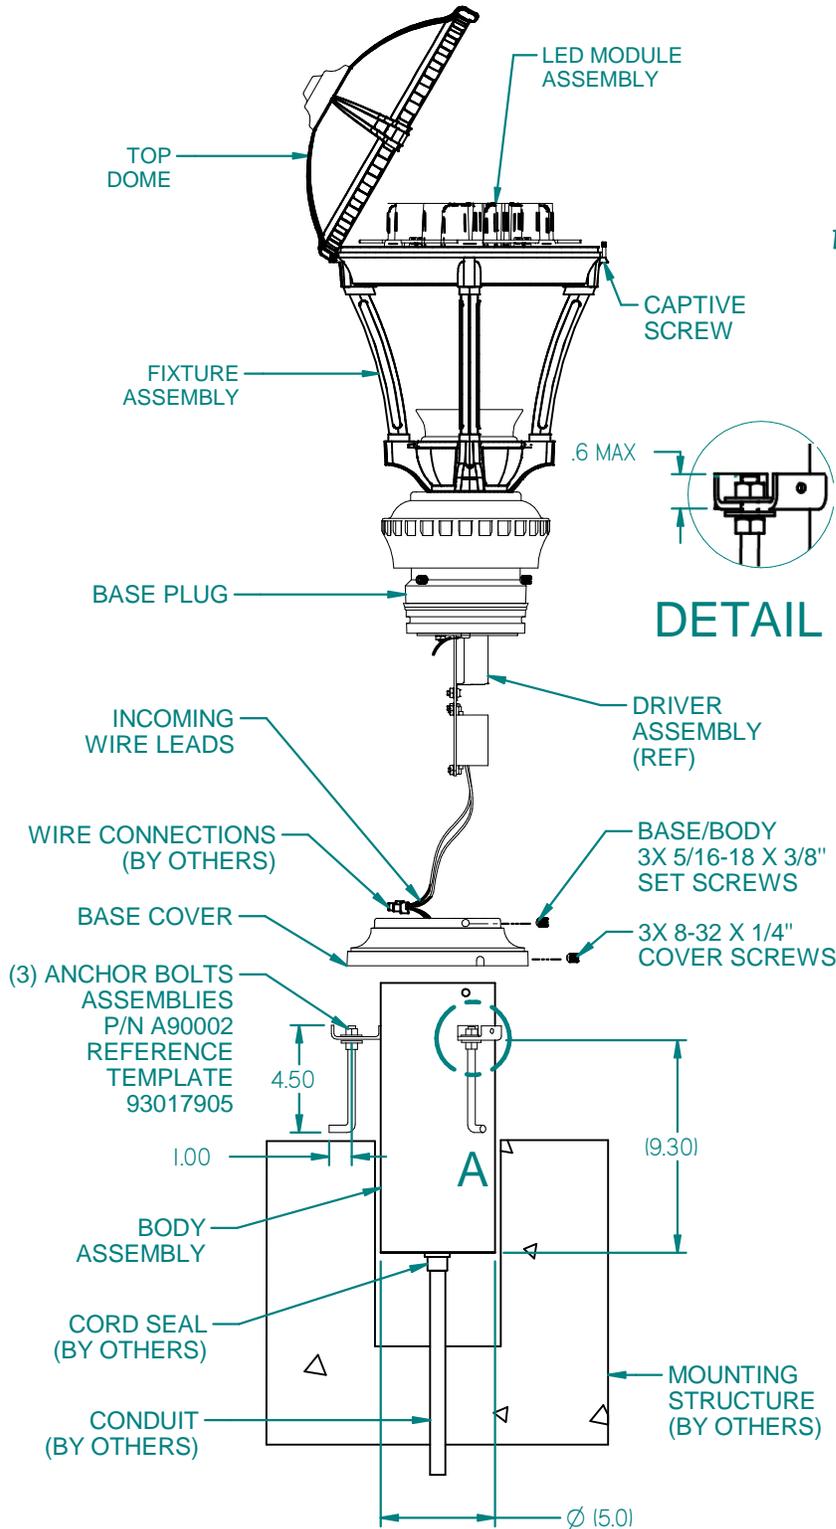

DETAIL VIEW

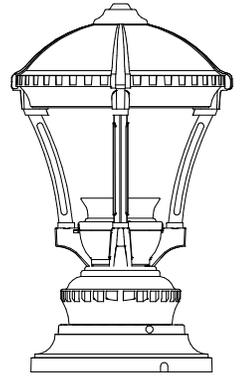

**PROB
PM MOUNT
OPTION**

INSTALLATION STEPS:

1. TURN POWER OFF.
2. STUB IN CONDUIT AS REQUIRED.
3. UTILIZE TEMPLATE 93017905 TO LOCATE ANCHOR BOLTS CUTOUT FOR THE BODY ASSEMBLY.
4. SECURE BODY ASSEMBLY TO MOUNTING STRUCTURE, MAKE CONDUIT CONNECTIONS TO BODY ASSEMBLY, PULL WIRE THROUGH BODY ASSEMBLY.
5. PLACE BASE COVER ONTO BODY ASSEMBLY AND SECURE WITH 3X 8-32 X 1/4" COVER SCREWS.
6. MAKE WIRE CONNECTIONS FROM INCOMING WIRE LEADS TO FIXTURE. (**WHITE TO COMMON, BLACK TO HOT AND GREEN TO GROUND**). NOTE: ASSEMBLY MUST BE GROUNDED TO THE INCOMING EQUIPMENT GROUND SUPPLY.
7. PLACE FIXTURE HEAD ASSEMBLY INTO BODY ASSEMBLY AND SECURE WITH 3X 5/16 - 18 X 3/8".
8. **INSTALLATION COMPLETE.**


DRIVER SERVICING:

1. **TURN OFF POWER.**
2. REMOVE 3X 5/16 -18 X 3/8" SET SCREWS AND REMOVE FIXTURE HEAD ASSEMBLY TO ACCESS DRIVER COMPARTMENT.
3. SERVICE DRIVER.
4. MAKE WIRE CONNECTIONS.
5. RETURN FIXTURE HEAD ASSEMBLY TO BODY ASSEMBLY AND SECURE WITH 3X 5/16 - 18 X 3/8" SET SCREWS.
6. **INSTALLATION COMPLETE.**

LED SERVICING:

1. **TURN OFF POWER.**
2. LOOSEN CAPTIVE SCREW AND LIFT TOP DOME TO ACCESS LED MODULE ASSY.
3. UNPLUG ALL CONNECTORS AND REMOVE 2X LOCK WASHERS AND SCREWS TO RELEASE LED MODULE ASSY.
4. SERVICE LED MODULE ASSY AS NEEDED.
5. PLUG IN ALL CONNECTORS AND RE-INSTALL LED MODULE ASSY AND SECURE WITH 2X LOCK WASHERS AND SCREWS. CLOSE FIXTURE LATCH SECURELY.
6. **LED SERVICING COMPLETE.**



NOTE: FOR WIRING DIAGRAMS SEE PAGE 2.

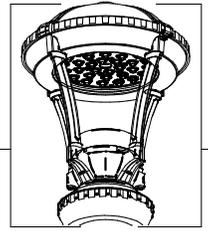

INSTALLATION INSTRUCTIONS

Fixture: PROB™ - PM MOUNT - LED

WIRING DIAGRAM PM MOUNT

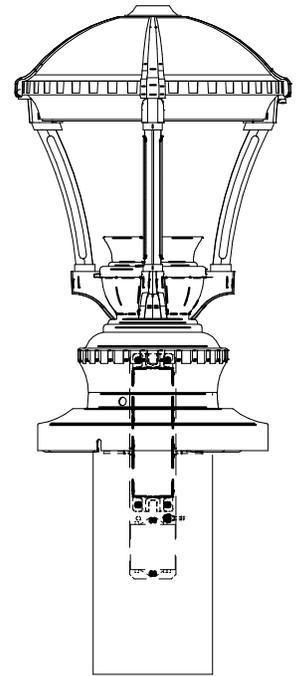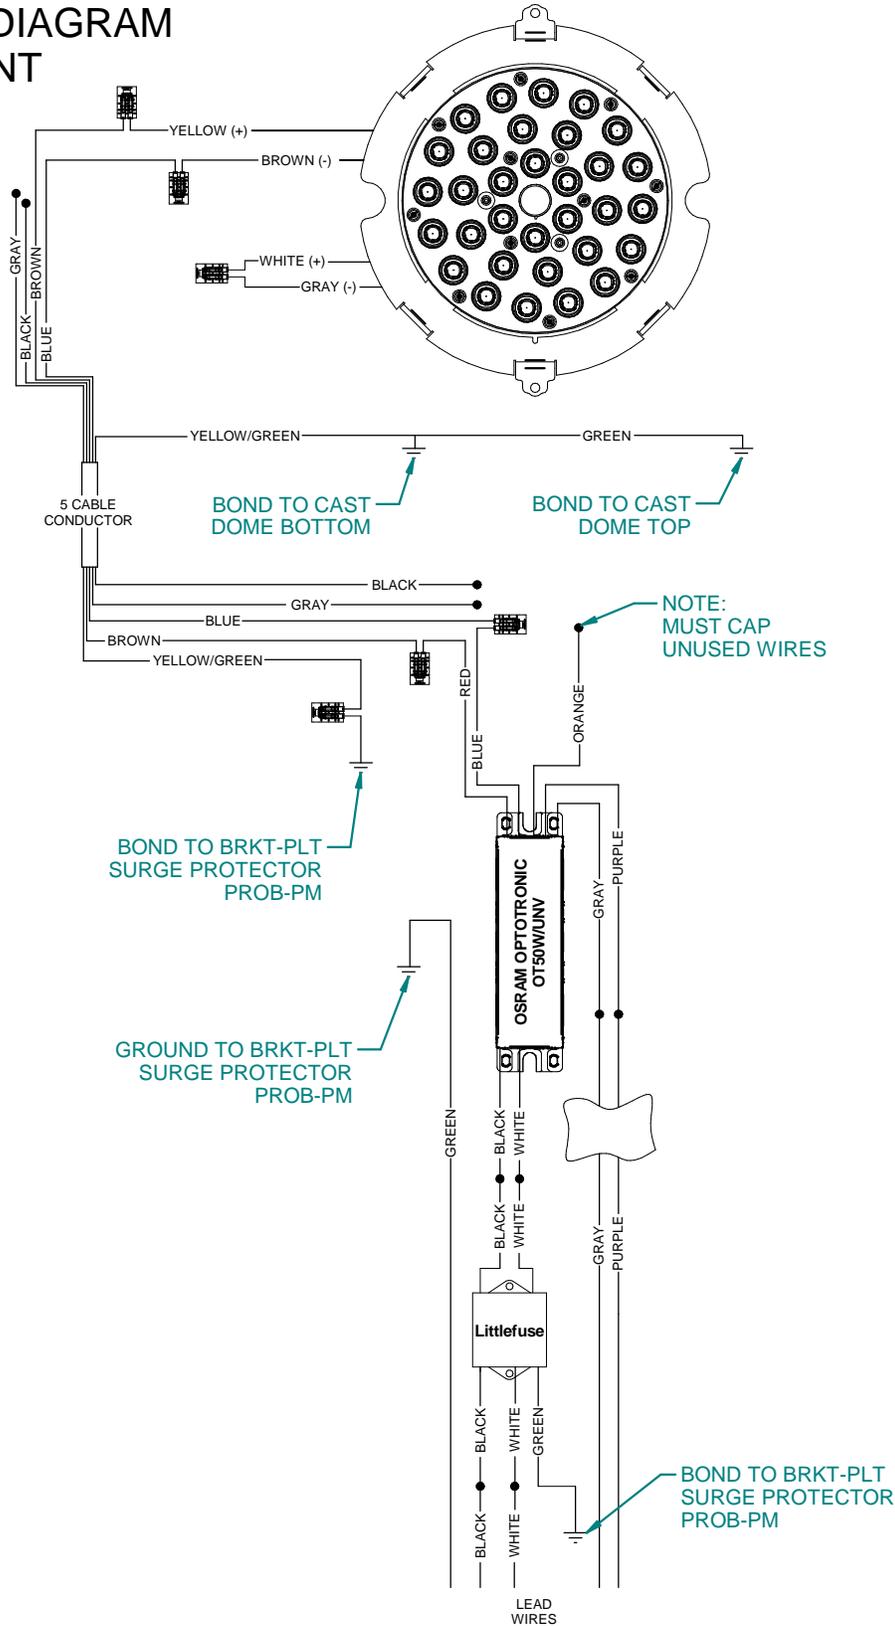

**PROB-PM
FINAL ASSEMBLY
(REFERENCE)**