





## INSTALLATION GUIDE

# CLEAR PLASTIC AIR DEFLECTOR INSTALLATION INSTRUCTIONS

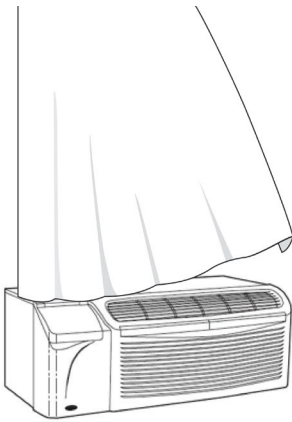

BEFORE

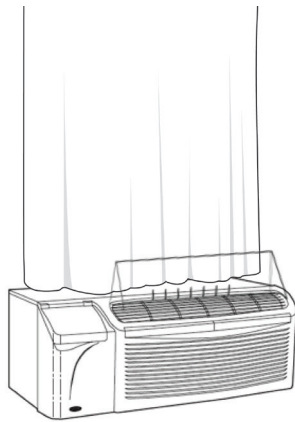

AFTER

### FEATURES:


Clear Plastic

Easy to Install


Screws & Washers included

Adapter Wedges included


## PART LIST

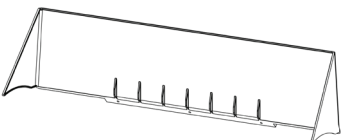

Air Deflector



3 washers - #8  
3 screws - #8-32,  
3/4" length, pan head

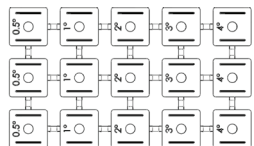

15 Adapter Wedges

# AIR DEFLECTOR INSTALLATION INSTRUCTIONS

These instructions cover the installation of the Air Deflector on a packaged terminal air condition (PTAC) unit. The Air Deflector installs with 3 screws (included). Some PTAC models will require the use the adapter wedges (included). There are 5 adapter wedges per screw provided in order to allow changing the mounting angle of the Air Deflector on the PTAC unit.

## USING THE AIR DEFLECTOR SCREWS

**STEP 1** - Position the Air Deflector onto the PTAC unit as shown in Fig.1.

**STEP 2** - Drill 3 pilot holes into the PTAC unit.

**STEP 3** - Secure the Air Deflector to the PTAC unit using the 3 screws.

**STEP 4** - Tighten the 3 screws onto the PTAC unit.

FIGURE 1


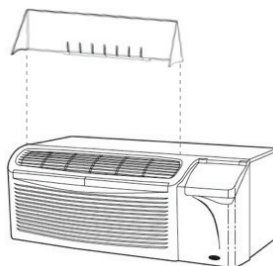


FIGURE 2

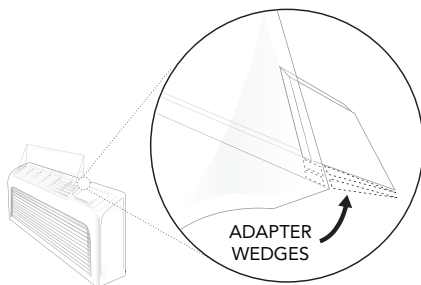

## USING THE ADAPTER WEDGES

**STEP 1** - Stack the desired amount of wedges needed in order to position the Air Deflector onto the PTAC unit, as shown in Fig.2.


**STEP 2** - Drill 3 pilot holes into the PTAC unit.

**STEP 3** - Place the wedges over the screw holes.

**STEP 4** - Secure the Air Deflector to the PTAC unit using the 3 screws as shown in Fig.1.

**STEP 5** - Tighten the 3 screws onto the PTAC unit.

FIGURE 3

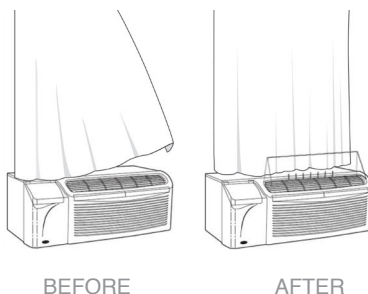

Once installed, the Air Deflector will direct the air flow away from curtains & other obstructions, as shown in Fig.3.

