


Workplace Solutions



600 South Clark St.  
Mayville, WI 53050  
Phone: 920-387-4120

For use on Wire Rope  
● from 3/16"(5mm)  
● thru 3/8"(9mm) O.D.


For Flat Cable to 2.1" wide

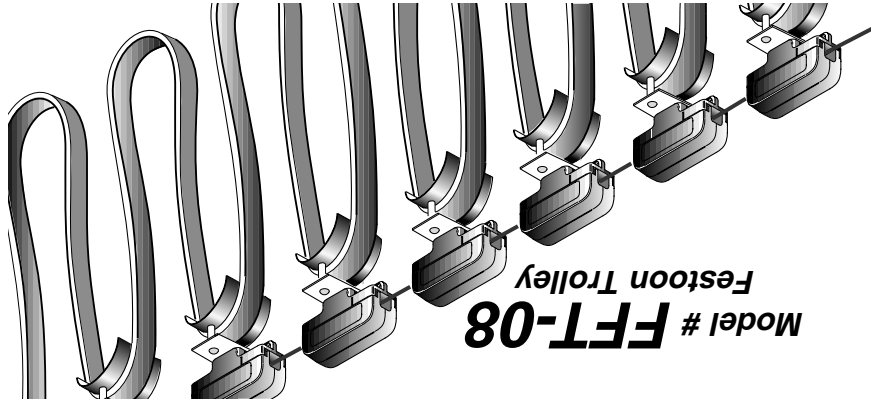

Model # **FFT-08**  
Festoon Trolley

Contents: One model  
**# FFT-08**

Trolley for flat cable to 2.1" wide  
Quickly and easily provide festoon systems for  
multiple conductor flat cables.

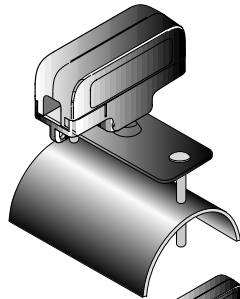


8 MODELS AVAILABLE

- |                                   |  |  |  |   |   |  |
|-----------------------------------|--|--|--|---|---|--|
|                                   |  |  |  |   |   |  |
| #WRS-01<br>Trolley with tool hook | #WRS-02<br>Trolley with tool hook and hose connector | #FRT-04<br>Trolley for round cable or hose, 0.3" to 0.6" OD. | #FRT-24<br>Trolley for two round cables or hoses, 0.3" to 0.6" OD. | #FRT-05<br>Trolley for round cable or hose, 0.6" to 0.94" OD. | #FRT-25<br>Trolley for two round cables or hoses, 0.6" to 0.94" OD. | #FRT-06<br>Trolley for round cable or hose, 0.95" to 1.25" OD. |


Products to make your workplace more efficient and safe.  
**Ask for FREE CATALOG.**

• TROLLEY INSTALLATION •

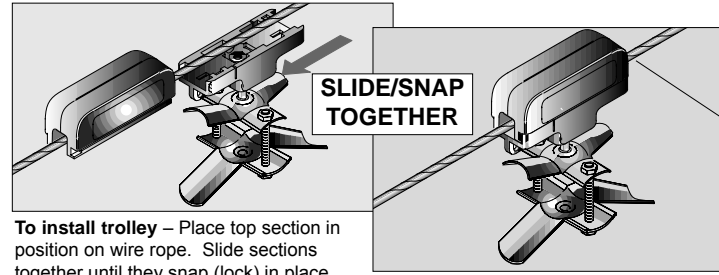


To install trolley – Place top section in position on wire rope. Slide sections together until they snap (lock) in place.  
**NOTE:** Sections may be assembled in only one way. Slide “un-blocked” end into “un-blocked” end. Do not force.

Trolleys fit wire rope up to and including 0.375"(9mm) O.D.

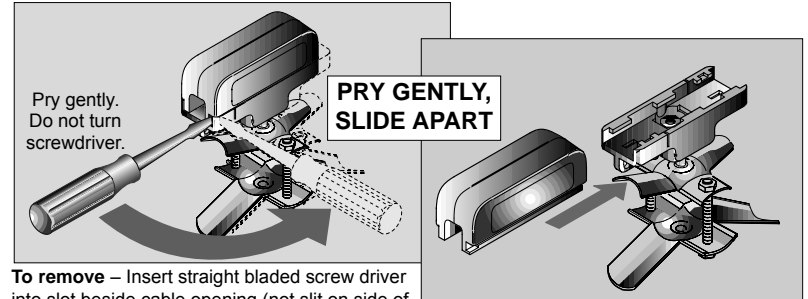

To remove – Insert straight bladed screw driver into slot beside cable opening (not slit on side of trolley) and pry gently as shown above. Do not turn screwdriver. **Slide Apart**

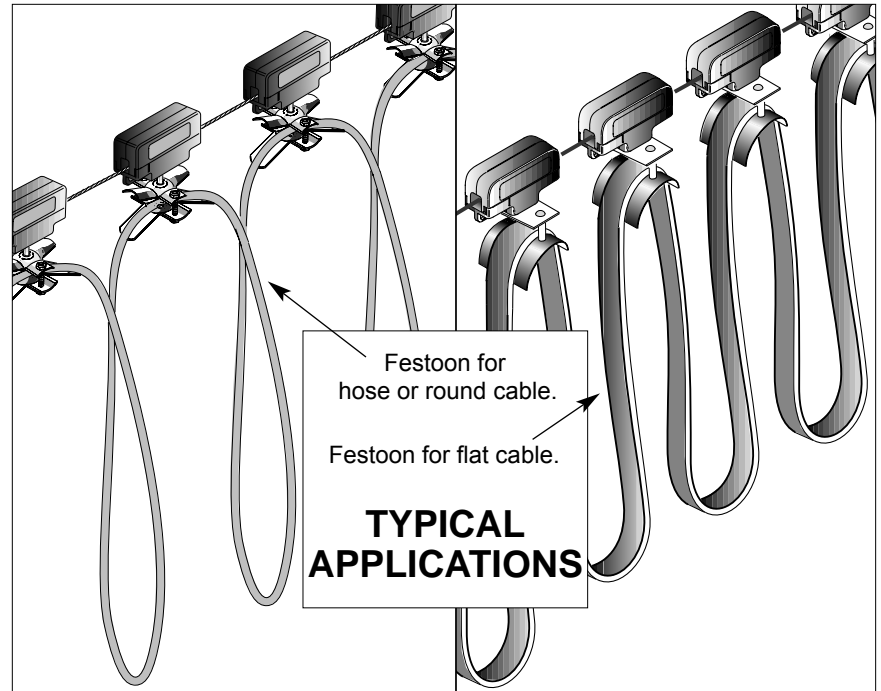

Festoon for hose or round cable.  
Festoon for flat cable.  
**TYPICAL APPLICATIONS**