


INSTALLATION INSTRUCTIONS

STEEL TRACK FESTOON SYSTEM

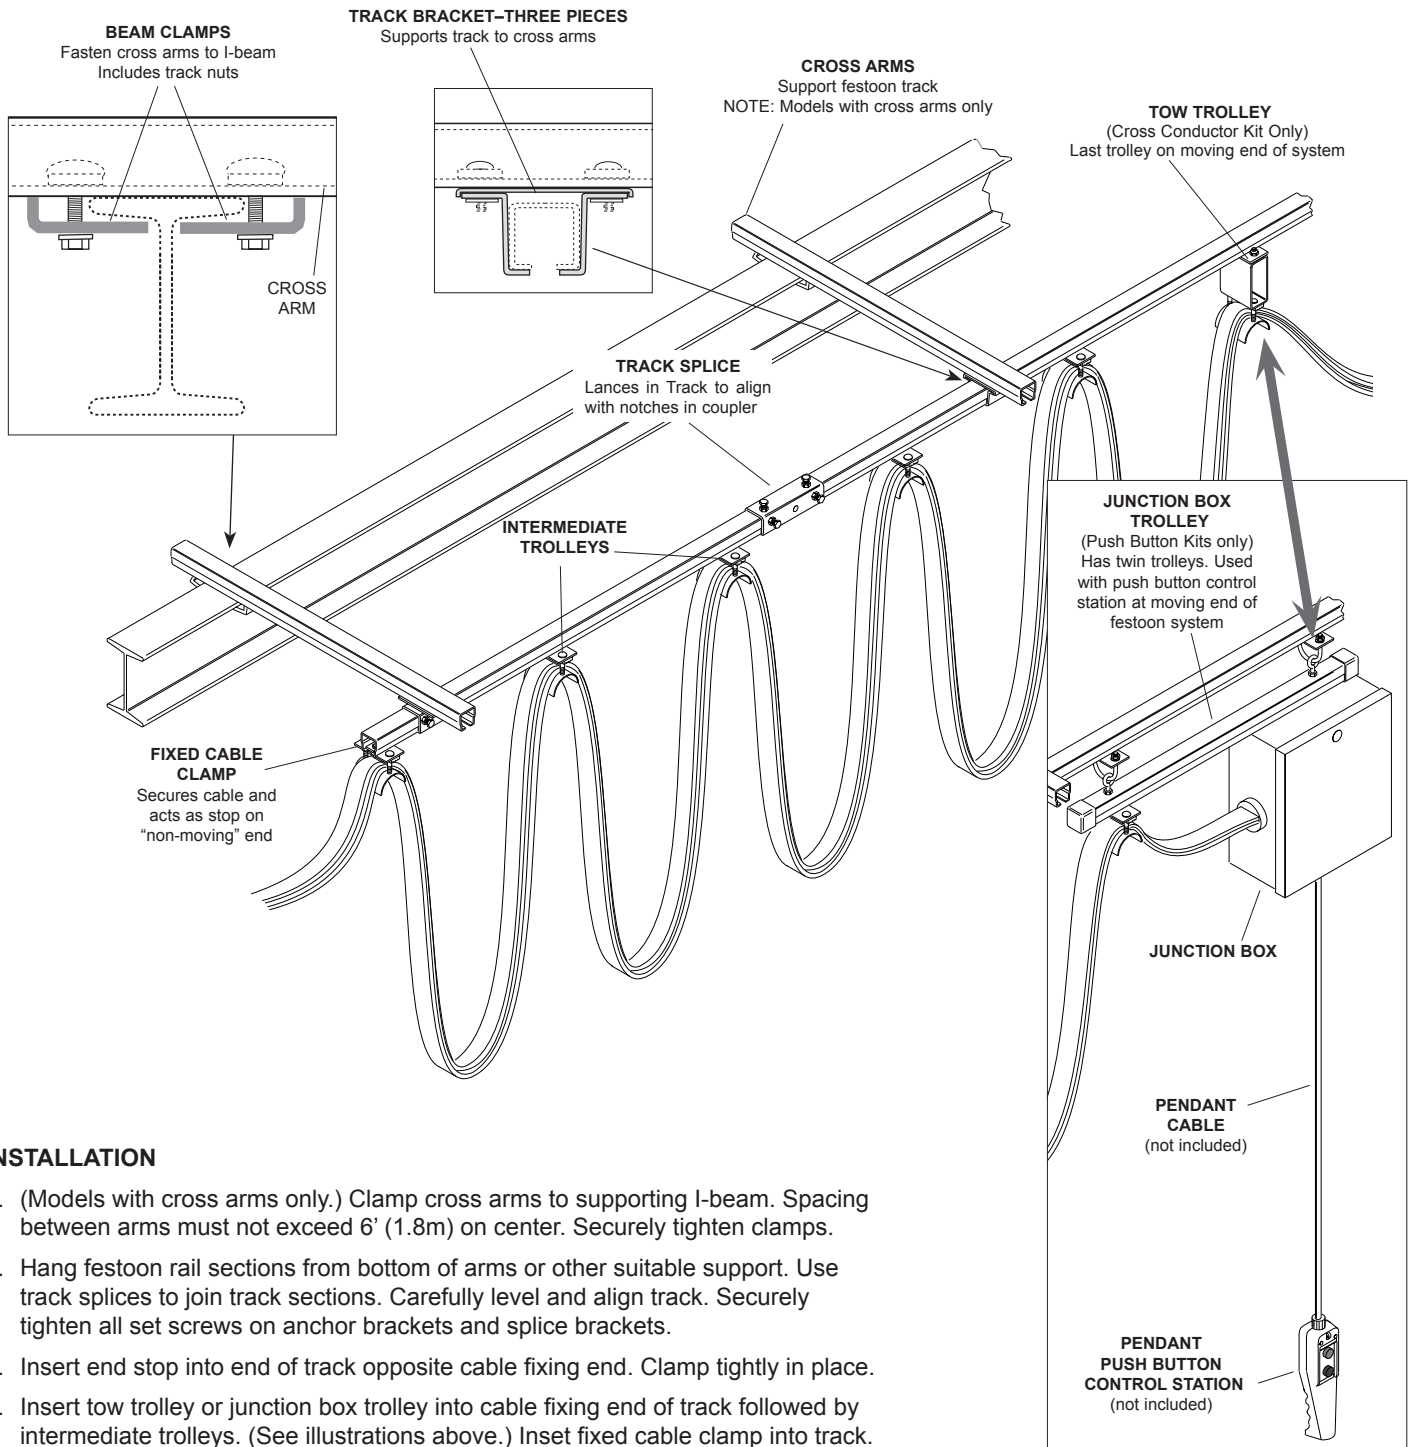

INSTALLATION

1. (Models with cross arms only.) Clamp cross arms to supporting I-beam. Spacing between arms must not exceed 6' (1.8m) on center. Securely tighten clamps.
2. Hang festoon rail sections from bottom of arms or other suitable support. Use track splices to join track sections. Carefully level and align track. Securely tighten all set screws on anchor brackets and splice brackets.
3. Insert end stop into end of track opposite cable fixing end. Clamp tightly in place.
4. Insert tow trolley or junction box trolley into cable fixing end of track followed by intermediate trolleys. (See illustrations above.) Inset fixed cable clamp into track. Securely tighten in place.
5. Install cables. Stack with wider cable, if present, next to saddles at top of loop. Kits assume 3' loop depth (cable saddle to bottom of loop).



Gleason Reel Corp.
 600 S. Clark Street
 Mayville, WI 53050
www.hubbell-gleason.com