

TERMINATOR COVER TYPICAL APPLICATION



UTC-750MX0600

If using conductor cover,

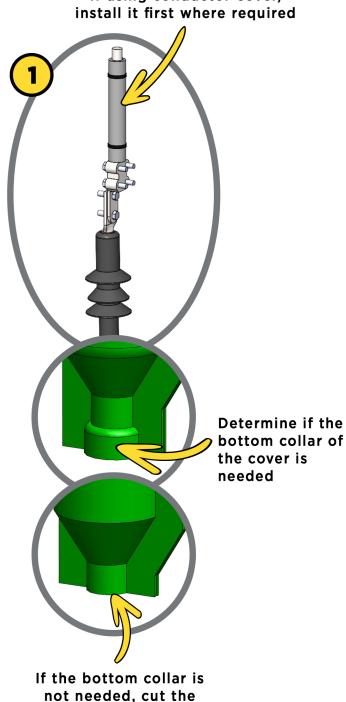

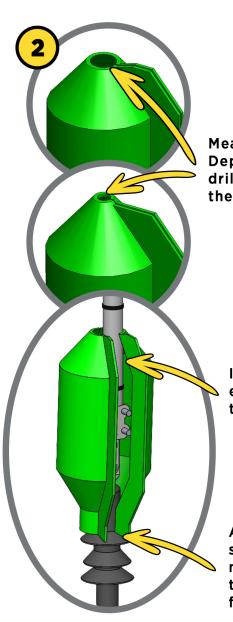


Measure wire. Depending on wire size, drill or trim the cone of the cover If conductor cover is used, ensure it is overlapped by Fasten cover the cover by a min. of 2" together


> Apply the cover to the termination so it rests on the top skirt. It should not enclose or deform any portion of the insulator (especially important for fragile polymer terminations).



Before adapting covers to fit components, read the Installation Basics & **Best Practices carefully**



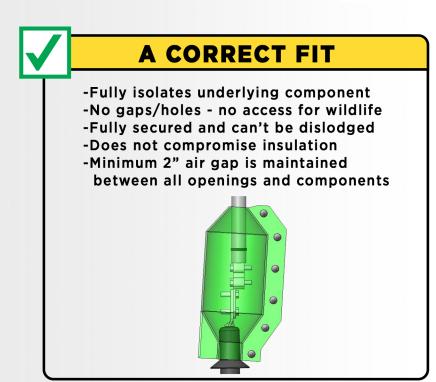

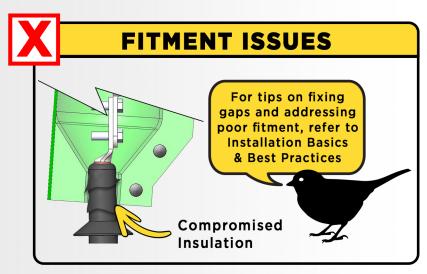

DISCLAIMER



collar off

These products should only be installed, used, or serviced by adequately trained personnel. These instructions are not a substitute for adequate training in the safe use of these products, and they do not address all situations that may be encountered when using these products. When using any product, always read and follow the installation and operating instructions and warnings for the product, all applicable federal, state, and local safety regulations, industry standards, and your employer's internal safety guidelines and operating instructions. Failure to follow applicable safety rules and instructions may result in serious injury, death, and property damage.