


# INSTALLATION INSTRUCTIONS NYLON SNAP-IN CONNECTOR

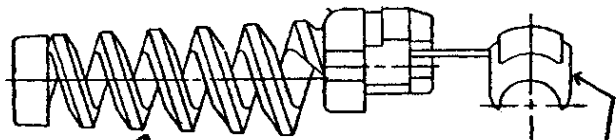


1. APPLY SNAP-IN CONNECTOR OVER CORD.
2. POSITION HINGED CLAMP INTO BODY AND SQUEEZE TIGHT WITH PLIERS.
3. PUSH SNAP-IN CONNECTOR INTO CHASSIS HOLE AND RELEASE.

Wiring Device-Kellems  
Hubbell Incorporated (Delaware)  
185 Plains Road  
Milford, CT 06460-8897  
(203) 882-4800  
PD1702

8/99



# INSTALLATION INSTRUCTIONS NYLON SNAP-IN CONNECTOR

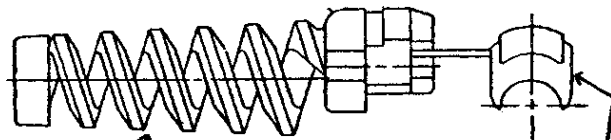


1. APPLY SNAP-IN CONNECTOR OVER CORD.
2. POSITION HINGED CLAMP INTO BODY AND SQUEEZE TIGHT WITH PLIERS.
3. PUSH SNAP-IN CONNECTOR INTO CHASSIS HOLE AND RELEASE.

Wiring Device-Kellems  
Hubbell Incorporated (Delaware)  
185 Plains Road  
Milford, CT 06460-8897  
(203) 882-4800  
PD1702

8/99



# INSTALLATION INSTRUCTIONS NYLON SNAP-IN CONNECTOR

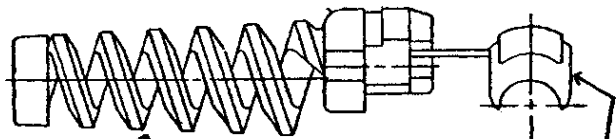


1. APPLY SNAP-IN CONNECTOR OVER CORD.
2. POSITION HINGED CLAMP INTO BODY AND SQUEEZE TIGHT WITH PLIERS.
3. PUSH SNAP-IN CONNECTOR INTO CHASSIS HOLE AND RELEASE.

Wiring Device-Kellems  
Hubbell Incorporated (Delaware)  
185 Plains Road  
Milford, CT 06460-8897  
(203) 882-4800  
PD1702

8/99



# INSTALLATION INSTRUCTIONS NYLON SNAP-IN CONNECTOR

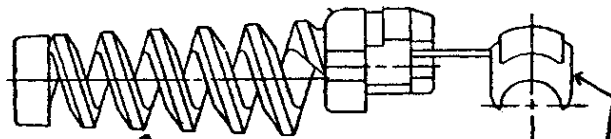

1. APPLY SNAP-IN CONNECTOR OVER CORD.
2. POSITION HINGED CLAMP INTO BODY AND SQUEEZE TIGHT WITH PLIERS.
3. PUSH SNAP-IN CONNECTOR INTO CHASSIS HOLE AND RELEASE.

Wiring Device-Kellems  
Hubbell Incorporated (Delaware)  
185 Plains Road  
Milford, CT 06460-8897  
(203) 882-4800  
PD1702

8/99

