

**ENGLISH**


**NOTICE:** For installation by a qualified electrician in accordance with the national and local electrical codes and the following instructions.

**CAUTION RISK OF ELECTRIC SHOCK:** Disconnect power before installing.

**CAUTION USE COPPER CONDUCTORS ONLY.**

**WIRING INSTRUCTIONS:**

1. Connect the black or red lead wire on the receptacle to the ungrounded line conductor (HOT conductor, black).
2. Connect the white lead wire on the receptacle to the grounded line conductor (NEUTRAL conductor, white).
3. Connect the green lead wire on the receptacle to the grounding conductor (green, green/yellow, bare).
4. Use approved wire connectors for lead wire connections making sure connections are secure.
5. ENSURE THAT THERE ARE NO STRAY WIRE STRANDS.
6. Mount device in box and secure cover/wall plate.

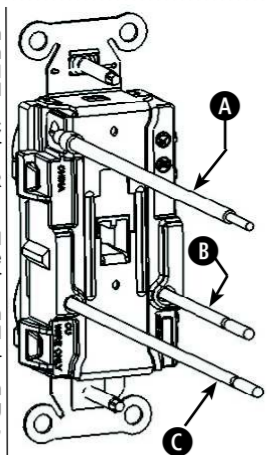

- A** GREEN (GROUND)  
VERT (MALT)  
VERDE (TIERRA)
- B** BLACK or RED (HOT)  
NOIR ou ROUGE (ACTIF)  
NEGRO o ROJO (VIVO)
- C** WHITE (NEUTRAL)  
BLANC (NEUTRE)  
BLANCO (NEUTRO)

Hubbell Incorporated (Delaware)  
Shelton, CT 06484 1-800-288-6000  
PD2313 1011

