






Installed Architectural Sensors Technical Installation Data

SECTIONS




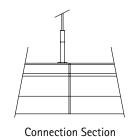


BOTTOM VIEW



SINGLE MOUNTING

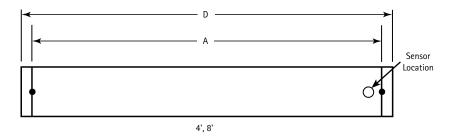

ROW MOUNTING

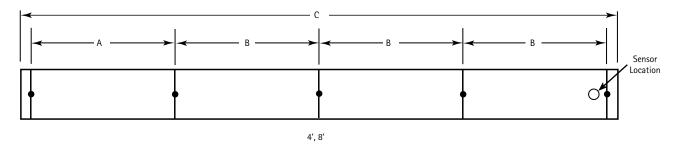

DATA CHART

Page **1/2** Rev. 08/28/12

Nominal	Approx. Weight			_	D	C	D
Length	1-lamp	2-lamp	3-lamp	A	Б		D
4'	13.3 lbs.	15.6 lbs.	17.9 lbs.	47 1/4"	48"	192 5/8"	48 5/8"
8'	25.3 lbs.	27.6 lbs.	29.9 lbs.	95 1/4"	96"	384 5/8"	96 5/8"

Note: Suspension data is computed using the standard aircraft cable assembly. The use of rigid stems will yield different data. Please consult factory for stem data.

Limitations exist for rows containing Installed Architectural Sensors; contact factory for assistance. See technical downloads for appropriate sensor manufacturer detail.

CURVES / CVRB ARCHITECTURAL SENSORS TID






CURV RADIAL BAFFLE

Installed Architectural Sensors Technical Installation Data


Connection Instructions (2 Lamp):

- 1. Install first fixture of row with two hangers.
- 2. Slide inner die cast plates together.
- 3. Secure fixture joints with two bolts and nuts and attach hanger at opposite end.
- 4. Repeat steps 2 and 3 until row is complete.
- 5. At each end of the row, attach and align end cap with

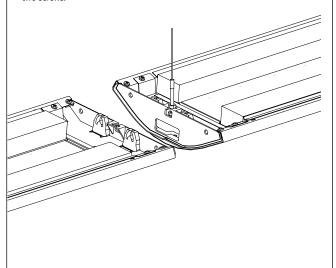


Suspension Instructions (2 Lamp):

- 1. Set bottom nut to desired fixture height.
- 2. Adjust upper nut for a minimum of 3/8" between upper and lower nuts.
- 3. Slide cable hanger into hanger slot.
- 4. Secure and tighten upper nut.

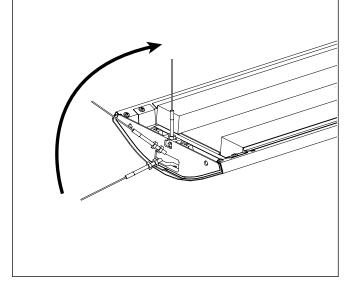


Connection Instructions (1 or 3 Lamp):

- 1. Install first fixture of row with two hangers.
- 2. Slide inner die cast plates together.
- 3. Secure fixture joints with two bolts and nuts and attach hanger at opposite end.
- 4. Repeat steps 2 and 3 until row is complete.
- 5. At each end of the row, attach and align end cap with two screws.

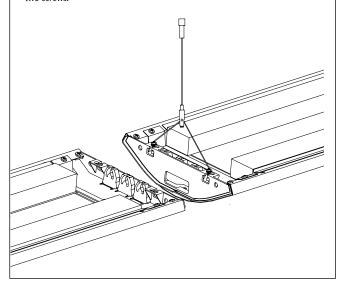

Suspension Instructions (1 or 3 Lamp):

- 1. Set bottom nut to desired fixture height.
- 2. Adjust upper nut for a minimum of 3/8" between upper and lower nuts.
- 3. Slide cable hanger into hanger slot.
- 4. Secure and tighten upper nut.

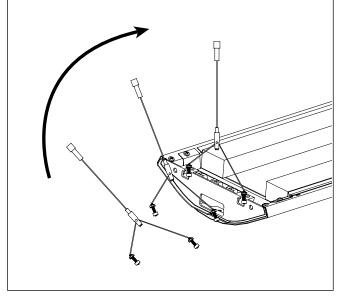

Page **2/2** Rev. 08/28/12

CURVES / CVRB ARCHITECTURAL SENSORS TID

