

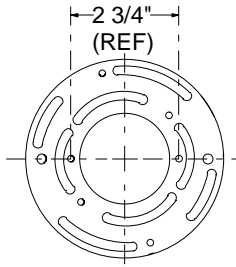


INSTALLATION INSTRUCTIONS

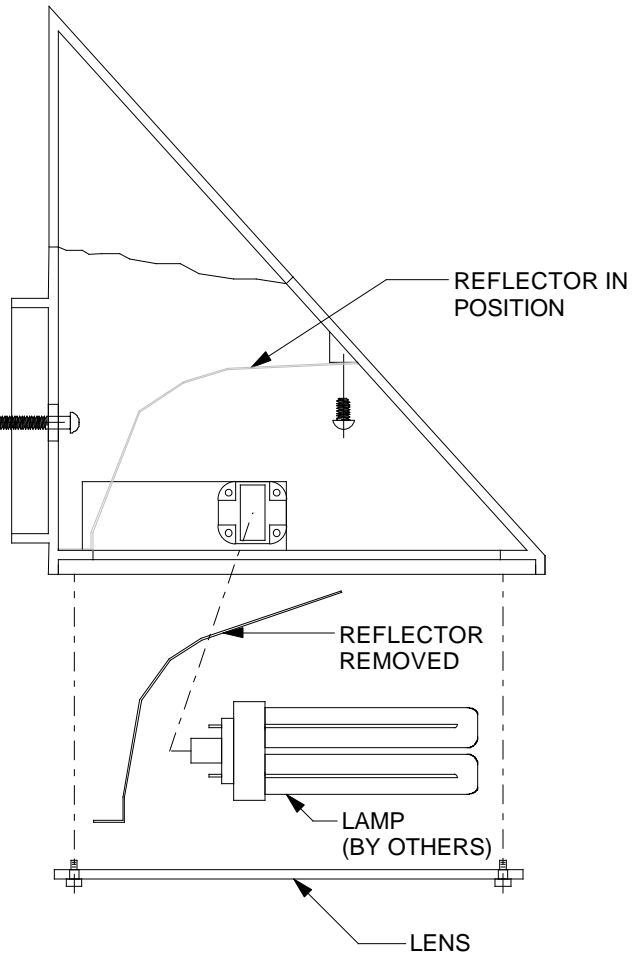

CIRCLE STRAP ALIGNMENT TO JUNCTION BOX.

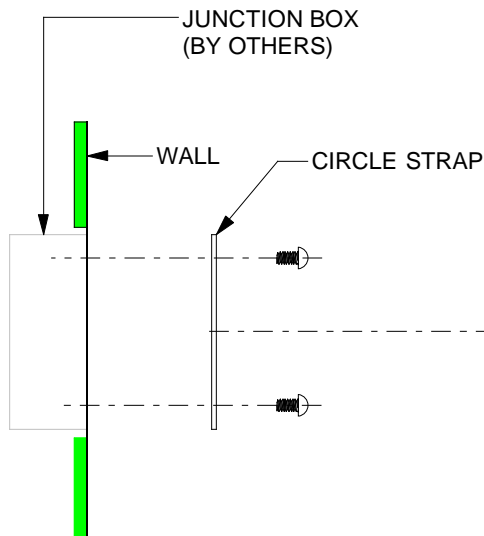

INSTALLATION STEPS:

- 1) MAKE SURE THAT THE POWER IS OFF.
- 2) SECURE CIRCLE STRAP TO JUNCTIO BOX IN WALL AND PULL WIRE LEADS OUT FROM JUNCTION BOX.
- 3) REMOVE LENS FROM FIXTURE AND SET ASIDE.
NOTE: 3/32" ALLEN WRENCH REQUIRED.
- 4) REMOVE REFLECTOR AS SHOWN, FOR ACCES TO MOUNTING.
- 5) POSITION FIXTURE OVER JUNCTION BOX AND SECURE IN PLACE TO THE CIRCLE STRAP W/ (2) 8-32 x 1 1/2" SCREWS.
- 6) MAKE WIRE CONNECTIONS INSIDE OF FIXTURE AS REQUIRED PER CODE AND PUSH THE WIRE LEADS AND CONNECTORS BACK INTO JUNCTION BOX.
- 7) REPLACE REFLECTOR AND SECURE W/ (1) SCREW AS SHOWN.
- 8) INSTALL PROPER LAMP PER REPLACEMENT LAMP LABEL.
- 9) REPLACE LENS AND SECURE IN PLACE.
NOTE: DO NOT OVER TIGHTEN SCREWS.
- 10) INSTALLATION IS COMPLETE.

A RCHITECTURAL

A REA

L IGHTING

CATALOG NUMBER
M3-SERIES

PART NO.
A96093

DATE APPRVD

DATE REV

14249 Artesia Blvd. P.O. Box 1869
La Mirada CA. 90638-1869
714-994-2700 fax 714-994-0522