INSTALLATION INSTRUCTIONS

UCB-LED

FIXTURE HEAD ASSY

(REF)

LED PCB

(BY OTHERS)

ACORN NUTS

4 PLACES 1/4-20 X 1/2" SET SCREWS

3 PLACES

BODY

1/4-20 X 1/2"

3 PLACES

CONDUIT

GROUT AFTER LEVELING

BASE PLATE

(BY OTHERS)

(BY OTHERS) FINISHED GRADE


ANCHOR BOLTS

Ø1/2"-13 PARTIALLY GALVANIZED

FOUNDATION PAD

SET SCREWS

INSTALLATION:



2) Place base plate over anchor bolt, level & tighten nuts. (SEE BELOW). Place body over base. Secure with (3) 1/4-20

3) Provision for water drainnage at footing (BY OTHERS).

4) Make wire connections from incoming wire leads to fixture wire leads.(WHITE TO WHITE, BLACK TO BLACK, GREEN TO GREEN). NOTE: Connect green ground lead to equiptment ground.

5) Place fixture on top of body and secure in place with (3) 1/4-20 s/s set screws.

6) Installation complete.

TO SERVICE LED:

- 1) Turn off power.
- 2) Loosen (4) acorn nuts underneath fixture head, Lift and service LED as needed.
- 3) Reassemble fixture head and install (4) acorn nuts.
- 4) Installation complete.

INCOMING / GROUND TERMINAL

1/2" FLAT WASHERS

Ø.53 X 1 1/16" OD **GALVANIZED**

(4) PLACES

(4) PLACES

FIXTURE HEAD

ASS'Y

CONNECTORS

LED

TO SERVICE DRIVER:

1) Turn off power.

BODY (REF)

BASE (REF)


- 2) Loosen (3) set screws on the fixture head assy, Lift and service driver as need.
- 3) Reassemble fixture head and tighten (3) set screws.
- 4) Installation complete.

LEVELING HEX NUTS Ø1/2"-13 GALVANIZED HEAVY HEX NUT

> 2 1/2" Ø ANCHOR BOLT PROJECTION

1/2" MIN. GROUNT



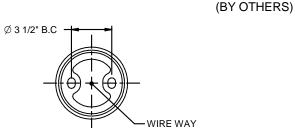

BOTTOM VIEW (MOUNTING DETAILS)

FINAL INSTALLATION DETAIL

architectural alighting Tel(626)968-5666 Fax(626)968-5716



APPRVD PART NO. 11/11/2016 KC DATE 11/11/2016

93070532