

## PELOTON™ SINGLE POINT MOUNTING INSTALLATION

**Note:** PELSMP not compatible with 2' uplight models or 2' 30,000 lumen model.

### STEP 1

Remove indicated knock outs, both sides.

### STEP 2


Attach SPM bracket to housing. Be sure that hooks engage housing.

### STEP 3

Lock bracket in place using 4 screws.

### STEP 4

Attach SPM end caps using supplied screws.

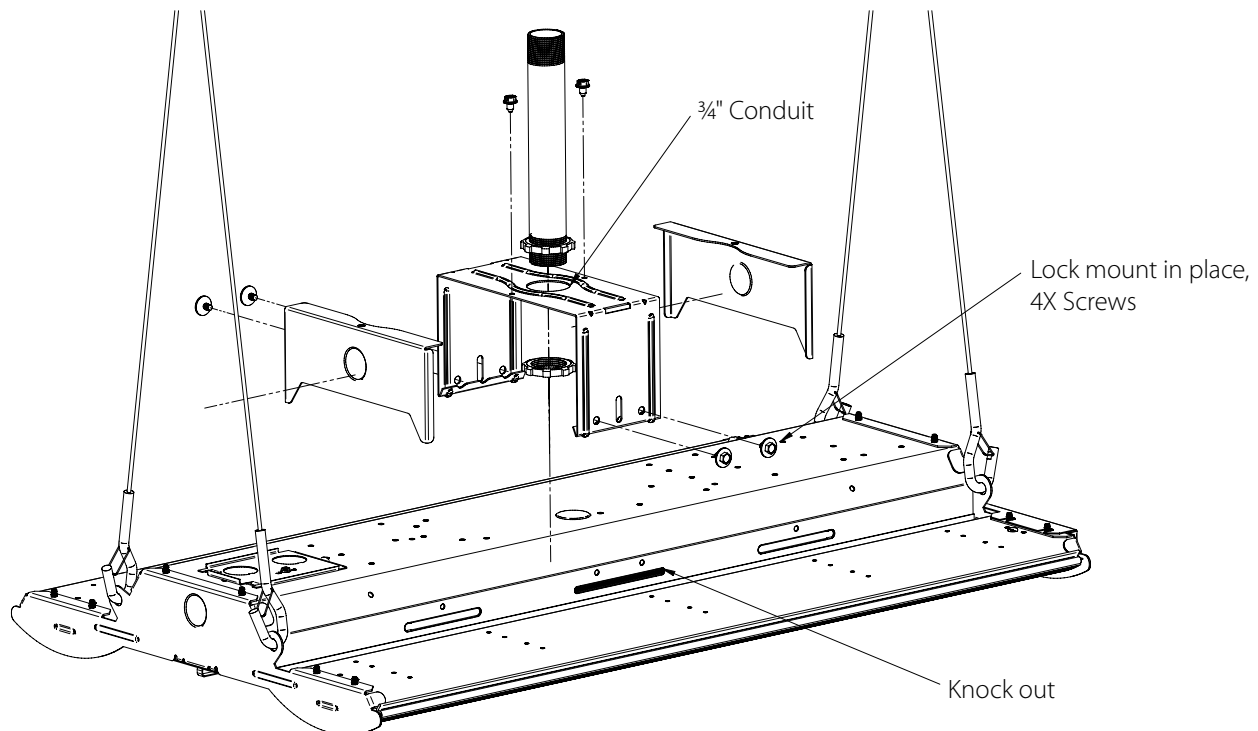

\*SPM bracket includes 3/4" conduit feed.

\*SPM kit includes PELQM aircraft cables.