




SUPPORT CLAMPS INSTALLATION INSTRUCTIONS For Use On Plastic Pipe After Squeeze-off

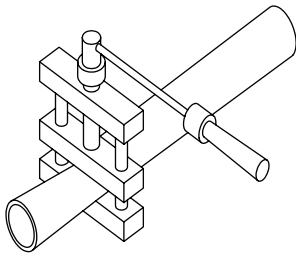

1. Pipe squeezed-off with squeeze-off tool

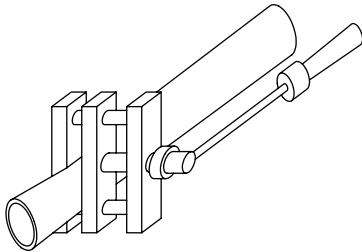

2. Note: After the tool is loosened, you may rotate the squeeze-off tool 90° and reapply pressure to round out the pipe and make installing the support clamp easier. Remove the squeeze-off tool.

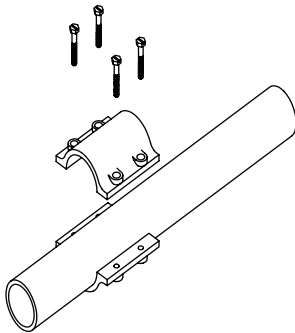

3. Place top and bottom halves of support clamp over squeezed area. Install bolts and tighten evenly until flanges meet.

TYPICAL ASSEMBLY FOR
4 & 6 BOLT SUPPORT CLAMPS