

NOTE: TEXT & GRAPHICS TO BE PRINTED ON WHITE BACKGROUND

ASSEMBLY INSTRUCTIONS : I.D. SEAL® CON-STAB

IMPORTANT

For use on:
Polyethylene gas pipe meeting the requirements of ASTM D 2513

Pressure Rating: 125 psig MAOP

Operating Temperature: -20 to 140° F

1 Verify the stab fitting is the correct size for the polyethylene (P.E.) pipe. Verify the SDR (or wall thickness) of the pipe matches the SDR (or wall thickness) printed on the fitting label.



2 Cut pipe ends square.



3 Clean piping thoroughly to assure there is no dirt, grease or oil in assembly area.



4a Chamfer end of pipe using [Continental's ID chamfering tool with ID gauge](#).



or


4b Chamfer end of pipe using [Continental's double ended ID chamfering tool](#).



5 Mark the stab depth by inserting pipe into ID chamfer tool and marking the pipe at the entrance as shown.



6 If using ID chamfer tool with gauge, check for proper chamfer by inserting pipe on gauge up to the o ring. With proper chamfer, o ring will begin to enter pipe.

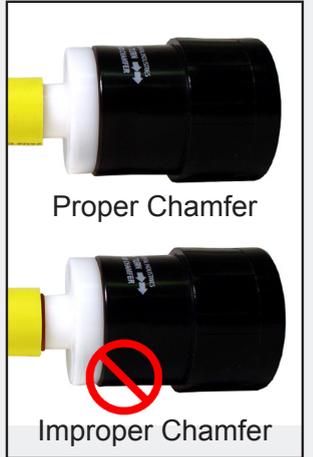

7 Stab pipe completely into fitting entrance.




8 Stab pipe completely into fitting so that the mark on the pipe is within 1/8" from the fitting entrance.



9 Repeat steps 1 thru 8 for all Con-Stub joints.

10 To assure proper assembly and to comply with 49 CFR 192 Subpart J—Test Requirements, the joint shall be leak tested.

IMPORTANT
CHAMFER THE
ID OF PIPE

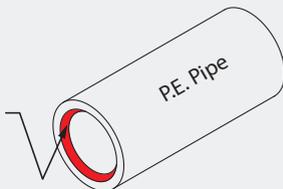

PATENT #'S 5,366,260, 5,692,785 & 5,853,272

PART #34-4861-30 ECN 2552 REV "B" 03/21/13



Continental Industries

A Division of BURNDY LLC

Phone No. 918-627-5210

Fax No. 918-622-1275

www.conind.com

8 X 12 BAG (PERFERATED) 34-4861-30

 **Continental Industries**

ATTENTION

**A CONTINENTAL CHAMFER TOOL
MUST BE USED TO INSTALL
ID SEAL® CON-STAB FITTINGS**



For Installation Instructions, Please visit <http://www.youtube.com/user/theconind>
Phone No. 918-627-5210 / Fax No. 918-622-1275 / www.conind.com