



GAI-TRONICS® CORPORATION
A HUBBELL COMPANY

Model XCP0140A Headset Interface Kit

Field Installation Kit Instructions

Confidentiality Notice

This manual is provided solely as an operational, installation, and maintenance guide and contains sensitive business and technical information that is confidential and proprietary to GAI-Tronics. GAI-Tronics retains all intellectual property and other rights in or to the information contained herein, and such information may only be used in connection with the operation of your GAI-Tronics product or system. This manual may not be disclosed in any form, in whole or in part, directly or indirectly, to any third party.

General Information

The Model XCP0140A Headset Interface Kit for the ICP9000 Series Desktop Console or the ICP9000 Navigator Series MCU provides a connection for the XHS003A Headset. The kit includes the following components:

Qty	Description
1	Headset Interface assembly
2	#10-32 Phillips screws

Installation



Warning: Observe precautions for handling electrostatic sensitive devices.

ICP9000 Series Desktop Console

1. Mount the headset interface assembly to the right side of the ICP9000 Series Desktop Console by attaching it with the supplied #10-32 screws to the underside of the unit. See Figure 1.
2. Plug the modular connector into the rear of the console at the HEADSET/HANDSET jack.

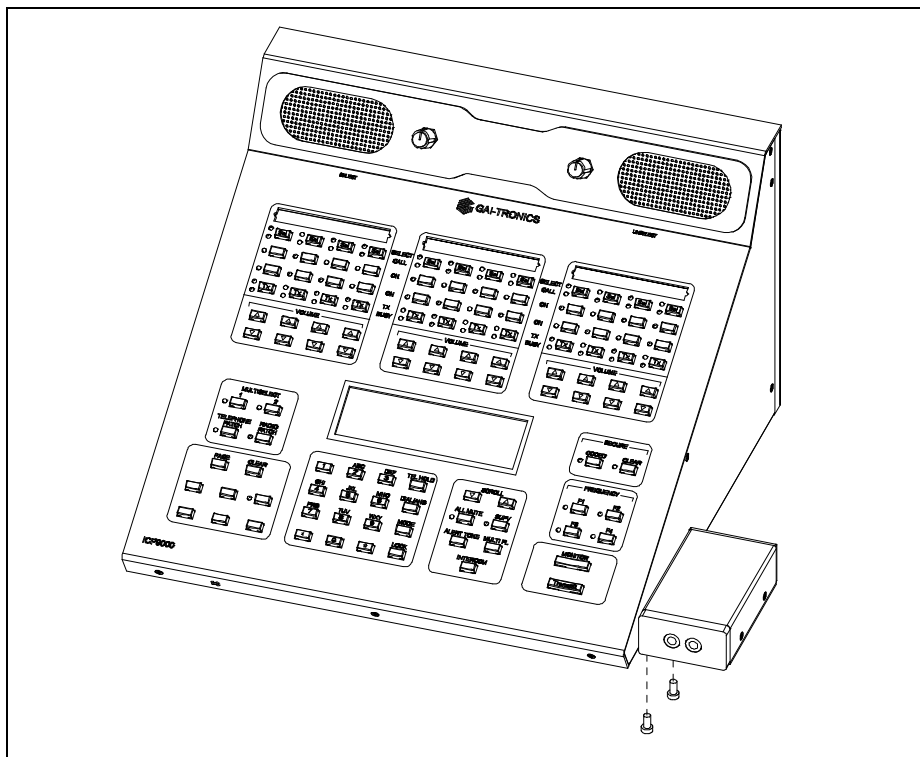


Figure 1.

ICP9000 Navigator Series MCU

Note: The headset interface assembly jack was designed for mounting beneath a horizontal surface or on an edge.

1. Remove the rear panel.
2. Remove the Navigator control ribbon cable from the PPI on the Navigator board and PPI on the main board. Keep the cable for future use.
3. Position the shorting clips on PP2 to enable operation of the headset. This option must also be enabled and the sensitivity of the headset microphone set in the User Parameter Menu as described in the Console Diagnostics section of the Installation and Service Manual, Pub 43004-025.
4. The headset jack plugs into the modular-styled headset jack (P9) at the back of the MCU.
Note: This jack is not labeled on this product.

For left-hand mounting, follow the steps below:

1. Detach the endcap with the plug receptacles by removing the 2 screws located on underside of the headset interface.
2. Remove the other endcap by gently pushing on it from the inside of the unit.
3. Flip the endcaps, reattach the screws, and the headset interface can now be mounted to the left side. See Figure 2.
3. Plug the modular connector into the rear of the console at the HEADSET/HANDSET jack, or on the MCU at jack (P9, which is not labeled).

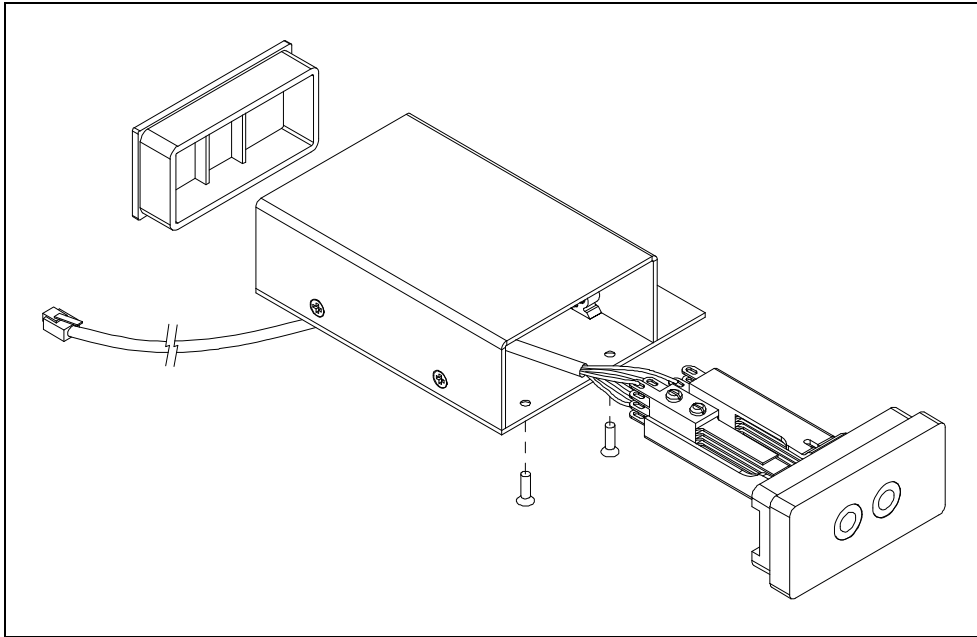


Figure 2.