



Alternate instructions for installing larger diameter cables in RACO® STAB-IT® II boxes (if needed)


1. Loosen up screw

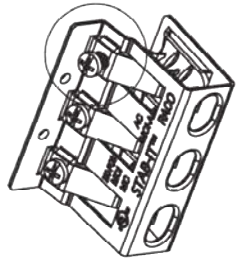




2. Push in cable

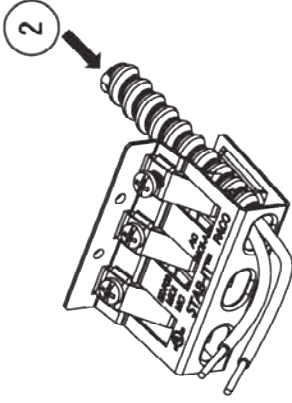




3. Tighten up screw

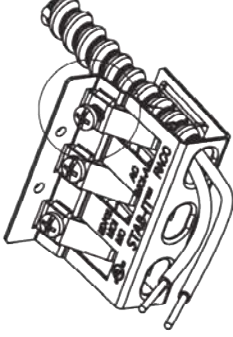

4. Push in cable until it
snaps into place

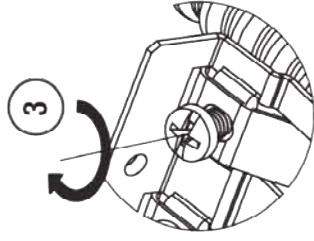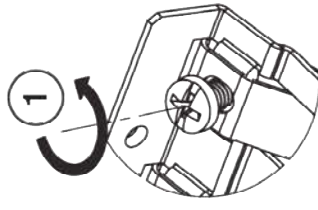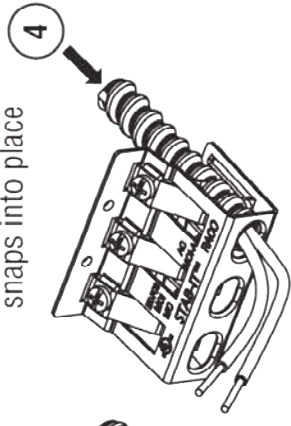

Instructions for removing cables from RACO® STAB-IT® II boxes

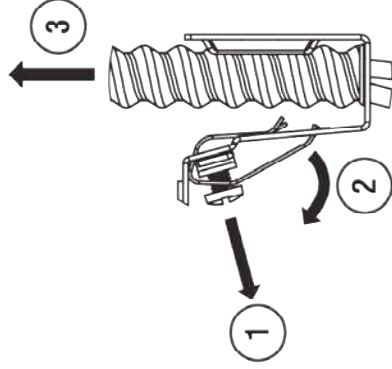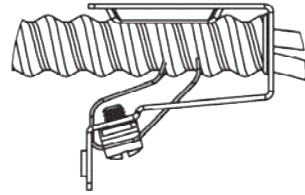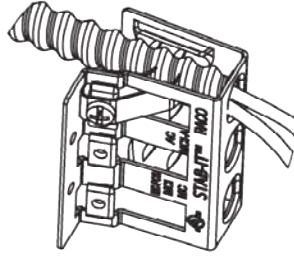

1. Loosen screw
2. Pull the spring clip away from cable as shown
3. Pull cable out


Instructions for using the RACO® Universal Box Stabilizer

1-1/2" Deep Boxes




Bend center tab as shown

For 2-1/2" deep studs

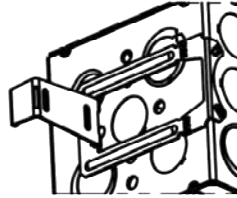


Bend center tab as shown - 2 places

For 3-1/2" deep studs

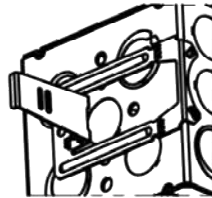


Bend center tab as shown

For 3-5/8" deep studs

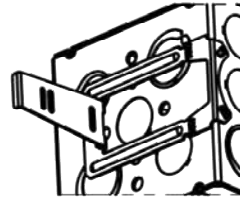


Bend center tab as shown

For 4" deep studs

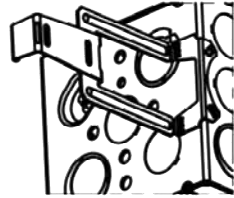

Bend both tabs as shown


For 5-1/2" deep studs

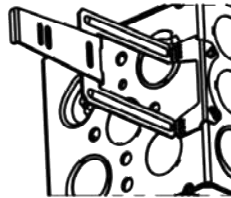


Bend both tabs as shown

For 6" deep studs


2-1/8" Deep Boxes

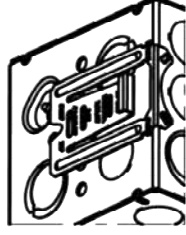


Comes preset

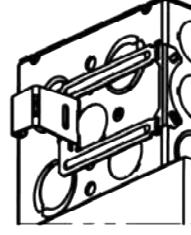


Bend center tab as shown - 2 places

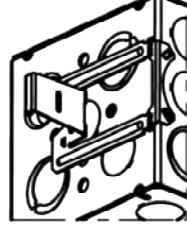


Bend center tab as shown

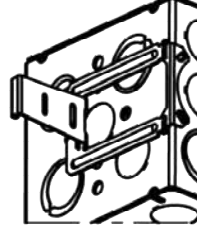

Bend center tab as shown

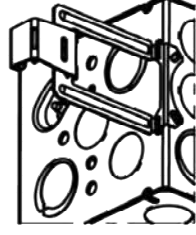

Bend both tabs as shown

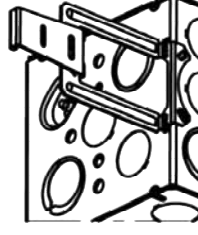

Bend both tabs as shown

NOTICE: Bottom knockouts are NOT usable with the FS support.