
ITEM	CATALOG NO.	QTY	DESCRIPTION
1	CC15	1	CARRYING CASE
2	QP18M18X02D	20	MALE DISCONNECT, #22-#18 AWG, VINYL INSULATION
3	QP18F18X02D	20	FEMALE DISCONNECT, #22-#18 AWG, VINYL INSULATION
4	QP18M25X03D	20	MALE DISCONNECT, #22-#18 AWG, VINYL INSULATION
5	QP18F25X03D	20	FEMALE DISCONNECT, #22-#18 AWG, VINYL INSULATION
6	SP18	20	SPLICE, #22-#18 AWG, VINYL INSULATION
7	QP14M18X02D	20	MALE DISCONNECT, #16-#14 AWG, VINYL INSULATION
8	QP14F18X02D	20	FEMALE DISCONNECT, #16-#14 AWG, VINYL INSULATION
9	QP14M25X03D	20	MALE DISCONNECT, #16-#14 AWG, VINYL INSULATION
10	QP14F25X03D	20	FEMALE DISCONNECT, #16-#14 AWG, VINYL INSULATION
11	SP14	20	SPLICE, #16-#14 AWG, VINYL INSULATION
12	BULM18P	20	BULLET DISCONNECT, #22-#18 AWG, VINYL INSULATION
13	BULF18P	20	RECEPTICAL DISCONNECT, #22-#18 AWG, VINYL INSULATION
14	BULM14P	20	BULLET DISCONNECT, #16-#14 AWG, VINYL INSULATION
15	BULF14N	20	RECEPTICAL DISCONNECT, #16-#14 AWG, NYLON INSULATION
16	SP10	20	SPLICE, #12-#10 AWG, VINYL INSULATION
17	STKIT15LABEL	1	LABEL, PREPRINTED
18	STKIT15BOTTOMLABEL	1	LABEL, PREPRINTED

REV	DATE	DESC
А	07/04/2013	UPDATED AS PI

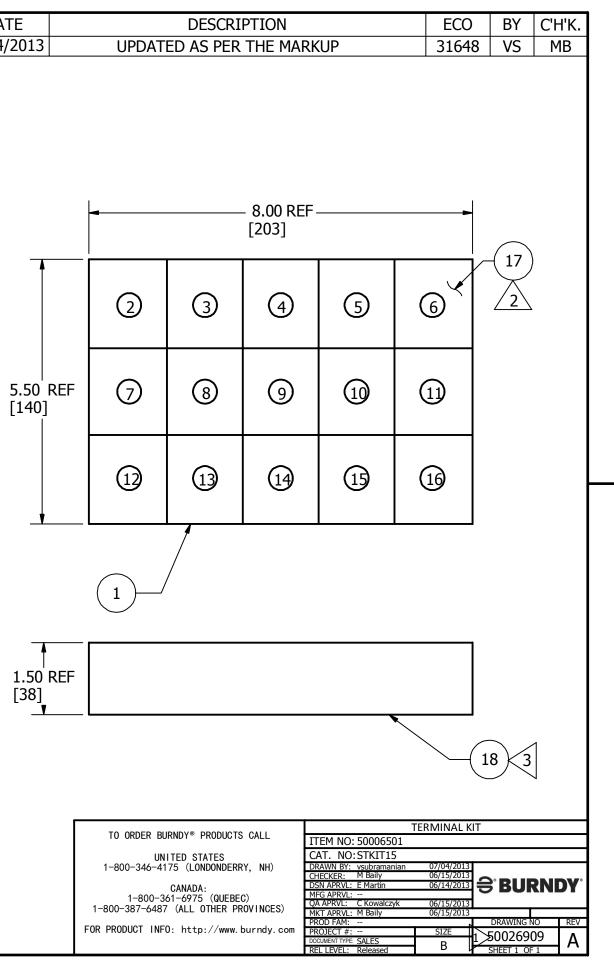

NOTES:

1> ALL INFORMATION CONTAINED ON THIS DOCUMENT IS FOR REFERENCE ONLY.

2>PLACE LABEL TO COVER SO THAT THE PRINTED "BURNDY" ON ITEM 17 IS UPRIGHT WHILE THE CASE LATCH FACES DOWNWARD.

3> PLACE LABEL ON BOTTOM OF CASE SO THAT THE LONG SIDE OF THE LABEL IS PARALLEL WITH THE LONG SIDE OF THE CASE.

4. DIMENSIONS IN BRACKETS [] ARE IN MILLIMETERS ROUNDED OFF TO THE NEAREST MILLIMETER, UNLESS OTHERWISE SPECIFIED AND ARE FOR REFERENCE ONLY.