


Engage bracket to open side of stud and hinge box into position.

No screws needed.



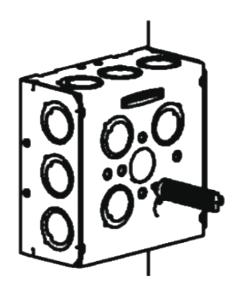

Snap Far Side Box Support into hole in back of box. Support suited for 1-1/2" deep box in 3-1/2" wall.

Snip support to desired length to accomodate deeper box and/or narrower wall cavity.

