



REVISIONS			
REV.	DATE	DESCRIPTION	BY
-	11-08-23	INITIAL RELEASE	RMV

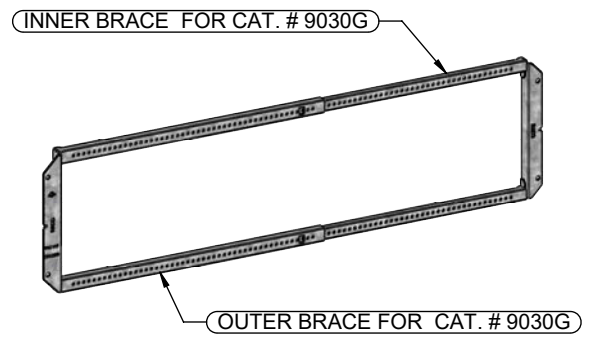

BRACKETS	STEEL	GALVANIZED
DESCRIPTION	MATERIAL	FINISH
LIST OF PARTS		
THE DESIGN AND DIMENSIONS OF THE PRODUCT SHOWN ON THIS DRAWING ARE SUBJECT TO CHANGE WITHOUT NOTICE		
TITLE:		
ADJ OPEN CENTER BRACKET		
<u>TOLERANCE UNLESS OTHERWISE SPECIFIED</u>		
.XX DECIMAL ± .015	DRAWN BY: RMV SCALE: APP. BY: N.S. DATE: 11-08-23 1:8	
.XXX DECIMAL ± .005		
ANGLE ± 2°		

- NOTES:
1. ALL DIMENSIONS ARE IN INCHES AND [MILLIMETERS]
 2. cULus LISTED
 3. FOR INSTRUCTION SHEET SCROLL DOWN TO NEXT SHEET

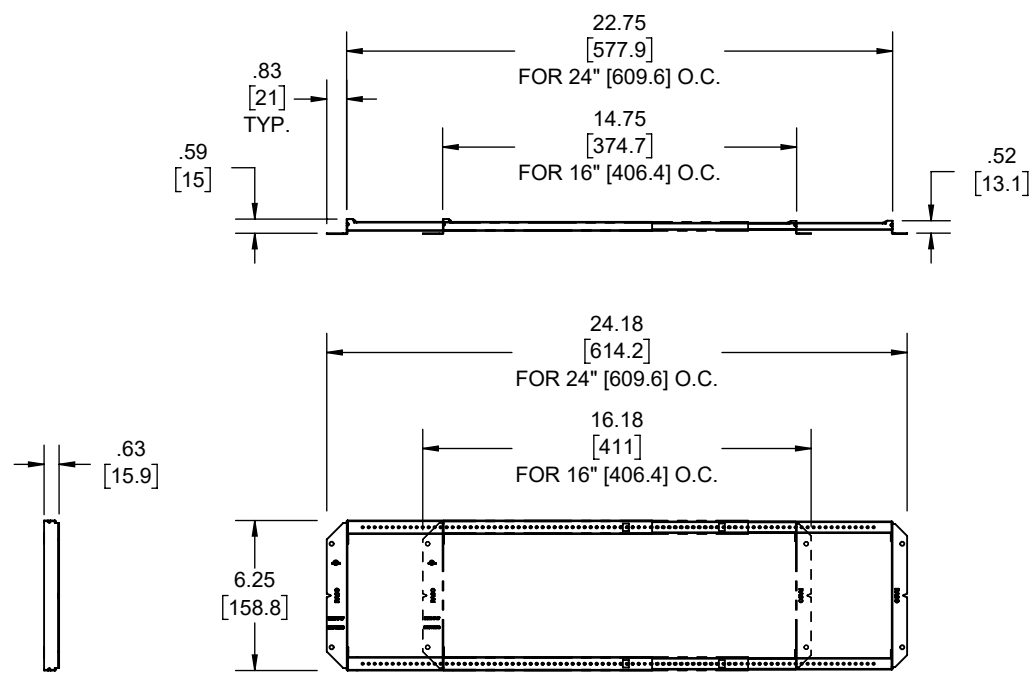


INSTRUCTION SHEET

CENTER BRACKET 9030G FOR USE WITH UNIVERSAL STUD MOUNT BRACKET AND ULTIMATE G SERIES BRACKET.

TO RETAIN CUL LISTING IN CANADA, A #995 OR OTHER
"FAR SIDE SUPPORT BRACKET" MUST BE USED


STEP 1

Slide open center bracket to
desired opening between studs

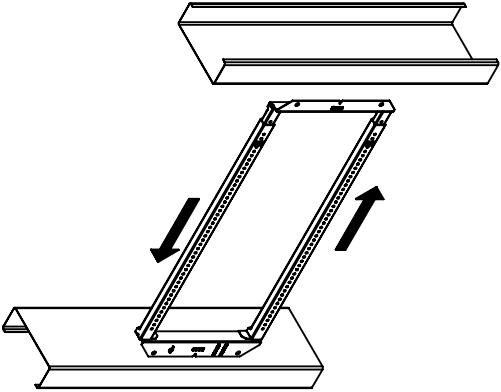


STEP 2

Attach open center bracket to
studs with (4) screws

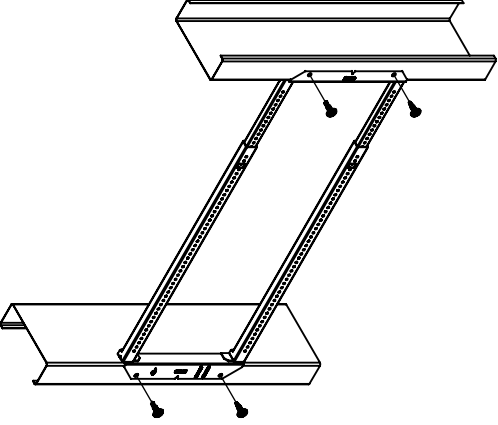

STEP 3

Install box and plate as shown.
(**Box and plate not included**)

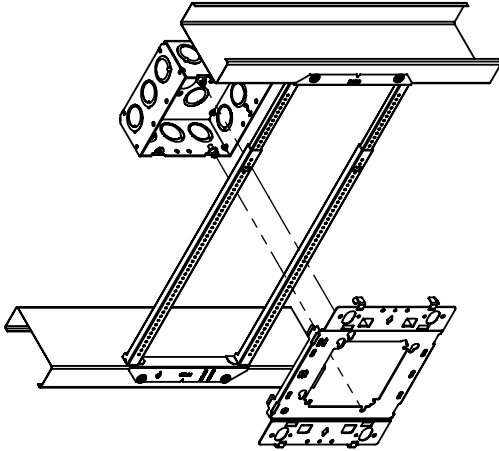

STEP 4

If required, install a far side support
bracket (**Not included**)

