
INSTALLATION INSTRUCTIONS

FIXTURE SERIES: SAE103

MOUNTING TYPE: WALL

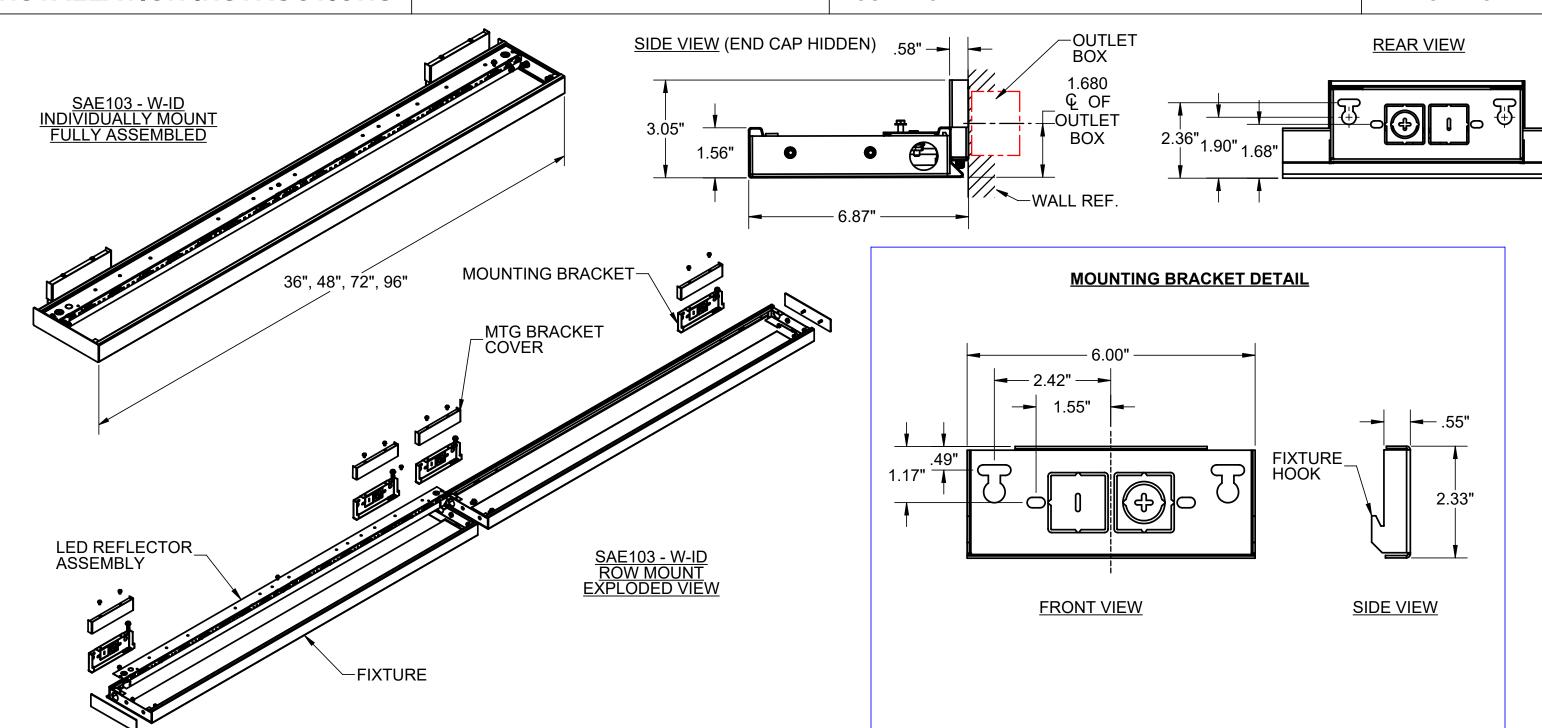

GENERAL NOTES: (READ ALL SHEETS COMPLETELY BEFORE STARTING)

END CAP

- 1. LEAVE PROTECTIVE WRAPPING MATERIAL ON FIXTURE(S) UNTIL START OF INSTALLATION.
- 2. REFER TO VIEWS FOR LOCATIONS OF MOUNTING BRACKETS (SHIPPED SEPARATELY).
- 3. WALL BRACKETS SHOULD BE MOUNTED PRIOR TO INSTALLING FIXTURES. BRACKETS ARE REQUIRED FOR ALL FIXTURE LENGTHS. USE (2) WALL BRACKETS PER FIXTURE.
- 4. FIXTURES ARE PROVIDED WITH FACTORY-INSTALLED BRANCH CIRCUIT WIRING. REFER TO SUPPLEMENTAL INSTRUCTION SHEET 510401 WHEN MAKING CONNECTIONS.
- 5. SAE103-W-I WILL NOT HAVE DOWNLIGHT DIFFUSER OR WINDOW.

	TOOLS REQUIRED	SUPPLIED BY INSTALLER
)	- SCREWDRIVER/DRILL - 11/32" HEX NUT DRIVER	- ANCHOR SCREWS


LITECONTROL

DO NOT MODIFY OR ALTER THIS PRODUCT IN ANY WAY, OR INSTALL IN ANY FASHION WHICH IS CONTRARY TO THE INSTRUCTIONS CONTAINED HEREIN. IF YOU HAVE ANY QUESTIONS REGARDING THIS PRODUCT OR THE INSTALLATION OF IT, PLEASE CALL LITECONTROL ENGINEERING AT 781-294-0100


DRAWING: 510633

REV / DATE: 1 / 2/21/2022


PAGE: 1 OF 4

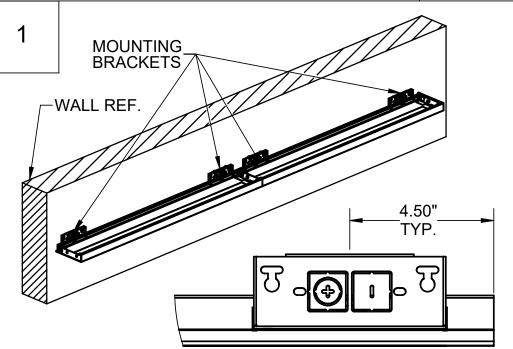

PREPOSITION BRACKETS ON WALL ALONG STRAIGHT LINE AND AT CORRECT DISTANCES FROM EACH OTHER. MARK LOCATIONS OF MOUNTING HOLES.

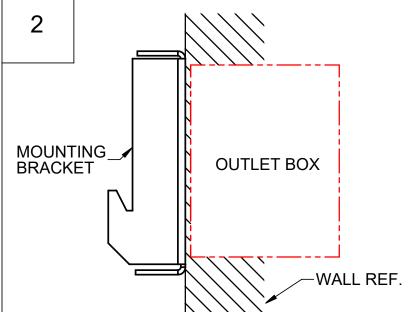


FOR FEED LOCATIONS, ATTACH WALL BRACKET TO OUTLET BOX, USING EITHER A 2" X 4" HANDY BOX OR A 4" OUTLET BOX WITH A PLASTER RING MOUNTED HORIZONTALLY. NOTE OUTLET BOX MUST BE ADEQUATELY ATTACHED TO STRUCTURE FOR SUPPORTING FIXTURE WEIGHT.

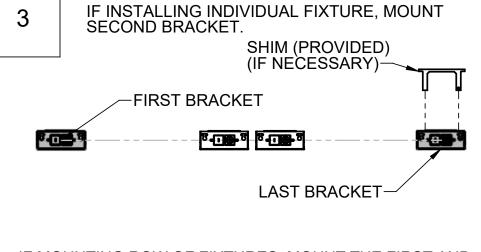


IF MOUNTING ROW OF FIXTURES, MOUNT THE FIRST AND LAST BRACKETS FIRST, THEN MOUNT ALL OTHER BRACKETS BETWEEN THEM. MAKE SURE THAT ALL BRACKETS ARE ALIGNED.


USE CORRECT ANCHORING TO ENSURE THAT FIXTURE WILL NOT PULL AWAY FROM WALL WHEN ATTACHED. IF REQUIRED, USE SHIMS BETWEEN WALL SURFACE AND BACK OF BRACKETS.

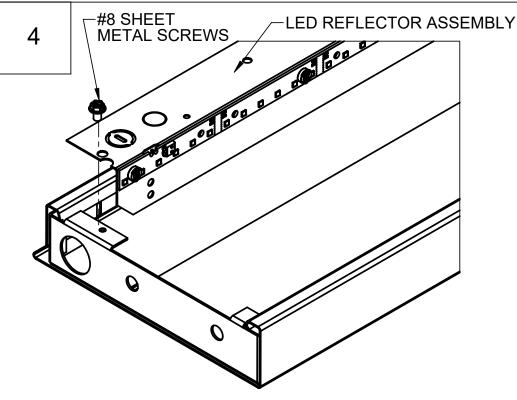

REMOVE LED REFLECTOR ASSEMBLY FROM FIXTURE BY REMOVING #8 SHEET METAL SCREWS.

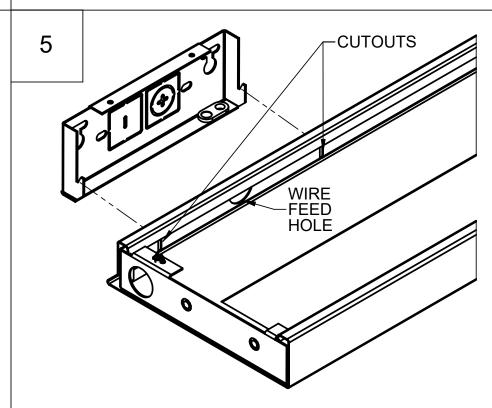

LIFT FIXTURES ONTO WALL BRACKETS THROUGH RECTANGULAR CUTOUTS IN THE HOUSING BACK.

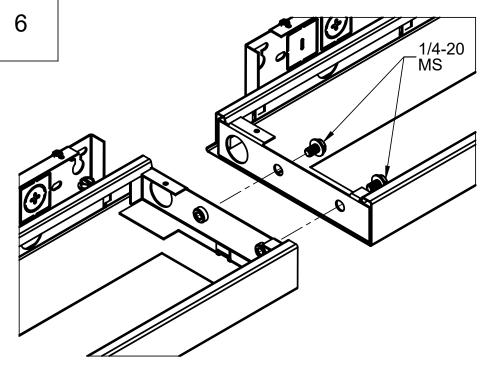

IF INSTALLING ROW OF FIXTURES, BOLT ADJACENT FIXTURES TOGETHER USING (2) 1/4-20 MACHINE SCREWS PROVIDED. REPEAT FOR EACH ADDITIONAL FIXTURE IN ROW.


LITECONTROL


DO NOT MODIFY OR ALTER THIS PRODUCT IN ANY WAY, OR INSTALL IN ANY FASHION WHICH IS CONTRARY TO THE INSTRUCTIONS CONTAINED HEREIN. IF YOU HAVE ANY QUESTIONS REGARDING THIS PRODUCT OR THE INSTALLATION OF IT, PLEASE CALL LITECONTROL ENGINEERING AT 781-294-0100

DRAWING: 510633

REV / DATE: 1 / 2/21/2022

8

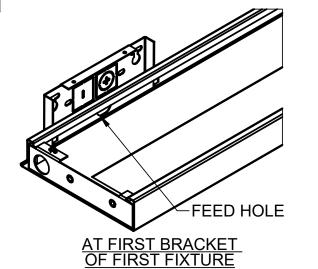


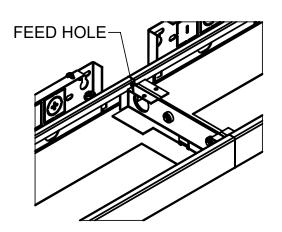

AT FIXTURE JOINTS


MAKE ALL WIRING CONNECTIONS VIA FEED HOLES. FOR ROW, FEED WIRING BETWEEN ADJACENT FIXTURES THROUGH HOLE AT FIXTURE JOINTS. SEE ILLUSTRATIONS.

REATTACH LED REFLECTORS. DO NOT OVERTIGHTEN.

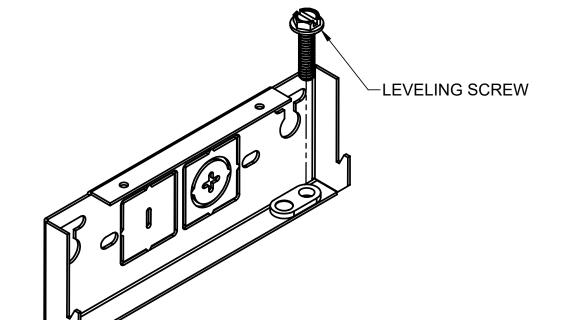

LEVEL THE FIXTURES USING THE 1/4-20 X 1" LONG LEVELING MACHINE SCREWS PROVIDED WITH THE WALL BRACKETS.

9

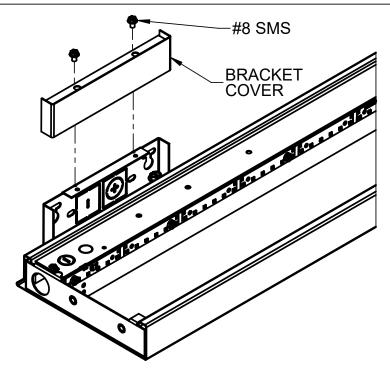

AFTER FIXTURES ARE LEVELED, ATTACH WALL BRACKET COVERS USING #8 SHEET METAL SCREWS PROVIDED. ONCE ATTACHED, THE COVER HOLDS THE FIXTURE ONTO THE WALL BRACKETS.



10


END CAP REMOVAL

11

DRIVER REMOVAL


12

DUST COVER REMOVAL (L1 OPTION)

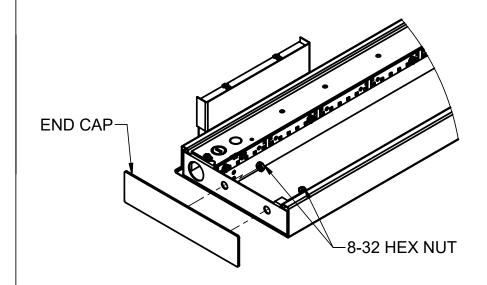


REMOVE END CAPS AT BOTH ENDS OF INDIVIDUAL FIXTURE OR ROW OF FIXTURES BY UNSCREWING (2) 8-32 HEX NUTS.

litecontrol.com

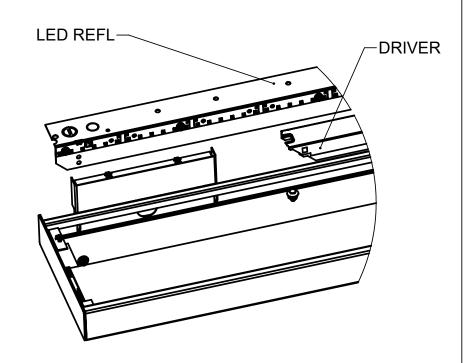

REMOVE REFLECTOR FIXTURE OR ROW OF FIXTURES BY UNSCREWING (2) #8 SHEET METAL SCREWS TO ACCESS DRIVERS FOR MAINTENANCE.

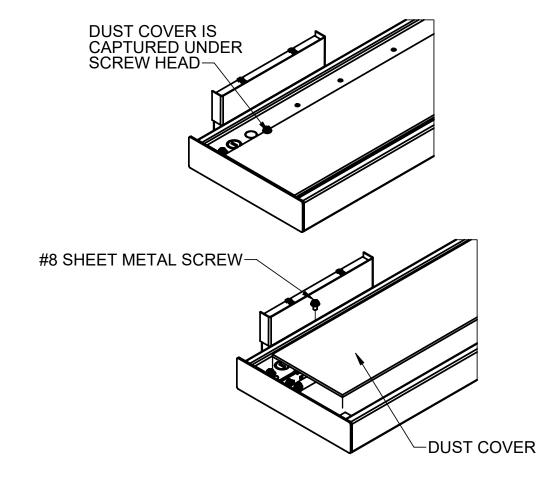

DUST COVER OPTION:

UNSCREW SHEET METAL SCREWS TO REMOVE DUST COVER FROM LED REFLECTOR MODULE ASSEMBLY. REFER TO ILLUSTRATIONS ABOVE.