




Washer, Electrical Equipment Bond


# WEEB<sup>®</sup> WASHER

## INSTALLATION INSTRUCTIONS *For SunModo EZ Helio System Only*


BURNDY recommends that the sufficient details of the installation be submitted to the AHJ for approval before any work is started.

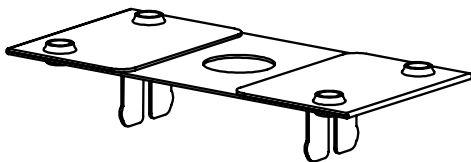


WEEB-UMC

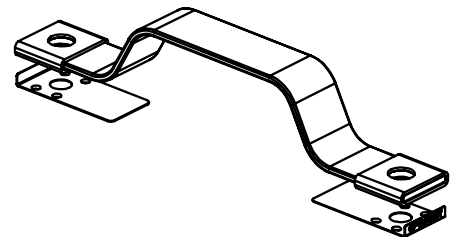

WEEB-BNDJMP 6.7

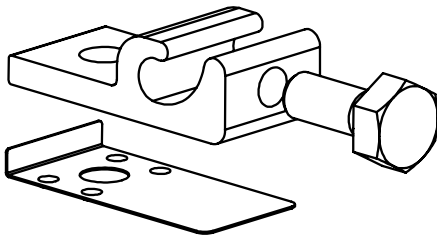

WEEB-LUG-6.7

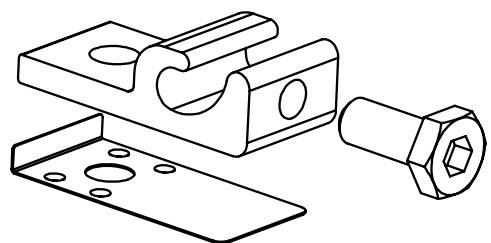

WEEB-LUG-6.7HS



Products are tested to UL 467, CAN/CSA-C22.2 No. 41  
US/ Canadian standards for safety grounding and bonding equipment.




Intertek  
4004188

# WEEB® WASHER COMPATIBILITY

The WEEB® washer family of products can be used to bond anodized aluminum, galvanized steel, steel and other electrically conductive metal structures. All installations shall be in accordance with NEC requirements in the USA and with CSA C22.1 in Canada. The WEEB® washers are for use with modules that have a maximum series fuse rating of less than 25A.

Certain module frames do not have enough structural strength to withstand the force required to embed a WEEB® washer. These frames will deform and therefore not allow sufficient penetration of the WEEB® washer teeth. The general requirements for minimum module frame thickness of "boxed" type module frames are illustrated below. For more information regarding module compatibility, please see the technical documents section of our website.



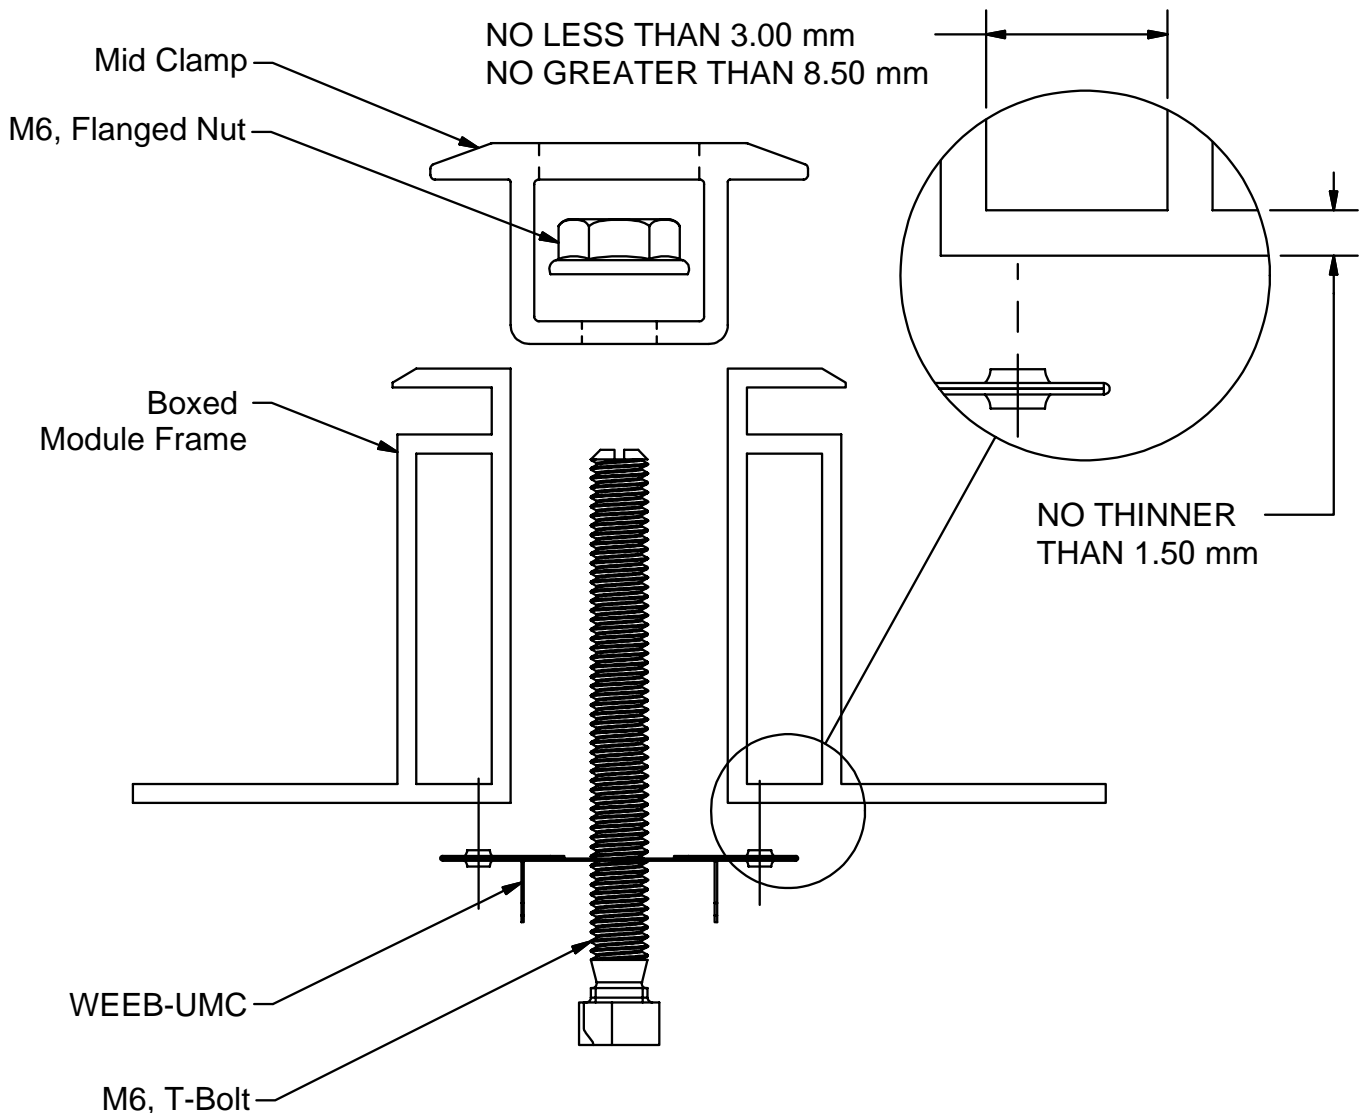


## Important Note:

Inspect each module frame used with a WEEB® device to ensure that the bottom mounting face of the frame is flat, and that there are no hindrances to embedding WEEB® washer teeth. Do not use a module with a frame that prevents the WEEB® washer teeth from embedding fully.


# SYSTEM OVERVIEW

Use WEEB-UMC to bond solar module frames to module mounting rail. Tighten fasteners to 10 ft-lb / 13.5 N-m.

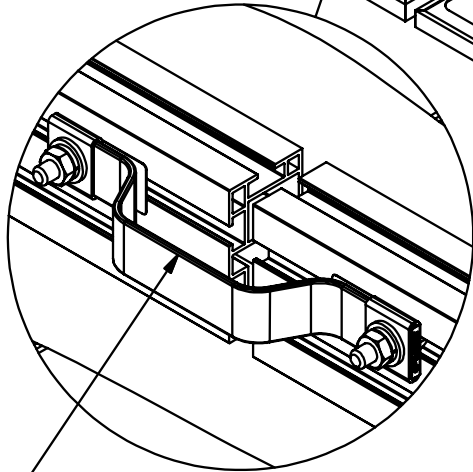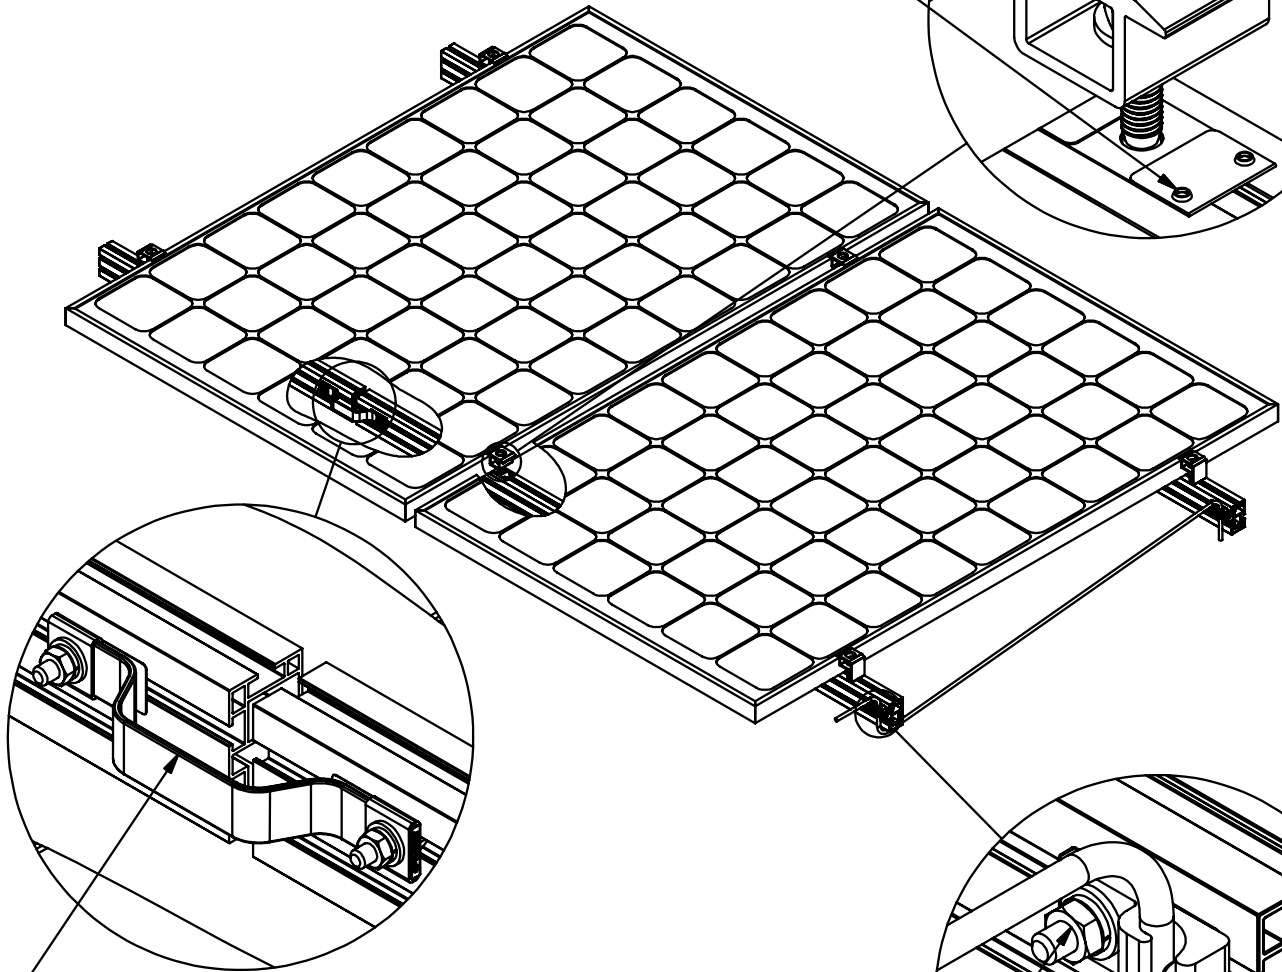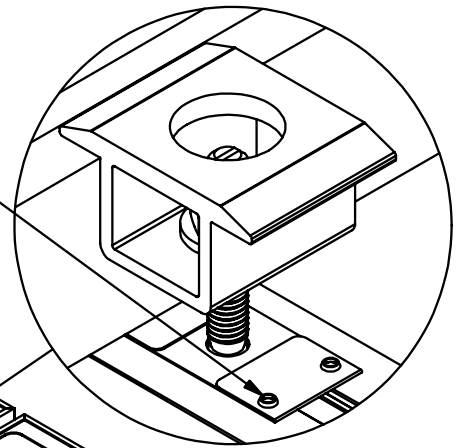

Use WEEB-BNDJMP6.7 to electrically connect mechanically spliced rails. Tighten fasteners to 10 ft-lb / 13.5 N-m.

Use one WEEB-LUG-6.7 assembly per rail to connect system to equipment ground conductor. Tighten fasteners to 10 ft-lb / 13.5 N-m.

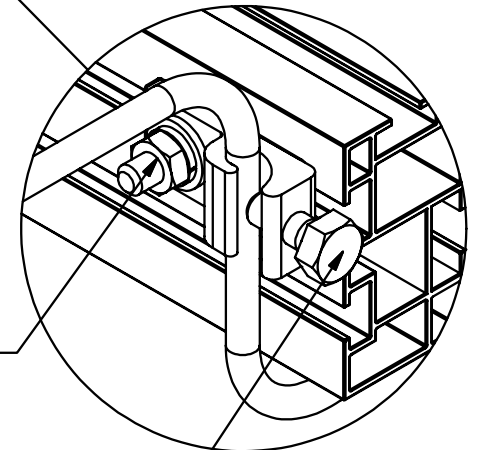


Lay in equipment ground conductor and torque bolt to 5 ft-lb / 6.7 N-m.

## Important notes:

1. Anti-Seize or BURNDY PENETROX™ oxide inhibitor is not required on mounting hardware.
2. Secure PV cables and reliably route cables using Wiley ACC cable clips for proper wire management.
3. The NEC section 690.43 states “Exposed non-current carrying metal parts of module frames, equipment, and conductor enclosures shall be grounded in accordance with 250.134 or 250.136(A) regardless of voltage”.

# WEEB® WASHER LAYOUT

## EVEN NUMBER OF MODULES IN ROW

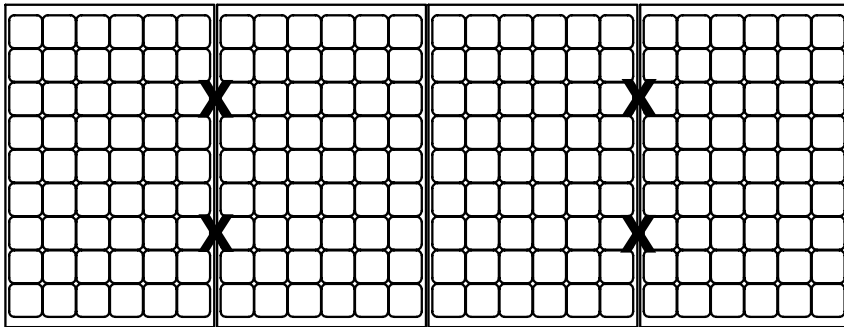


X DENOTES PLACES TO INSTALL WEEB-UMC

$$\text{COLUMN X ROW} = C \times R = 4 \times 1 = 4$$

WEEB-UMC NEEDED = 4

## ODD NUMBER OF MODULES IN ROW

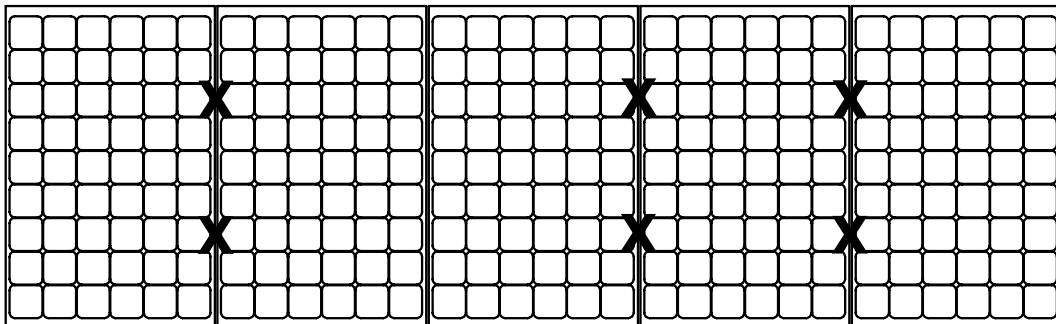

X DENOTES PLACES TO INSTALL WEEB-UMC

$$[\text{COLUMN} + 1] \times \text{ROW} = [C + 1] \times R = [5 + 1] \times 1 = 6$$

WEEB-UMC NEEDED = 6

### Customer Service Department

7 Aviation Park Drive  
Londonderry, NH 03053  
1-800-346-4175  
1-603-647-5299 (International)

### Note:

When replacing a single faulty module, also remove the adjacent module which contacts the same WEEB® washers as the faulty module. This will ensure that there are never ungrounded modules in the array.