



GAI-TRONICS®
A HUBBELL COMPANY

HUBBCOM™ GSC3100/GSC4100

Dual-Port Flush-Mount Smart Controllers

TABLE OF CONTENTS

Confidentiality Notice1

General Information1

Important Safety Instructions.....1

Security Hardware3

Installation3

Flush-Mount Installations 3

Surface Mount Installations..... 4

Wiring 5

 RTU Input/Output..... 5

 RS-485 and External Speaker Connections 6

 Ethernet..... 6

 24 V DC Power..... 7

 Antenna..... 7

Activation.....7

Activation with DHCP..... 7

Activation without DHCP 8

Service and Spare Parts9

Reference Documents10

Specifications10

Approvals.....10



GAI-TRONICS®
A HUBBELL COMPANY

HUBBCOM™ GSC3100/GSC4100

Dual-Port Flush-Mount Smart Controllers

Confidentiality Notice

This manual is provided solely as an installation, operation, and maintenance guide and contains sensitive business and technical information that is confidential and proprietary to GAI-Tronics. GAI-Tronics retains all intellectual property and other rights in or to the information contained herein, and such information may only be used in connection with the operation of your GAI-Tronics product or system. This manual may not be disclosed in any form, in whole or in part, directly or indirectly, to any third party.



General Information

This guide covers the installation of the HUBBCOM Dual-Port Flush-Mount Smart Controller, Models GSC3100 and GSC4100. The Model GSC3100 Smart Controller includes a handset. The Model GSC4100 Smart Controller is designed for hands-free operation and is not equipped with a handset (see Figure 1)). See the GAI-Tronics website at <https://www.gai-tronics.com> for applications, system specifications, warranty information, and the GUDA (GAI-Tronics Universal Device Application).



HUBBCOM smart controllers require activation and configuration when placed into service. Use the GUDA (GAI-Tronics Universal Device Application) software to configure the smart controller for its intended purpose. Pub. 42004-531 provides instructions to obtain, install, and run the GUDA software. Refer to Pub. 42004-551 for information on HUBBCOM smart controller configuration parameters (see the Reference Documents section).

Important Safety Instructions



- **Read, follow, and retain instructions**—All safety and operating instructions should be read and followed before operating the unit. Retain instructions for future reference.
- **Heed warnings**—Adhere to all warnings on the unit and in the operating instructions.
- **Attachments**—Attachments not recommended by the product manufacturer should not be used, as they may cause hazards.
- **Servicing**—Do not attempt to service this unit by yourself. Opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- HUBBCOM Smart Controllers are designed for indoor use only.

 **ATTENTION**  —Install equipment without modification and according to all applicable local, national, and international electrical codes. North America - Consult the National Electrical Code (NFPA 70), Canadian Standards Association (CSA 22.1), and local codes for specific requirements regarding your installation. Class 2 circuit wiring must be performed in accordance with the NEC.



These enclosures must be installed by trained, qualified and competent personnel. Installation must comply with state and national regulations, as well as safety practices for this type of equipment.

 **WARNING**  —Use only 24 V dc power supplies that conform to UL/CSA/CE Class II, Double Insulated supplies with over voltage and short circuit protection. Use only a dc source with a 50-watt maximum output or fuse the supply with a 2-amp fuse. EMI standards to Class B.



- **Onderhoud**—Probeer dit apparaat niet zelf te repareren. Het openen of verwijderen van afdekkingen kan u blootstellen aan gevaarlijke spanning of andere gevaren. Laat alle onderhoud over aan bevoegd onderhoudspersoneel.
- HUBBCOM Smart Controllers zijn alleen bedoeld voor gebruik binnenshuis.

 **AANDACHT**  —Gebruik alleen 24 VDC-voedingen die voldoen aan UL / CSA / CE Klasse II, dubbel geïsoleerde voedingen met overspanning en kortsluitbeveiliging. Gebruik alleen een DC-bron met een maximale output van 50 W of fuseer de voeding met een 2-ampère zekering. EMI-normen voor klasse B.



- **Dépannage**—N'essayez pas de réparer cet appareil vous-même. Ouvrir ou retirer les capots peut vous exposer à des tensions dangereuses ou à d'autres dangers. Confiez toute réparation à un personnel qualifié.
- Les contrôleurs intelligents HUBBCOM sont conçus pour une utilisation en intérieur uniquement.

 **ATTENTION**  —Utilisez uniquement des alimentations 24 Vcc conformes à UL / CSA / CE Classe II, des alimentations à double isolation avec protection contre les surtensions et les courts-circuits. Utilisez uniquement une source cc avec une sortie maximale de 50 watts ou fusionnez l'alimentation avec un fusible de 2 ampères. Normes EMI à la classe B.

- **Manutenzione**—non tentare di riparare l'unità da soli. L'apertura o la rimozione dei coperchi potrebbero esporre a tensioni pericolose o altri rischi. Rivolgersi a personale qualificato per l'assistenza.
- Gli HUBBCOM Smart Controller sono progettati esclusivamente per uso interno.

 **AVVERTIMENTO**  —Utilizzare solo alimentatori a 24 V cc conformi a UL / CSA / CE Classe II, alimentatori a doppio isolamento con protezione da sovratensione e cortocircuito. Utilizzare solo una fonte di corrente continua con un'uscita massima di 50 watt o collegare l'alimentazione con un fusibile da 2 A. Standard EMI per la classe B.

- **Mantenimiento**—no intente reparar esta unidad por sí mismo. Abrir o quitar las cubiertas puede exponerlo a un voltaje peligroso u otros peligros. Remita todo el servicio a personal de servicio calificado.
- Los controladores inteligentes HUBBCOM están diseñados para uso en interiores solamente.

 **ADVERTENCIA**  —Utilice solo fuentes de alimentación de 24 V cc que cumplan con UL / CSA / CE Clase II, fuentes con doble aislamiento con sobretensión y protección contra cortocircuitos. Utilice solo una fuente de CC con una salida máxima de 50 vatios o fusione la fuente con un fusible de 2 amperios. Estándares EMI a Clase B.

Security Hardware

The HUBBCOM smart controllers described in this manual are vandal resistant. Security screws attach the front panel of each smart controller to its enclosure. Use a GAI-Tronics Model 233-001 security screwdriver or Torx T-25 security head tip (sold separately) to install the telephone.

Installation

Flush mount HUBBCOM smart controllers in a wall or stanchion using the included backbox or surface mount them using a GAI-Tronics Model 236 Series or Model 238-001 Stainless-Steel Surface-Mount Enclosure (sold separately).

NOTE: HUBBCOM devices require access to an SNTP (simple network time protocol) server.

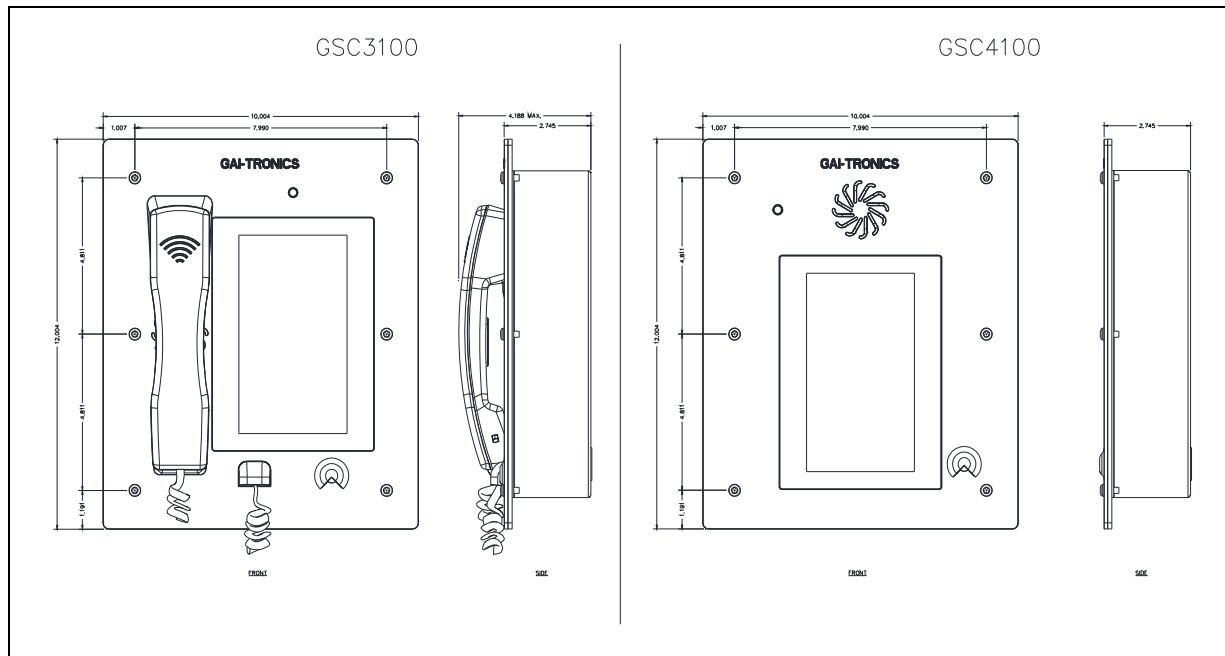


Figure 1. HUBBCOM Model GSC3100 and Model GSC4100 Smart Controllers

Flush-Mount Installations

Use the supplied backbox when mounting the HUBBCOM smart controller in a GAI-Tronics Model 234 Series Tower and for flush-mount installations:

1. Remove the backbox from the smart controller by removing the six #10-32 security screws and washers holding them together.
2. Remove a tapered plug from one of the rear cable entry holes in the backbox.
3. Install a cable strain relief cable fitting to the box.
4. Feed the Ethernet cable and all additional cables through the cable fitting.
5. Mount the backbox to the structure using appropriate hardware (see [Figure 3](#) for cutout dimensions).
6. Complete all necessary cable terminations (see the [Wiring](#) section).
7. Secure the smart controller to the backbox mounting flanges using the six security screws with washers removed in Step 1.
8. Tighten the screws to 10–12 in·lb.

Surface Mount Installations

Use a GAI-Tronics Model 236 Series or Model 238-001 Enclosure to surface mount the HUBBCOM smart controller:

1. Refer to Pub. 42004-285 for the Model 236 Series or Pub. 42004-434 for the Model 238-001 backboxes to install the surface-mount enclosure (see the Reference Documents section). GAI-Tronics publications are located on the GAI-Tronics website at <https://www.gai-tronics.com>.
2. Remove and discard the backbox installed on the smart controller by removing the six security screws and washers. Retain the six security screws and washers.
3. Complete all necessary cable terminations (see the Wiring section).
4. Secure the smart controller to the surface-mount enclosure using the six security screws and washers removed in Step 2.
5. Tighten the screws to 10–12 in·lb.

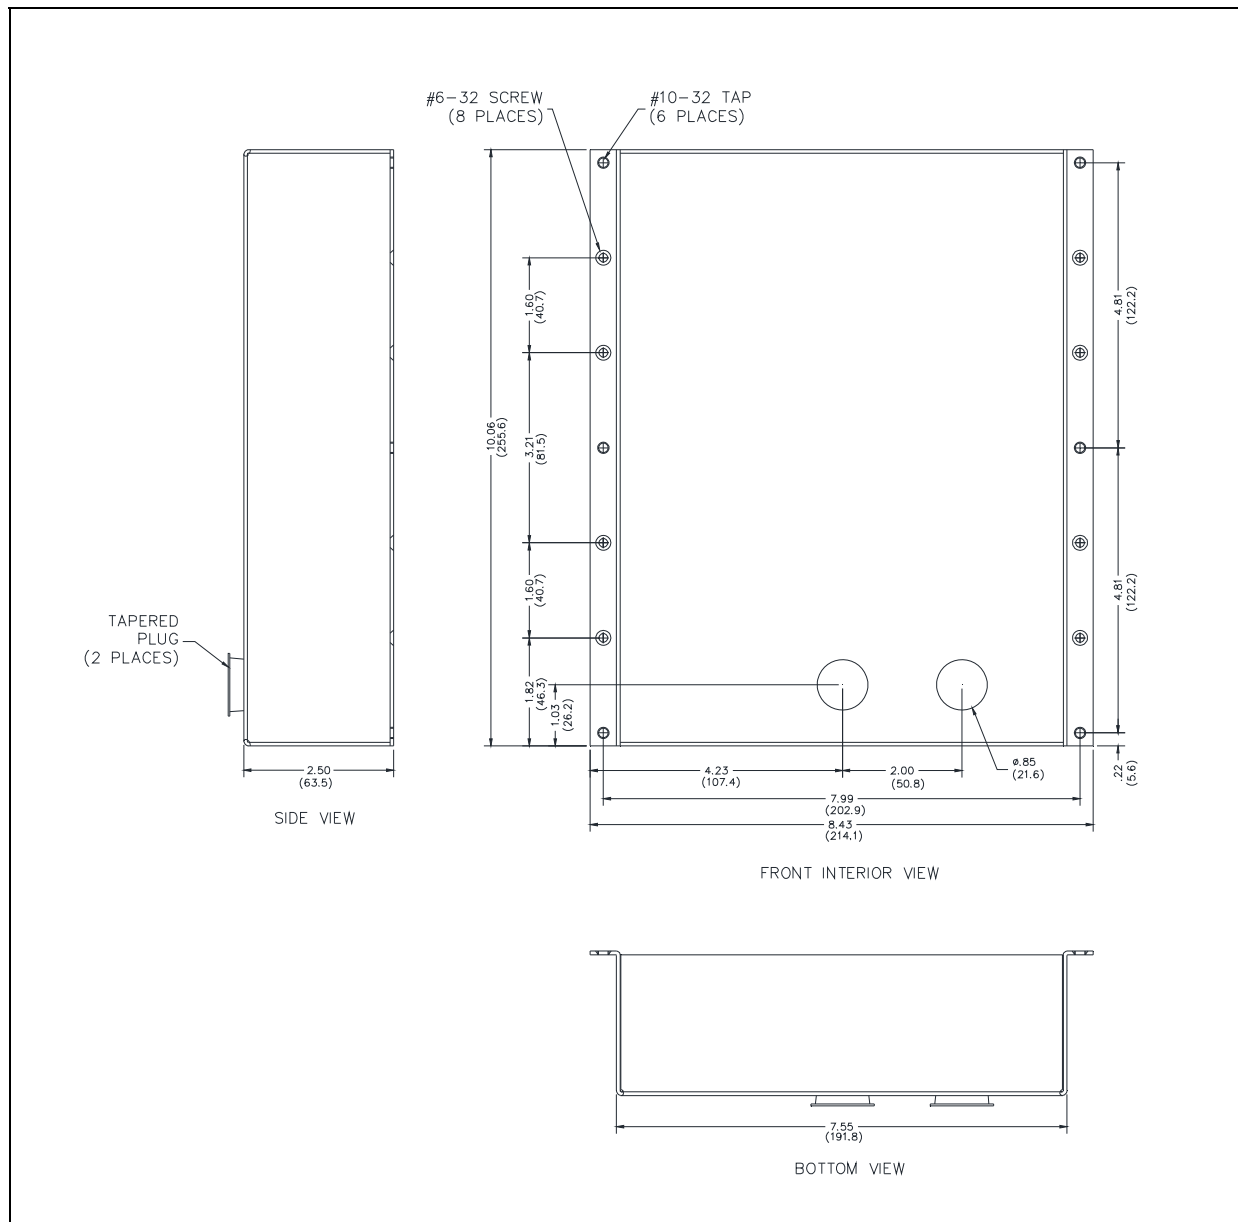


Figure 2. Flush-Mount Smart Controller Back Box Mounting Details

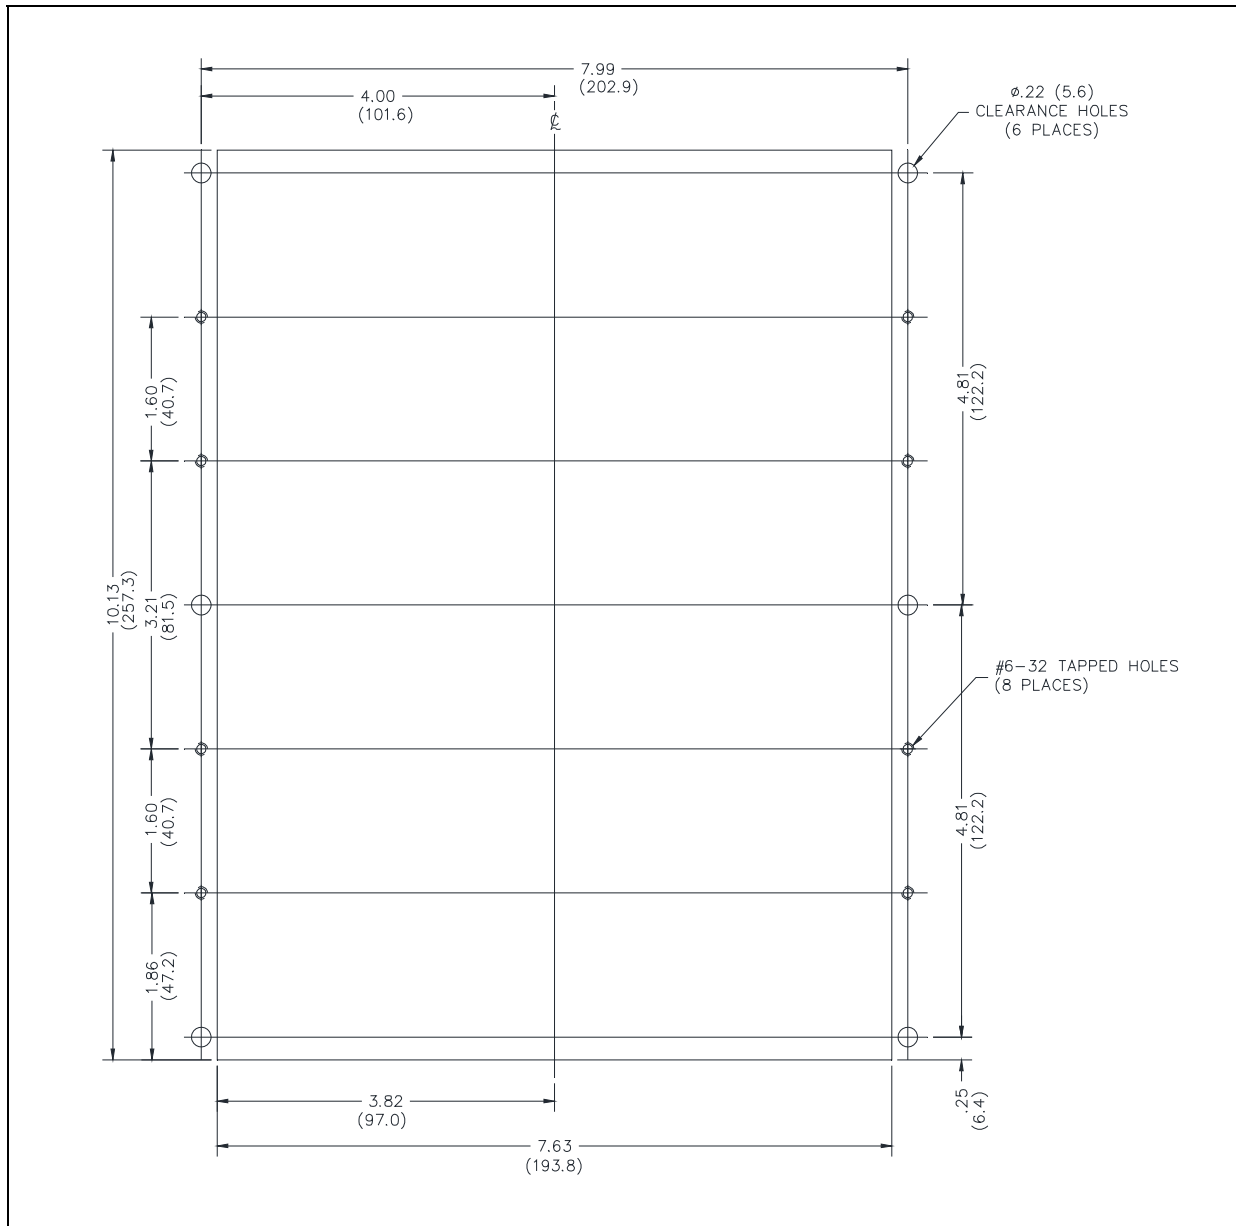


Figure 3. Flush-Mount Cutout Details

Wiring

HUBBCOM smart controllers have quick release terminal blocks that accept 18–24 AWG wires. Release wires from the terminal block by pressing the quick release button above the terminal.

NOTE: Two clamp on ferrite cores are supplied with the smart controller. Double wrap all wires terminating to terminal blocks TB1 and/or TB2 around a ferrite core. Install the clamp on ferrite cores as close as possible to the terminal blocks.

RTU Input/Output

Terminal block TB1 is for optional RTU I/O (Remote Terminal Unit Input/Output) functionality. Complete the following steps to terminate the RTU I/O cables:

1. Install appropriately sized ferrules onto the wire ends.

2. Install a clamp on ferrite core around all wires (double wrap) terminating to TB1 as close as possible to the terminal block.
3. Insert each wire into the correct quick release terminal (see [Table 1](#)).

Table 1. Terminal Block TB1—RTU I/O

Purpose	Pin	Label
RTU Input One Ground	1	GND
RTU Input One	2	IN1
RTU Input Two Ground	3	GND
RTU Input Two	4	IN2
RTU Output 1 +	5	OUT1+
RTU Output 1 –	6	OUT1(-)
RTU Output 2 –	7	OUT2(-)
RTU Output 2 +	8	OUT2+

RS-485 and External Speaker Connections

Terminal block TB2 is for optional RS-485 and external speaker connections. Complete the following steps to terminate the RS-485 and/or external speaker connections:

NOTE: Smart controllers with external speakers require external 24 V dc power.

1. Install appropriately sized ferrules onto the wire ends.
2. Install a clamp on ferrite core around all wires (double wrap) terminating to TB2 as close as possible to the terminal block.
3. Insert each wire into the correct quick release terminal (see [Table 2](#)).

Table 2. Terminal Block TB2—RS-485 and External Speaker

Purpose	Pin	Label
RS485 Ground	1	GND
RS485 B	2	RS485B
RS485 A	3	RS485A
External Speaker –	4	SPKR–
External Speaker +	5	SPKR+

Ethernet

HUBBCOM smart controllers have dual Ethernet ports. Use the RJ45 jack furthest from the USB port to connect to the Ethernet network. The RJ45 jack closest to the USB port can be used to connect a PC.

1. Plug the Ethernet cable from the network into the RJ45 jack furthest from the USB port.
2. Install a clamp on ferrite core as close as possible to the RJ45 plug.
3. (Optional) Plug an Ethernet cable from a PC into the remaining RJ45 jack.

24 V DC Power

Use external 24 V dc power in place of POE (*optional*) or for smart controllers with external speaker hook-ups (*required*). Complete the following steps to terminate the 24 V dc power source to the smart controller:

1. Install appropriately sized ferrules onto the wire ends.
2. Insert each wire into the correct quick release terminal (see [Table 3](#)).

Table 3. Terminal Block TB3—24 V DC Power

Purpose	Pin	Label
24 V dc Positive	TB3-1	+24V
Ground	TB3-2	GND

Antenna

Use the provided SMA (Sub-Miniature connector A) coaxial connector to connect an antenna.

NOTE: Connecting a HUBBCOM smart controller via WiFi disables the secondary Ethernet port.

NOTE: Use a customer-supplied antenna in flush-mount installations. FCC, IC, ETSI/CE, and TELEC Certified with PCB, Dipole, Chip, and PIFA Antennae. GAI-Tronics Kit No. 12840-001 (purchased separately) meets the antenna requirements.

Activation

HUBBCOM smart controllers require activation on first power-on and after installing any purchased upgrades. Activate a smart controller with or without the presence of a DHCP server.

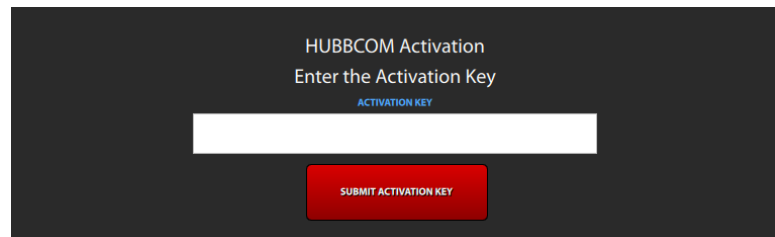


Figure 4. HUBBCOM smart controller Activation Screen

The GUDA is available on GAI-Tronics' website at <https://www.gai-tronics.com>. Refer to Pub. 42004-531 for information on using the GUDA software. Refer to Pub. 42004-551 for information on HUBBCOM smart controller parameters (see the [Reference Documents](#) section).

Activation with DHCP

1. Complete all installation steps for the HUBBCOM smart controller.
2. Apply power to the HUBBCOM smart controller.

The HUBBCOM smart controller takes 40–50 seconds to boot to the device activation screen (see [Figure 4](#)). The screen may flicker several times during boot-up.
3. Touch the screen in the ACTIVATION KEY field to display the onscreen keyboard.
4. Enter the device key provided on the smart controller's activation label (see [Figure 5](#) and [Figure 6](#)).
5. Press the SUBMIT ACTIVATION KEY button on the screen (see [Figure 6](#)).

The HUBBCOM smart controller will reboot to activate. The smart controller takes 40–50 seconds to reboot before the device configuration notification screen displays (see Figure 7). The screen may flicker several times during boot-up.

- Use the GUDA to complete the configuration of the HUBBCOM smart controller.



Figure 5. Device Activation Label

NOTE: Enter additional station parameters while

activating the smart controller to save time. The smart controller accepts and sets all entered parameters regardless of correct activation code entry. Changing the network parameters of a HUBBCOM smart controller prevents the PC from connecting to the smart controller until the PC's IP address is on the same subnet as that smart controller.

- Connect additional HUBBCOM smart controllers to the network and repeat the procedure to activate and configure them.

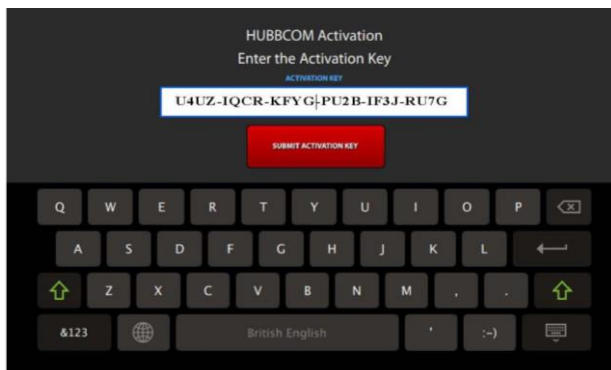


Figure 6. Device License Key Entered

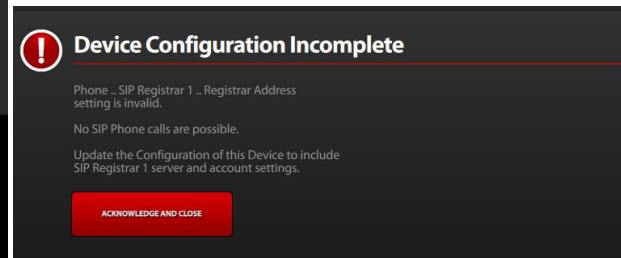


Figure 7. Activation Complete

Activation without DHCP

Activate a HUBBCOM smart controller on a network without a DHCP server as follows:

- Connect the HUBBCOM smart controller to the network.
- Apply power to the smart controller.
 - The smart controller displays the HUBBCOM screen but does not continue to the activation screen.
 - The smart controller assigns itself an APIPA (automatic private IP address) after approximately one minute.
- Configure a PC, with the GUDA installed, for DHCP, or manually assign a static IP address in the APIPA range.
 - A PC configured for DHCP will assign itself an APIPA after approximately one to two minutes.
 - A PC configured with a static IP address in the APIPA range will boot normally.
- Run the GUDA software.

5. Select the PC's APIPA assigned network interface from the **SELECT NETWORK INTERFACE** dropdown list.
6. Click the **FIND DEVICES** button to perform a device discovery in the GUDA.
An **ICON** for the new HUBBCOM smart controller appears when the PC can connect to it.
7. Click on the **ICON** for the HUBBCOM smart controller.
8. Click the **CONNECT AND CONFIGURE** button for the HUBBCOM smart controller.
9. Login:
 - Username: *gai-tronics*
 - Password: *pageparty*
10. Create a new username and password.
11. Login to the HUBBCOM smart controller with the new username and password.
12. Scroll down in the left pane and click on **ACTIVATION**.
13. Enter the smart controller's activation code on the activation screen.
14. Click the **APPLY** button to confirm the activation code.
A **REBOOT** button appears next to the **APPLY** button.
15. Click **REBOOT** and confirm it.
The smart controller will reboot and will display the HUBBCOM splash screen again.
16. Verify the smart controller activates and the model number is correct
 1. Click the **Menu** button.
 2. Click the **Settings** button.
 - The model is shown on the left side above the volume controls.
 - The model will show **NOT SPECIFIED** if the smart controller is not activated.
17. Use the GUDA to complete the configuration of the HUBBCOM smart controller.
NOTE: Enter additional station parameters while activating the smart controller to save time. The smart controller accepts and sets all entered parameters regardless of correct activation code entry. Changing the network parameters of a HUBBCOM smart controller prevents the PC from connecting to the smart controller until the PC's IP address is on the same subnet as that smart controller.
18. Connect additional HUBBCOM smart controllers to the network and repeat the procedure to activate and configure them.

Service and Spare Parts

Contact a regional service center for assistance if the equipment requires service or spare parts. A return authorization number (RA#) will be issued if service is required. Ship equipment prepaid to GAI-Tronics with an RA# and a purchase order number. Repair or a replacement is made in accordance with GAI-Tronics' warranty policy if the equipment is under warranty. Please include a written explanation of all defects to assist our technicians in their troubleshooting efforts. Call 800-492-1212 inside the USA or 610-777-1374 outside the USA for help with identifying the Regional Service Center closest to you.

Reference Documents

GAI-Tronics publications are located on the GAI-Tronics website at <https://www/gai-tronics.com>.

GAI-Tronics Universal Device Application	42004-531
HUBBCOM Device Configuration Guide.....	42004-551
Model 236-001 Series Surface-Mount Telephone Enclosures.....	42004-285
238-001 Series Stainless Steel Surface-Mount Enclosures.....	42004-434

Specifications

Wi-Fi operating frequency range	2.412–2.462 GHz
Temperature Range.....	32–122 °F (0–50 °C)

Approvals

Compliance to Standard

CE

EMC emissions to Class B..... EN55032/FCC Part15B/ICES-003

Immunity..... EN55035

Assessment risk of exposure..... EN62311

Product Safety Assessment..... UL/IEC62368-1

Contains FCC ID: Z64-WL18DBMOD and IC: 4511-WL18DBMOD

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- reorient or relocate the receiving antenna.
- increase the separation between the equipment and receiver.
- connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- consult the dealer or an experienced radio/tv technician for help.

Warranty

Equipment. GAI-Tronics warrants for a period of one (1) year from the date of shipment, that any GAI-Tronics equipment supplied hereunder shall be free of defects in material and workmanship, shall comply with the then-current product specifications and product literature, and if applicable, shall be fit for the purpose specified in the agreed upon quotation or proposal document. If (a) Seller's goods prove to be defective in workmanship and/or material under normal and proper usage, or unfit for the purpose specified and agreed upon, and (b) Buyer's claim is made within the warranty period set forth above, Buyer may return such goods to GAI-Tronics nearest depot repair facility, freight prepaid, at which time they will be repaired or replaced, at Seller's option, without charge to Buyer. Repair or replacement shall be Buyer's sole and exclusive remedy. The warranty period on any repaired or replacement equipment shall be the greater of the ninety (90) day repair warranty or one (1) year from the date the original equipment was shipped. In no event shall GAI-Tronics warranty obligations with respect to equipment exceed 100% of the total cost of the equipment supplied hereunder. Buyer may also be entitled to the manufacturer's warranty on any third-party goods supplied by GAI-Tronics hereunder. The applicability of any such third-party warranty will be determined by GAI-Tronics.

Services. Any services GAI-Tronics provides hereunder, whether directly or through subcontractors, shall be performed in accordance with the standard of care with which such services are normally provided in the industry. If the services fail to meet the applicable industry standard, GAI-Tronics will re-perform such services at no cost to buyer to correct said deficiency to Company's satisfaction provided any and all issues are identified prior to the demobilization of the Contractor's personnel from the work site. Re-performance of services shall be Buyer's sole and exclusive remedy, and in no event shall GAI-Tronics warranty obligations with respect to services exceed 100% of the total cost of the services provided hereunder.

Warranty Periods. Every claim by Buyer alleging a defect in the goods and/or services provided hereunder shall be deemed waived unless such claim is made in writing within the applicable warranty periods as set forth above. Provided, however, that if the defect complained of is latent and not discoverable within the above warranty periods, every claim arising on account of such latent defect shall be deemed waived unless it is made in writing within a reasonable time after such latent defect is or should have been discovered by Buyer.

Limitations / Exclusions. The warranties herein shall not apply to, and GAI-Tronics shall not be responsible for, any damage to the goods or failure of the services supplied hereunder, to the extent caused by Buyer's neglect, failure to follow operational and maintenance procedures provided with the equipment, or the use of technicians not specifically authorized by GAI-Tronics to maintain or service the equipment. **THE WARRANTIES AND REMEDIES CONTAINED HEREIN ARE IN LIEU OF AND EXCLUDE ALL OTHER WARRANTIES AND REMEDIES, WHETHER EXPRESS OR IMPLIED BY OPERATION OF LAW OR OTHERWISE, INCLUDING ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.**

Return Policy

If the equipment requires service, contact your Regional Service Center for a return authorization number (RA#). Equipment should be shipped prepaid to GAI-Tronics with a return authorization number and a purchase order number. If the equipment is under warranty, repairs or a replacement will be made in accordance with the warranty policy set forth above. Please include a written explanation of all defects to assist our technicians in their troubleshooting efforts.

Call 800-492-1212 (inside the USA) or 610-777-1374 (outside the USA) for help identifying the Regional Service Center closest to you.