



OBSIDIAN™

Emergency Lighting



OBSIDIAN


The Obsidian Message Sign provides a reliable method to highlight critical messaging. The high contrast face panel clearly communicates the message in visible red or green letters when the sign is energized. In the Off condition, the face becomes black without any message bleed through - eliminating any confusion. A variety of standard message panels are available with custom messages available upon request.



FEATURES

- The message remains invisible until the sign is energized - enhancing communication of the intended warning.
- The LED panel is designed to provide bright and uniform illumination across the panel face.
- A variety of standard messages can be selected with either red or green letters. Custom messages are available upon request.
- Extruded aluminum body with die cast corners available in either a white or black finish.
- Obsidian is provided ready for surface-, ceiling-, end- or wall-mounting with included canopy accessory. Recessed mounting available with optional mounting kit.
- LED life-cycle exceeding 10 years.

DIMENSIONS

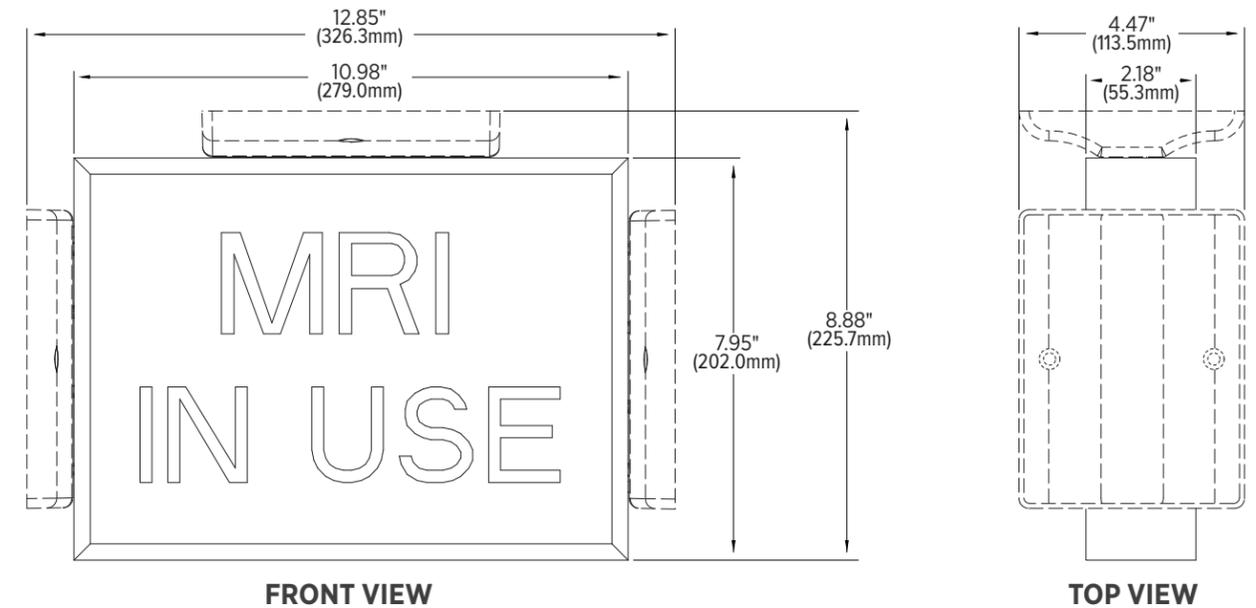

	Power Consumption			
	Red Panel		Green Panel	
	120VAC	277VAC	120VAC	277VAC
Hz.	60	60	60	60
Amps	0.163	0.091	0.17	0.097
Watts	11	11	12	12.33

ORDERING GUIDE

EXAMPLE: OBN-U-S-R-B-NP (OBSIDIAN SIGN HOUSING)
EXAMPLE: OBN-KIT DIFF SW28 (MESSAGE PANEL FOR "MRI IN USE")

MODEL	MOUNTING	FACE	LETTER COLOR	FINISH	PANEL	AVAILABLE MESSAGE PANELS
OBN Obsidian Message Sign	U Universal for Surface-, Ceiling-, End- or Wall-Mounting	S Single-face	R Red G Green	W White housing B Black housing	NP No Panel (Signs are shipped without a specific message. Order the desired message from the list below as a separate line item.)	OBN-KIT DIFF SW21 Beam On OBN-KIT DIFF SW23 Cat Scan in Use OBN-KIT DIFF SW6 Caution OBN-KIT DIFF SW16 Men OBN-KIT DIFF SW17 Men (with graphic) OBN-KIT DIFF SW28 MRI IN USE OBN-KIT DIFF SW26 MRI ROOM IN USE OBN-KIT DIFF SW8 TEST IN PROGRESS OBN-KIT DIFF SW20 WARNING LASER ON OBN-KIT DIFF SW18 WOMEN OBN-KIT DIFF SW19 WOMEN (with graphic) OBN-KIT DIFF SW4 X-RAY IN USE
ACCESSORIES						
OBN-RMK	Recessed Mounting Kit (includes mounting bracket and trim plate with aluminum paint finish)					

Note: Custom panel messages are available. Consult factory for further details.



Healthcare
Solutions

701 Millennium Blvd.
Greenville, SC 29607
hubbellighting.com

ALERA LIGHTING

ARCHITECTURAL AREA LIGHTING

BEACON PRODUCTS

COLUMBIA LIGHTING

COMPASS

DUAL-LITE

HEALTHCARE SOLUTIONS

HUBBELL CONTROL SOLUTIONS

HUBBELL INDUSTRIAL LIGHTING

HUBBELL OUTDOOR LIGHTING

KIM LIGHTING

KURT VERSEN

LITECONTROL

PRESCOLITE

WHITEWAY



701 Millennium Blvd. Greenville, SC 29607
Tel 864.678.1000
www.hubbellighting.com

HHS0179 Revised: 10/03

Copyright © 2017 Hubbell Lighting, Inc. All rights reserved. Please refer to
online specifications for most up-to-date content as specifications are subject to change without notice.