
ASU ni betnin9

Workplace Solutions Phone: 920-387-4120 02053 IW , 9llivysM 600 South Clark St. HUBBELL .D.O (mm9)"8\£ undf For use on Wire Rope (mmč)"ðľ\č mont For Hose or Round Cable from 0.95 to 1.25" OD Festoon Trolley **90-LYT** # Ishom **Contents: One model #FRT-06** Trolley for round cable or hose from 0.95 to 1.25" OD Use multiple trolleys for long festoon runs. Provide low cost, user friendly festoon systems. **8 MODELS AVAILABLE** #WRS-01 #WRS-02 #FRT-04 #FRT-24 **#FRT-05** #FRT-25 #FFT-08 Trolley Trolley with Trolley for Trolley for Trolley for Trolley for Trolley for flat round cable with tool tool hook round cable two round two round cable to hook and hose or hose, 0.3" cables or or hose, 0.6" cables or 2.1" wide. connector to 0.6" OD. hoses, 0.3" to 0.94" OD. hoses. 0.6" to 0.6" OD. to 0.94" OD.

Products to make your workplace more efficient and safe. Ask for FREE CATALOG.


TROLLEY INSTALLATION •



Trolleys fit wire rope up to and including 0.375"(9mm) O.D.

To install trolley - Place top section in position on wire rope. Slide sections

together until they snap (lock) in place. NOTE: Sections may be assembled in only one way. Slide "un-blocked" end into "un-blocked" end. Do not force.

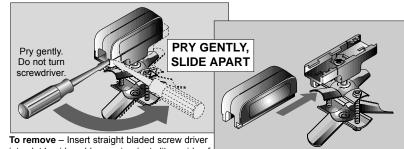

into slot beside cable opening (not slit on side of trolley) and pry gently as shown above. Do not turn screwdriver. Slide Apart

